# SIEMENS



# ALBATROS RVA63.280, RVA53.280 Boiler and Heating Circuit Controllers Basic Documentation

Edition 1.3 Controller series B CE1P2374E 19.04.2001

Siemens Building Technologies Landis & Staefa Division

# Contents

	Summary	8
1.1	Brief description	8
1.2	Features	8
1.3	Range of products	10
1.4	Field of use	11
1.5	Product liability	11
2	Handling	12
2.1	Installation	12
2.1.1	Regulations for installation	12
2.1.2	Mounting location	
2.1.3	Mounting procedure	
2.1.4	Required cut-out	
2.1.5	Orientation	14
2.2	Electrical installation	
2.2.1	Regulations for installation	15
2.2.2	wiring	15
2.3	Commissioning	17
2.3.1	Functional checks	17
2.4	Parameter settings for the end-user	
2.4.1	Overview of end-user parameters	
2.5	Parameter settings for the heating engineer	
2.5.1	Overview of heating engineer parameters	
2.6	Parameter settings for the OEM	
2.6.1	Overview of OEM parameters	
2.7	Operation	
2.7.1	Operating elements	
2.8	Operational faults	34
1	Description of end-user settings	36
User int	erface	36
1.1	Operating modes of heating circuit	
1.1 1.2	Operating modes of heating circuit Operating mode of d.h.w. heating	
1.2	Operating mode of d.h.w. heating	
1.2 1.3	Operating mode of d.h.w. heating Nominal room temperature setpoint	
1.2 1.3 1.3.1	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit	
1.2 1.3 1.3.1 1.4	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button	36 38 39 40 41 42
1.2 1.3 1.3.1 1.4 1.5 1.6	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation	36 38 39 40 41 42 43
1.2 1.3 1.3.1 1.4 1.5 1.6	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation	36 38 39 40 41 42 43 43
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day	36 38 39 40 41 42 43 43 44
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation	36 38 39 40 41 42 43 43 44 44
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7 1.8	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day Weekday Date (day, month)	36 38 39 40 41 42 43 43 44 44 44 44
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7 1.8 1.9 1.10	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day Weekday Date (day, month) Year	36 38 39 40 41 42 43 43 44 44 44 44 45 45
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7 1.8 1.9 1.10 Time sv	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day Weekday Date (day, month) Year	36 38 39 40 41 42 43 43 44 44 44 44 44 45 45 45 46
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7 1.8 1.9 1.10 Time sv 1.11	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day Weekday Date (day, month) Year vitch programs 1 and 2 Pre-selection of weekday: for time switch programs 1 and 2	36 38 39 40 41 42 43 43 44 44 44 44 45 45 45 46 46
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7 1.8 1.9 1.10 Time sv 1.11 1.12	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day Weekday Date (day, month) Year vitch programs 1 and 2 Pre-selection of weekday: for time switch programs 1 and 2 Switching times of time switch programs 1 and 2	36 38 39 40 41 42 43 43 44 44 44 44 45 45 45 45 46 46 48
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7 1.8 1.9 1.10 Time sv 1.11 1.12 Time sv	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day Weekday Date (day, month) Year vitch programs 1 and 2 Switching times of time switch programs 1 and 2 Switching times of time switch programs 1 and 2	36 38 39 40 41 42 43 43 44 44 44 44 44 44 44 44 44 44 44
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7 1.8 1.9 1.10 Time sv 1.11 1.12 Time sv 1.13	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day Weekday Date (day, month) Year vitch programs 1 and 2 Switching times of time switch programs 1 and 2 Switching times of time switch programs 1 and 2 Preselection of weekday for time switch program 3 (d.h.w.)	36 38 39 40 41 41 42 43 43 44 44 44 44 45 45 45 45 45 46 46 46 48 49 49
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7 1.8 1.9 1.10 Time sv 1.11 1.12 Time sv	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day Weekday Date (day, month) Year vitch programs 1 and 2 Switching times of time switch programs 1 and 2 Switching times of time switch programs 1 and 2	36 38 39 40 41 41 42 43 43 44 44 44 44 45 45 45 45 45 46 46 46 48 49 49
1.2 1.3 1.3.1 1.4 1.5 1.6 Setting 1.7 1.8 1.9 1.10 Time sv 1.11 1.12 Time sv 1.13 1.14	Operating mode of d.h.w. heating Nominal room temperature setpoint Temperature adjustment via room unit Heating circuit selection button Chimney sweep Manual operation the clock Time of day Weekday Date (day, month) Year vitch programs 1 and 2 Switching times of time switch programs 1 and 2 Switching times of time switch programs 1 and 2 Preselection of weekday for time switch program 3 (d.h.w.)	36 38 39 40 41 42 43 43 44 44 44 44 44 44 44 44 44 45 45 45 45

1.15	Nominal setpoint of d.h.w. temperature (TBWw)	51
Heating of	circuits	52
1.16	Reduced setpoint of room temperature (TRRw)	52
1.17	Frost protection setpoint of room temperature (TRF)	53
1.18	Summer / winter changeover temperature HC1 and HC2 (THG)	
1.19	Slope of heating curve (S)	
Display c	of actual values	
1.20	Actual value of room temperature (TRx)	58
1.21	Actual value of outside temperature (TAx)	
Display c	f burner data	59
1.22	Burner hours run stage 1 (tBR1)	59
1.22.1	Counting the hours run	
1.22.2	Average burner running time	
1.23	Burner hours run stage 2 (tBR2)	
1.23.1	Counting the hours run	
1.24	Number of burner starts stage 1	
1.25	Number of burner starts stage 2	
Maintena	nce	
1.26	Standard times	
Holidays		-
1.27	Holiday period	62
1.28		
1.20	Beginning and end of holiday period Indication of BMU error code	
	Indication of faults	
1.30		
2	Description of heating engineer settings	67
Service v	values	67
	alues	
2.1	Output test	67
2.1 2.2	Output test Input test	67 68
2.1 2.2 2.3	Output test Input test Display of plant type	67 68 69
2.1 2.2 2.3 Actual va	Output test Input test Display of plant type	67 68 69 70
2.1 2.2 2.3 Actual va 2.4	Output test Input test Display of plant type Ilues Actual value of flow temperature	67 68 69 70 70
2.1 2.2 2.3 Actual va 2.4 2.5	Output test Input test Display of plant type lues Actual value of flow temperature Actual value of boiler temperature	67 68 69 70 70 70
2.1 2.2 2.3 Actual va 2.4 2.5 2.6	Output test Input test Display of plant type Ilues Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature	67 68 70 70 70 70 70
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7	Output test Input test Display of plant type lues Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx)	67 68 70 70 70 70 71
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature	67 68 70 70 70 70 71 71
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax)	67 68 70 70 70 70 71 71 71
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged)	67 69 70 70 70 71 71 71 71
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem)	67 68 69 70 70 70 71 71 71 72 72
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem) Outside temperature source	67 68 69 70 70 70 71 71 71 72 72
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem) Outside temperature source	67 68 69 70 70 70 71 71 71 71 72 72 72 73
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem) Outside temperature source 5 74 Display of boiler temperature setpoint	67 68 69 70 70 70 70 71 71 71 71 72 72 73 74
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13 2.14	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem) Outside temperature source s 74 Display of boiler temperature setpoint Display of common flow temperature setpoint	67 68 69 70 70 70 71 71 71 71 72 72 73 74 74
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13 2.14 2.15	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem) Outside temperature source s 74 Display of boiler temperature setpoint Display of common flow temperature setpoint Display of d.h.w temperature setpoint	67 68 69 70 70 70 71 71 71 71 71 72 72 72 72 73 74 74 75
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13 2.14 2.15 2.16	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem) Outside temperature source 5 74 Display of boiler temperature setpoint Display of common flow temperature setpoint Display of d.h.w temperature setpoint Display of nominal room temperature setpoint	67 68 69 70 70 70 70 71 71 71 71 72 72 72 73 74 74 75 76
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13 2.14 2.15 2.16 2.17	Output test         Input test         Display of plant type         Inues         Actual value of flow temperature         Actual value of boiler temperature         Actual value of common flow temperature         Actual value 1 of d.h.w. temperature (TBWx)         Actual value 2 of d.h.w. temperature         Display of maximum flue gas temperature (TGxmax)         Attenuated outside temperature (TAxged)         Composite outside temperature (Taxgem)         Outside temperature source         s 74         Display of common flow temperature setpoint         Display of d.h.w temperature setpoint         Display of orom flow temperature setpoint         Display of d.h.w temperature setpoint         Display of nominal room temperature setpoint         Display of room temperature setpoint (TRw)	67 68 69 70 70 70 70 70 71 71 71 71 72 72 73 74 74 74 76 76 77
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13 2.14 2.15 2.16 2.17 2.18	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem) Outside temperature source s 74 Display of boiler temperature setpoint Display of common flow temperature setpoint Display of nominal room temperature setpoint Display of nominal room temperature setpoint Display of flow temperature setpoint (TRw) Display of flow temperature setpoint (TVw)	67 68 69 70 70 70 71 72 73 74 74 75 76 77 71 71 71 71 71 71 
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13 2.14 2.15 2.16 2.17 2.18 2.19	Output test         Input test         Display of plant type         Inues         Actual value of flow temperature         Actual value of boiler temperature         Actual value of common flow temperature         Actual value of common flow temperature         Actual value 1 of d.h.w. temperature (TBWx)         Actual value 2 of d.h.w. temperature         Display of maximum flue gas temperature (TGxmax)         Attenuated outside temperature (TAxged)         Composite outside temperature (Taxgem)         Outside temperature source         5 74         Display of boiler temperature setpoint         Display of d.h.w temperature setpoint         Display of nominal room temperature setpoint         Display of nominal room temperature setpoint         Display of flow temperature setpoint (TRw)         Display of flow temperature setpoint (TVw)	67 68 69 70 70 70 70 70 71 71 71 71 71 72 73 73 74 74 75 76 77 78 79
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13 2.14 2.15 2.16 2.17 2.18 2.17 2.18 2.19 Heat gen	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem) Outside temperature source s 74 Display of boiler temperature setpoint Display of d.h.w temperature setpoint Display of d.h.w temperature setpoint Display of nominal room temperature setpoint Display of nominal room temperature setpoint Display of flow temperature setpoint (TRw) Display of flow temperature setpoint (TVw) Floor curing data erating equipment	67 68 69 70 70 70 71 71 71 71 71 71 72 72 73 74 74 75 76 77 78 79 80
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13 2.14 2.15 2.16 2.17 2.18 2.19 Heat gen 2.20	Output test         Input test         Display of plant type         Input test         Display of plant type         Input test         Input test         Display of plant type         Input test         Input test         Input test         Input test         Display of plant type         Actual value of flow temperature         Actual value of common flow temperature.         Actual value 1 of d.h.w. temperature (TBWx)         Actual value 2 of d.h.w. temperature (TGxmax)         Actual value 2 of d.h.w. temperature (TAxged)         Composite outside temperature (TAxged)         Composite outside temperature (Taxgem)         Outside temperature source         5 74         Display of boiler temperature setpoint         Display of common flow temperature setpoint         Display of nominal room temperature setpoint         Display of nominal room temperature setpoint         Display of flow temperature setpoint (TRw)         Display of flow temperature setpoint (TRw)         Display of flow temperature setpoint (TVw)         Floor curing data         erating equipment.         Type of heat source	67 68 69 70 70 70 71 71 71 71 71 71 72 73 74 74 74 75 76 77 78 79 80 80
2.1 2.2 2.3 Actual va 2.4 2.5 2.6 2.7 2.8 2.9 2.10 2.11 2.12 Setpoints 2.13 2.14 2.15 2.16 2.17 2.18 2.17 2.18 2.19 Heat gen	Output test Input test Display of plant type Actual value of flow temperature Actual value of boiler temperature Actual value of common flow temperature Actual value 1 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature (TBWx) Actual value 2 of d.h.w. temperature Display of maximum flue gas temperature (TGxmax) Attenuated outside temperature (TAxged) Composite outside temperature (Taxgem) Outside temperature source s 74 Display of boiler temperature setpoint Display of d.h.w temperature setpoint Display of d.h.w temperature setpoint Display of nominal room temperature setpoint Display of nominal room temperature setpoint Display of flow temperature setpoint (TRw) Display of flow temperature setpoint (TVw) Floor curing data erating equipment	67 68 69 70 70 70 70 71 71 71 71 72 73 72 73 74 74 75 76 77 78 79 80 80 80

	Minimum limitation of boiler temperature (TKmin)	81
2.22	Extra heating for the bathroom	82
2.22.1	Extra heating for the bathroom	82
Heating of	sircuit	83
2.23	Parallel displacement of heating curve	83
2.24	Room influence	84
2.25	Switching differential of room temperature (SDR)	85
2.26	Operating mode of room unit	86
2.27	Room unit values	87
2.27.1	Examples of room unit assignments	88
2.28	Minimum limitation of flow temperature setpoint (TVmin)	89
2.29	Maximum limitation of flow temperature setpoint (TVmax)	90
2.30	Maximum forward shift of optimum start control	
2.30.1	Optimum start control	91
2.30.2	Without room influence	92
2.30.3	With room influence	
2.31	Maximum forward shift of optimum stop control	
2.31.1	Optimum stop control	
2.32	Type of building construction	
2.33	Adaption of heating curve	
2.33.1	Adaption	
2.34	Locking signal gain	
2.35	Floor curing	
2.35.1	Temperature profile	
2.35.2	Activating the function	
2.35.3	Function	
2.35.4	Display	
2.35.5	Aborting the function	99
D.h.w.	100	
2.36		
	Reduced setpoint of d.h.w. temperature (TBWR)	
2.30	D.h.w. heating program	101
2.37 2.37.1	D.h.w. heating program 24-hour operation setting 0	101 101
2.37	D.h.w. heating program	101 101 v.)
2.37 2.37.1 2.37.2	D.h.w. heating program	101 101 v.) 102
2.37 2.37.1 2.37.2 2.37.3	D.h.w. heating program	101 101 v.) 102
2.37 2.37.1 2.37.2 2.37.3 2.38	D.h.w. heating program	101 101 v.) 102 102 103
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39	D.h.w. heating program	101 101 v.) 102 102 103 104
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1	D.h.w. heating program	101 101 v.) 102 102 103 104 104
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2	D.h.w. heating program	101 101 v.) 102 102 103 104 104 104
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1	D.h.w. heating program	101 101 v.) 102 102 103 104 104 104 105
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.39.2 2.40	D.h.w. heating program	101 101 v.) 102 102 103 104 104 105 107
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41	D.h.w. heating program	101 101 v.) 102 102 103 104 104 104 105 107 108
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42	D.h.w. heating program	101 101 v.) 102 102 102 103 104 104 104 105 107 108 108
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42 2.42.1	D.h.w. heating program	101 101 v.) 102 102 103 104 104 104 105 107 108 108 109
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42 2.42.1 2.42.2	D.h.w. heating program	101 101 v.) 102 102 103 104 104 104 105 107 108 109 110
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42 2.42.1 2.42.2 2.42.1 2.42.2 2.42.3 2.43	D.h.w. heating program	101 101 v.) 102 102 102 103 104 104 104 105 107 108 108 109 110 111
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42 2.42.1 2.42.2 2.42.1 2.42.2 2.42.3 2.43	D.h.w. heating program	101 101 v.) 102 102 102 103 104 104 104 104 105 107 108 108 109 110 111 112
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42 2.42.1 2.42.2 2.42.3 2.42.3 2.43 LPB / sys	D.h.w. heating program	101 101 v.) 102 102 102 103 104 104 104 104 105 107 108 108 109 110 111 112 112
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42 2.42.1 2.42.2 2.42.3 2.42.3 2.43 LPB / sys 2.44	D.h.w. heating program	101 101 v.) 102 102 102 103 104 104 104 104 105 107 108 108 109 110 111 112 113
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42 2.42.1 2.42.2 2.42.3 2.43 LPB / sys 2.44 2.45	D.h.w. heating program	101 101 v.) 102 102 102 103 104 104 104 104 105 107 108 108 109 110 111 112 113 114
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42 2.42.1 2.42.2 2.42.1 2.42.2 2.42.3 2.43 LPB / sys 2.44 2.45 2.46	D.h.w. heating program	101 101 v.) 102 102 103 104 104 104 104 105 107 108 108 109 110 111 112 112 113 114 115
2.37 2.37.1 2.37.2 2.37.3 2.38 2.39 2.39.1 2.39.2 2.40 2.41 2.42 2.42.1 2.42.2 2.42.3 2.43 LPB / sys 2.44 2.45 2.46 2.47	D.h.w. heating program	101 101 v.) 102 102 102 103 104 104 104 104 104 105 107 108 108 108 109 110 111 112 112 113 114 115 116

2.51	Clock mode	119
2.52	Winter- / summertime changeover	120
2.53	Summer- / wintertime changeover	120
2.54	Display of PPS communication	121
Multi-fun	ctional inputs	122
2.55	Input H1	
2.55.1	Changeover of operating mode	
2.55.2	Minimum flow temperature setpoint TVHw	
2.55.3	Heat generation lock	
2.55.4	Heat demand DC 010 V	
2.55.5	Changeover of operating mode	
2.56	Minimum flow temperature setpoint contact H (TVHw)	
2.57	Maximum value of heat demand signal DC 010 V (H1)	
2.58	Operating action contact H1 and H2	
2.59	Input B31/H2	
2.59.1	D.h.w. sensor 2	
2.59.1	Minimum flow temperature setpoint (TVHw)	
2.59.2	Heat generation lock	
2.59.5	Changeover of operating mode	
2.39.4		129
3	Description of OEM settings	130
0		100
Heat gen	erating equipment	130
3.1	Minimum limitation of boiler temperature (TKmin <sub>OEM</sub> )	130
3.2	Maximum limitation of boiler temperature (TKmax)	130
3.3	Switching differential of the boiler temperature	131
3.3.1	Single-stage burner	132
3.3.2	2-stage burner	132
3.4	Minimum limitation of burner running time	133
3.5	Release integral of burner stage 2	134
3.5.1	Temperature-time integral	
3.6	Reset integral of burner stage 2	135
3.6.1	Temperature-time integral	135
3.7	Pump overrun time	136
3.8	Operating mode of the boiler	137
3.8.1	Extended burner running time	
3.9	Protective boiler start-up	
3.9.1	Impact on 2-position loads	
3.9.2	Impact on modulating loads	
3.9.3	Temperature-time integral	
3.10	Control of boiler pump	
Hosting	sircuit	
3.11	Boost of flow temperature setpoint mixing valve (UEM)	
3.12	Gain factor of room influence (KORR)	
3.12	Constant for quick setback and optimum start control (KON)	
3.13.1	Quick setback without room influence	
3.13.1	Optimum start control without influence	
3.13.2 3.14	Boost of room temperature setpoint (DTRSA)	
3.14 3.14.1	Boost of room temperature selpoint (DTRSA)	
3.14.1	Frost protection for the plant	
3.15		
3.15.1	Frost protection for the plant Control mode of actuator	
3.16	Switching differential of actuator	
3.17	-	
-	Control of mixing valve actuator	
3.18	Overtemperature protection for the pump heating circuit	149

3.19	Heat gains (Tf)	150
3.20	Adaption sensitivity 1 (ZAF1)	151
3.21	Adaption sensitivity 2 (ZAF2)	152
3.22	P-band mixing valve (Xp)	153
3.23	Integral action time mixing valve (Tn)	153
3.24	Actuator running time mixing valve	153
D.h.w.	154	
3.25	Maximum nominal setpoint of d.h.w. temperature (TBWmax)	
3.26	Switching differential of d.h.w. temperature (SDBW)	
3.26.1	d.h.w. temperature control	
3.26.2	D.h.w. temperature control with 2 sensors	
3.27	Legionella function	
3.28	Setpoint of legionella function	
3.29	Discharge protection during d.h.w. heating	
	160	
Service		100
3.30 3.31	Continuous display Software version	
0.0.		
3.32	Device operating hours	
4	General control processes	
4.1	Generation of boiler temperature setpoint	163
4.2	Automatic 24-hour heating limit	
4.2.1	Without room influence	
4.2.2	With room influence	
4.3	Quick setback with room sensor	
4.4	Overtemperature protection mixing heating circuit	
4.5	Attenuated outside temperature	
4.6	Composite outside temperature	
4.7	D.h.w. push	
4.8	Pump and valve kick	
4.9	Protection against discharging after d.h.w. heating	
4.10	Overview of pump operation	
4.11	Frost protection	
4.11.1	For the boiler	
4.11.2	For the d.h.w.	
4.11.3	For the heating circuit	
-		
5	Application examples	175
5.1	Plant types	175
5.1.1	D.h.w. heating with diverting valve	
5.2	Supplementary information on the plant types listed	176
5.3	Legend to plant types	177
5.4	Electrical connections	177
6	Dimensions	
6.1.1	Panel cut-out	
6.1.2	Combination of controllers	
<b>-</b>		
7	Technical data	179

# 1 Summary

## 1.1 Brief description

The ALBATROS controllers described in this documentation are designed for integration in mass-produced heat generating equipment and offer the following control choices:

- Single- or 2-stage burner, 1 BMU
- D.h.w. charging pump or diverting valve
- 3-position mixing valve and circulating pump

#### Systems

The range of products comprises several units that are complementary in terms of application and scope of functions. The controllers have communication capability and can be combined to form extensive heating systems.

For more detailed information about the generation of LPB systems, refer to "Local Process Bus (LPB), Basic Documentation, System Engineering", document no. CE1P2370E.

## 1.2 Features

Heating circuits	<ul> <li>Heating controller for mixing and / or pump heating circuits with: <ul> <li>weather-compensated flow temperature control</li> <li>weather-compensated flow temperature control with room influence</li> </ul> </li> <li>2 separately controlled heating circuits (mixing or pump heating circuits)</li> <li>Quick setback and boost heating</li> <li>Automatic 24-hour heating limit</li> <li>Automatic summer / winter changeover</li> <li>Remote operation via digital room unit</li> <li>The building's thermal dynamics are taken into consideration</li> <li>Automatic adjustment of heating curve to the type of building construction and the heat demand (provided a room unit is connected)</li> <li>Adjustable flow temperature boost with mixing heating circuit</li> <li>Floor curing function <sup>1)</sup></li> </ul>
Heat generation	Single- or 2-stage burner
	BMU (Boiler Management Unit)
	<ul> <li>Heat generation lock with contact H</li> </ul>
Protection for the plant	Protective boiler start-up
	<ul> <li>Protection against boiler overtemperatures (pump overrun)</li> </ul>
	<ul> <li>Adjustable minimum and maximum limitation of boiler temperature (boiler flow temperature)</li> </ul>
	<ul> <li>Burner cycling protection by observing a minimum burner running time</li> </ul>
	<ul> <li>Frost protection for the house or building, the plant, d.h.w., the heating circuit, and the boiler</li> </ul>
	<ul> <li>Protection for the pump and the mixing valve through periodic control (pump and valve kick)</li> </ul>
	Adjustable minimum and maximum limitation of flow temperature
	Protection against overtemperatures in the pump heating circuit

Operation	<ul> <li>Two 7-day heating programs</li> </ul>
	<ul> <li>7-day heating program no. 1 for heating circuit 1</li> </ul>
	<ul> <li>7-day heating program no. 2 for heating circuit 2</li> </ul>
	<ul> <li>Separate 7-day heating program for d.h.w. heating</li> </ul>
	<ul> <li>Temperature adjustment with the setpoint knob</li> </ul>
	<ul> <li>Automatic button for efficient operation throughout the year</li> </ul>
	<ul> <li>Chimney sweep function at the touch of a button</li> </ul>
	<ul> <li>Manual operation at the touch of a button</li> </ul>
	<ul> <li>Straightforward selection of operating mode via buttons</li> </ul>
	<ul> <li>Change of operating mode with contact H</li> </ul>
	<ul> <li>Output and input tests to assist commissioning and a functional test</li> </ul>
	<ul> <li>Service connection facility for local parameter settings and data logging</li> </ul>
D.h.w.	<ul> <li>D.h.w. heating with a charging pump or diverting valve</li> </ul>
	D.h.w. heating with one or 2 sensors
	<ul> <li>Reduced setpoint of d.h.w. temperature</li> </ul>
	Selectable d.h.w. program
	Integrated legionella function
	<ul> <li>Selectable priority for d.h.w. heating</li> </ul>
	<ul> <li>Adjustable boost of the d.h.w. charging temperature</li> </ul>
	Automatic d.h.w. push
	<ul> <li>D.h.w. demand with a sensor or thermostat</li> </ul>
	Protection against discharging
Systems <sup>1</sup>	Communicating via Local Process Bus (LPB) <sup>1)</sup>
	Communicating via point-to-point interface (PPS)
	<ul> <li>Integrity of system architecture with all RVA controllers<sup>1)</sup></li> </ul>
	<ul> <li>Can be extended to include up to 40 heating circuits (with central bus power supply)</li> </ul>
	Optional remote supervision
	<ul> <li>Fault status signals and indications (locally, LPB and PPS)<sup>1)</sup></li> </ul>
	<ul> <li>Controllers of other manufacture can deliver their heat demand signal via potential-</li> </ul>
	free H-contact
	<ul> <li>Controllers of other manufacture can deliver their heat demand in the form of DC</li> </ul>
	010 signals
	• Analysis with service tool <sup>1)</sup>
Logging	<ul> <li>Logging the number of burner hours run of stages 1 and 2</li> </ul>
	<ul> <li>Logging the number of burner starts of stages 1 and 2</li> </ul>
	<ul> <li>Logging the flue gas temperature</li> </ul>
	Display of plant diagram no.
	1.1.4.111 51/4550 000

<sup>1</sup> Not with RVA53.280

## 1.3 Range of products

The following units and accessories are designed for use with the ALBATROS range:

Controllers	RVA63.280 RVA53.280	Boiler and heating circuit controller	
Room units	QAA10	Digital room sensor	
	QAA50	Digital room unit	
	QAA70	Digital, multi-functional room unit	
Sensor	QAC31	Outside sensor (NTC 600)	
	QAC21	Outside sensor (Ni 1000)	
	QAZ21	Immersion sensor with cable	
	QAD21	Strap-on temperature sensor	
	Pt1000	Flue gas sensor (third party product)	
Screw type terminal strips	AGP2S.02M	<sup>1</sup> LPB (2 poles)	violet
(Rast 5)	AGP2S.02G	Room unit (2 poles)	blue
	AGP2S.06A	Sensor (6 poles)	white
	AGP2S.04G	Sensor (4 poles)	grey
	AGP2S.02G	Room unit PPS2 (2 poles)	blue
	AGP2S.04C	Sensor (4 poles)	yellow
	AGP3S.02D	Mains (2 poles)	black
	AGP3S.05D	Burner (5 poles)	red
	AGP3S.03B	Pumps (3 poles)	brown
	AGP3S.03K	Actuator (3-poles)	green
	AGP3S.04F	Pumps (4 poles)	orange
	AGP3S.03K	Actuator 2 (3 poles)	green

<sup>1</sup> Not with RVA53.280

## 1.4 Field of use

Target market	<ul><li>OEMs</li><li>Manufacturers of combi and heating boilers</li></ul>
Types of buildings	<ul> <li>Residential and non-residential buildings with own zone heating and d.h.w. heating facility</li> <li>Residential and non-residential buildings with central heating plant</li> </ul>
Types of heating systems	<ul> <li>Standard heating systems, such as: radiator, convector, underfloor and ceiling heating systems, and radiant panels</li> <li>Suited for <ul> <li>heating plants with 2 heating circuits</li> <li>different types of heating systems (creation of extensive systems)</li> <li>several heating zones (creation of extensive systems)</li> </ul> </li> <li>With or without d.h.w. heating</li> </ul>
Heat generating equipment	<ul> <li>Heating boilers with single- or 2-stage oil or gas burners</li> <li>Gas boilers with BMU (Boiler Management Unit)</li> </ul>

### 1.5 **Product liability**

- The products may only be used in building services plant and applications as described above
- When using the products, all requirements specified in "Technical data" and "Handling" must be satisfied
- When using the products in a system, all requirements contained in the documentation "Local Process Bus (LPB), Basic Documentation, System Engineering" (document no. CE1P2370E) must be satisfied
- The local regulations (for installation, etc.) must be complied with

# 2 Handling

2.1 Installation

### 2.1.1 Regulations for installation

• Air circulation around the controller must be ensured, allowing the unit to emit the heat produced by it.

A clearance of at least 10 mm must be provided for the controller's cooling slots which are situated a the top and bottom of the housing.

The space should not be accessible and no objects should be placed there. If the controller is enclosed in another closed (insulating) casing, a clearance of up to 100 mm must be observed on all sides

- The controller is designed conforming to the directives for safety class II mounted in compliance with these regulations
- Power to the controller may be supplied only after it is completely fitted in the cut-out. If this is not observed, there is a risk of electric shock hazard near the terminals and through the cooling slots
- The controller may not be exposed to dripping water
- Permissible ambient temperature when mounted and when ready to operate: 0...50 °C

### 2.1.2 Mounting location


- In the boiler front
- In the control panel front

### 2.1.3 Mounting procedure

1. Making the connections

- Turn off power supply
- Pull the prefabricated cables through the cut-out
- Plug the connectors into the respective sockets at the rear of the controller
- → Note:

The connectors are coded to make certain they cannot be mixed up.

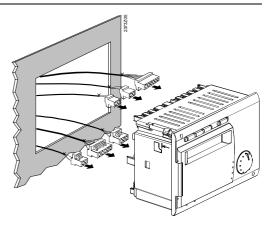

Siemens Building Technologies Landis & Staefa Division 13/184

2. Check

3. Fitting

- Check to ensure the fixing levers are turned inward
- Check to make certain there is sufficient space between the front panel and the fixing levers

- Slide the controller into the panel cutout without applying any force
- → Note:

controller

Note:

20 Ncm.

→

Do not use any tools when inserting the unit into the cut-out. If it does not fit, check the size of the cut-out and the position of the fixing levers.

Tighten the 2 screws on the front of the


Tighten the screws only slightly, applying a torque of maximum


When tightening the screws, the fixing levers automatically assume

their correct positions.

### 4. Fixing

BODECE

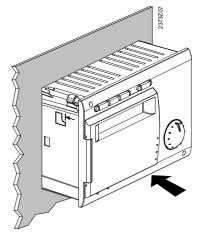

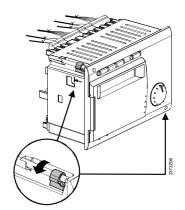



### 2.1.4 Required cut-out

#### Dimensions of cut-out


**Combination of** 

controllers

The controller's mounting dimensions are 91 x 137 mm Due to the dimensions of the front, however, the standard spacing is 144 mm The controller can be fitted in front panels of different thicknesses

The mechanical mounting facility makes it possible to arrange several controllers in a row in one cut-out. In that case, it is merely necessary to have a wider panel cutout.


Also refer to "Dimensions" in Index.

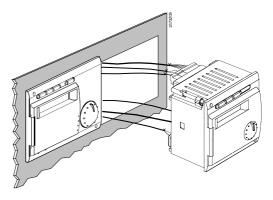

### 2.1.5 Orientation

To avoid overtemperatures inside the controller, the inclination may be no more than 30° and there must be a clearance of at least 10 mm above and below the cooling slots.

This allows the controller to emit the heat generated during operation.

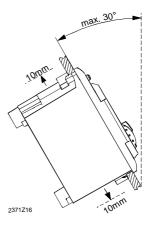

## 2.2 Electrical installation

### 2.2.1 Regulations for installation


- Prior to installing the controller, the power supply must be turned off
- The connections for mains and low voltage are separated
- The wiring must be made in compliance with the requirements of safety class II. This means that sensor and mains cables may not be run in the same duct

### 2.2.2 wiring


When using prefabricated cables with connectors, the electrical installation is very straightforward, owing to coding.

Rear of controller

#### 2.2.2.1 Connection terminals of RVA63.280

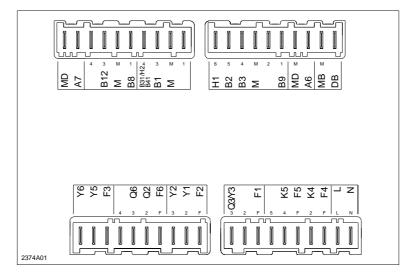

#### 2.2.2.2 Connection terminals of RVA53.280

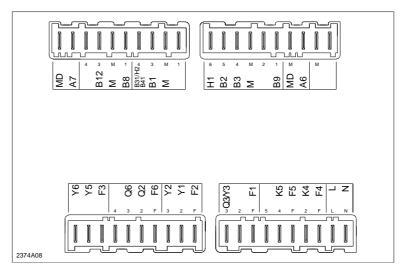

Note

Low voltage side

Terminal	Terminals	Connector	Color	
MD	Ground room unit bus (PPS) AGP2S.02G blue		blue	
A7	Room unit bus HC2 (PPS)			
-	Not used AGP2S.04C y		yellow	
B12	Flow sensor mixing valve HC2			
Μ	Ground sensors			
B8	Flue gas sensor			
B31/H2	D.h.w. sensor 2 / contact H2	AGP2S.04G	grey	
B1	Flow sensor mixing valve HC1			
Μ	Ground sensors			
	Not used			
H1	Changeover contact	AGP2S.06A	white	
B2	Boiler sensor			
B3	D.h.w. sensor 1 / control thermostat			
Μ	Ground sensors			
-	Not used			
B9	Outside sensor			
MD	Ground PPS (RG1, BMU)	AGP2S.02G	blue	
A6	PPS (RG1, BMU)			
MB	Ground bus (LPB)	AGP2S.02M	violet	
DB	Data bus (LPB)			

### Mains voltage side

Terminal	Terminals	Connector	Color	
Y6	Mixing valve HC2 CLOSED AGP3S.03K gr		green	
Y5	Mixing valve HC2 OPEN			
F3	Phases Y5 and Y6			
-	Not used AGP3S.04F		orange	
Q6	Circulating pump mixing heating circuit 2			
Q2	Circulating pump mixing heating circuit 1			
F6	Phase Q2			
Y2	Mixing valve CLOSED	AGP3S.03K	green	
Y1	Mixing valve OPEN			
F2	Phase Y1 and Y2			
Q3/Y3	D.h.w. charging pump / d.h.w. diverting	AGP3S.03B	brown	
	valve			
-	Not used			
F1	Phase Q3/Y3			
-	Not used	AGP3S.05D	red	
K5	Burner stage 2			
F5	Phase burner stage 2			
K4	Burner stage 1			
F4	Phase burner stage 1			
L	Live AC 230 V (mains connection)	AGP3S.02D	black	
Ν	Neutral (mains connection)			

## 2.3 Commissioning

#### Prerequisites

To commission the controller:

- Make certain that mounting and electrical installation are in compliance with the relevant requirements
- Make all plant-specific settings as described in section "Parameter settings"
- Reset the attenuated outside temperature
- Make the functional checks


### 2.3.1 Functional checks

To facilitate commissioning and fault tracing, the controller allows output and input tests to be made. With these tests, the controller's inputs and outputs can be checked.

### Output test

	Buttons	Explanation		Line	
1	Prog	Press one of the line selection buttons. This will take you to the programming mode.			
2	Prog	Press both li seconds. This will take engineer" ar	<u>5 (</u>		
3			Press the + or - button repeatedly, which will take you one test step further:		
		Test step 0	All outputs are switched according to normal control operation		
		Test step 1	All outputs are deactivated		
		Test step 2	Burner stage 1 (K4) is activated		
		Test step 3	Test step 3 Burner stages 1 and 2 (K4 + K5) are activated		
		Test step 4 D.h.w. charging pump / diverting valve (Q3 / Y3) is activated			
		Test step 5 Heating circuit 1 / boiler pump (Q2) is activated			
		Test step 6	Mixing valve HC1 OPEN (Y1) is activated		
		Test step 7	Mixing valve HC1 CLOSED (Y2) is activated		
		Test step 8         Heating circuit pump HC2 (Q6) is activated			
		Test step 9         Mixing valve HC2 OPEN (Y5) is activated			
		Test step 10	Mixing valve HC2 CLOSED (Y6) is activated		
4	Auto	By pressing any of the operating mode or line selection buttons, you leave the programming mode and thus the output test. Note: If no button is pressed for about 8 minutes, the			
		controller wi mode select	l automatically return to the operating ed last.		

Display




- The pointer below the symbol indicates the output activated
- a) b) c) The number indicates the current test step
  - The number indicates the selected setting line

#### Input test

	Buttons	Explanation		Line	
1	Prog		f the line selection buttons. e you to the programming mode.		
2	Prog	seconds.	This will take you to the programming mode "Heating		
3			election button UP until you reach line 52.	<u>52</u>	
4			Press the + or - button repeatedly, which will take you one test step further:		
		Test step 0	Display of boiler temperature acquired with sensor B2		
		Test step 1	Display of d.h.w. temperature acquired with sensor B3		
		Test step 2	Display of input B31/H2/B41 according to the function selected on line 174 [°C or ooo or].		
		Test step 3	Display of flow temperature HC1 acquired with detector B1		
		Test step 4	Display of flow temperature HC2 acquired with detector B12		
		Test step 5	Display of outside temperature acquired with sensor B9		
		Test step 6	Display of room temperature acquired with room unit connected to A6		
		Test step 7	Display of room temperature acquired with room unit connected to A7		
		Test step 8	Display of the flue gas temperature acquired with sensor B8		
		Test step 9	Display of input H1 according to the function selected on line 170 [°C / 000 /].		
5	Auto	leave the pro Note: If no button i	any of the operating mode buttons, you ogramming mode and thus the input test. is pressed for about 8 minutes, the Il automatically return to the operating ed last.	Continuous display	

Note

The selected sensor values are updated within a maximum of 5 seconds. An open-circuit is displayed as ---. A short-circuit is displayed as o o o. Display

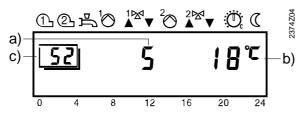

The number indicates the current test step

Displayed value of the temperature measured The number indicates the selected setting line

a) b) c)

## 2.4 Parameter settings for the end-user

	Buttons	Explanation	Line
1	Prog	Press one of the line selection buttons UP/DOWN. This will take you directly to the programming mode "End-user".	
2	Prog	Press the line selection buttons to select the required line. The parameter list on the next 2 pages contains all available lines.	 
3		Press the + or - button to set the required value. The setting will be stored as soon as you leave the programming mode or change to another line. The parameter list on the next 2 pages contains all settings that can be made.	
4	Auto	By pressing any of the operating mode buttons, you leave the programming mode "End-user". → Note: If no button is pressed for about 8 minutes, the controller will automatically return to the operating mode selected last.	Continuou s display

Description

#### Setting

The following settings can be made to meet the individual needs of the end-user.

### 2.4.1 Overview of end-user parameters

RVA63.280	RVA53.280	Function	Range	Unit	Resolution	Factory setting
		e clock				
1	1	Time of day	023:59	h / min	1 min	00:00
2	2	Weekday	17	Day	1 day	1
3	3	Date (day, month)	01.0131.12	tt.MM	1	-
4	4	Year	19992099	jjjj	1	-
Time	e swite	ch program 1				
5	5	Pre-selection of weekday 1-7 7-day block 17 Individual days	1-7 / 17	Day	1 day	-
6	6	Switch-on time 1. Period	:24:00	h / min	10 min	06:00
7	7	Switch-off time 1. Period	:24:00	h / min	10 min	22:00
8	8	Switch-on time 2. Period	:24:00	h / min	10 min	:
9	9	Switch-off time 2. Period	:24:00	h / min	10 min	:
10	10	Switch-on time 3. Period	:24:00	h / min	10 min	:
11	11	Switch-off time 3. Period	:24:00	h / min	10 min	:
Time	e swite	ch program 3 (d.h.w.)				
19	19	Pre-selection of weekday1-77-day block17Individual days	1-7 / 17	Day	1 day	-
20	20	Switch-on time 1. Period	:24:00	h / min	10 min	06:00
21	21	Switch-off time 1. Period	:24:00	h / min	10 min	22:00
22	22	Switch-on time 2. Period	:24:00	h / min	10 min	:
23	23	Switch-off time 2. Period	:24:00	h / min	10 min	:
24	24	Switch-on time 3. Period	:24:00	h / min	10 min	:
25	25	Switch-off time 3. Period	:24:00	h / min	10 min	:
D.h.						
26	26	Nominal setpoint of d.h.w. temperature (TBWw) TBWRw Line 120 TBWmax Line 50 (OEM)	TBWRTBWmax	°C	1	55
Heat	ting ci	rcuit				
27	27	Reduced setpoint of room temperature       Image: Comparison of the set point of room temperature, line 28         TRN       Setpoint knob heating circuit 1 or 2	TRFTRN	°C	0,5	16
28	28	Frost protection setpoint of room temperature (TRFw) TRRw Line 27	4TRRw	°C	0,5	10
29	29	Summer / winter changeover temperature (THG)	830	°C	0,5	17
30	30	Slope of heating curve (S) - : Inactive (only HC2) 2.540 Active	- : / 2,540	-	0,5	15
33	33	Actual value of room temperature (TRx)	050	°C	0,5	-
34	34	Actual value of outside temperature (TAx) To reset the attenuated outside temperature to TAx, press the + and - buttons simultaneously for 3 seconds.	-50+50	°C	0,5	-

RVA63.280	RVA53.280	Function	Range	Unit	Resolution	Factory setting
Hea	t gene	rating equipment				
35	35	Burner hours run stage 1 or BMU (tBR1)	065535	h	1	0
36	36	Burner hours run stage 2 (tBR2)	0 65535	h	1	0
37	37	Number of burner starts stage 1	0 65535	-	1	0
38	38	Number of burner starts stage 2	0 65535	-	1	0
Stan	dard v	values				
39	39	Standard times for switching programs 1, 2, 3 (lines 611 and 2025) To activate, press the + and - buttons simultaneously for 3 seconds	-	-	-	-
Holi	idays					
40	40	Holiday period	18	-	1	1
41	41	1 Beginning of holiday period No holiday period programmed Month, day	01.0131.12	tt.MM	1	-
		To reset the selected holiday period, press the + and - buttons simultaneously for 3 seconds.				
42	42	End of holiday period No holiday period programmed Month, day	01.0131.12	tt.MM	1	-
		To reset the selected holiday period, press the + and - buttons simultaneously for 3 seconds.				
Serv	vice		·			
49	49	Indication of BMU error code 0255 Error code	0255	-	1	-
50	50	Indication of faults	0255	-	1	-

## 2.5 Parameter settings for the heating engineer

	Buttons	Explanation	Line
1	Prog	Press one of the line selection buttons UP/DOWN. This will take you directly to the programming mode "End-user".	
2	Prog	Press both line selection buttons for at least 3 seconds. This will take you directly to the programming mode "Heating engineer".	51
3	Prog	Press the line selection buttons to select the required line. The parameter list on the next 2 pages contains all available lines.	1 <u>5  </u>  199
4		Press the + or - button to set the required value. The setting will be stored as soon as you leave the programming mode or change to another line. The parameter list on the next 2 pages contains all settings that can be made.	
5	Auto 🕗	By pressing any of the operating mode buttons you leave the programming mode "Heating engineer". → Note: If no button is pressed for about 8 minutes, the controller will automatically return to the operating mode selected last.	Continuc s display

#### Description

### Setting

24/184 Siemens Building Technologies B Landis & Staefa Division

### 2.5.1 Overview of heating engineer parameters

						ba
RVA63.280	RVA53.280	Function	Range	Unit	Resolution	Factory setting
Servi	ice va	lues				
51	51	Output test0Control mode according to the operating state1All outputs OFF2Burner stage 1 ONK43Burner stages 1 and 2 ONK4 / K54D.h.w. charging pump ONQ3/Y3D.h.w. diverting valve OPENQ3 / Y35Heating circuit pump 1Q26Mixing valve 1 openY17Mixing valve 1 closeY28Heating circuit pump 2Q69Mixing valve 2 openY510Mixing valve 2 closeY6	010	-	1	0
52	52	Input test0Boiler sensorB21D.h.w. sensor 1B32Display of input B31/H2B313Flow sensor HC1B14Flow sensor HC2B125Outside sensorB96Room sensor 1RG1, A67Room sensor 2RG2, A78Flue gas sensorB89Display of input H1H1	09	-	1	0
53	53	Display of plant type	1127	-	1	-
Actu	al vali	ues				
55	55	Actual value of flow temperature (TVx)	0140	°C	1	-
56	56	Actual value of boiler temperature (TKx) Input B2/B4	0140	°C	1	-
57	-	Actual value of common flow temperature	0140	°C	1	-
61	61	Actual value 1 of d.h.w. temperature (TBWx) (Higher temperature)	0140	°C	1	-
62	62	Actual value 2 of d.h.w. temperature (TBWx) (Lower temperature)	0140	°C	1	-
63	63	Display of maximum flue gas temperature (TGxmax) To make a reset to the current value, press the + and – buttons simultaneously for 3 seconds	0350	°C	1	-
65	65	Attenuated outside temperature (TAxged)	-50+50	°C	0.5	-
66	66	Composite outside temperature (Taxgem)	-50+50	°C	0.5	-
67	-	Outside temperature source          No signal         00.0114.16       Address	:- / 00.0114.16	-	1	-
Setpe	oints					
68	68	Display of boiler temperature setpoint	0140	°C	1	-
69	-	Display of common flow temperature setpoint	0140	°C	1	-
70 71	70 71	Display of d.h.w temperature setpoint Display of nominal room temperature setpoint Nominal setpoint incl. room unit readjustment	0140 035	2° 2°	1 0,5	-
73	73	Display of room temperature setpoint (TRw)	035	°C	0,5	_
73 75	73 75	Display of flow temperature setpoint (TRW)	0140	°C	0,5	-
15	15		0140	U	I	-

					1	
RVA63.280	RVA53.280	Function	Range	Unit	Resolution	Factory setting
77	-	Floor curing data	032 095	- °C	1	-
Heat	t gene	rating equipment		_		
80	80	Type of heat source0No heat generation or PPS-BMU1Single-stage burner22-stage burner	02	-	1	2
81	81	Minimum limitation of boiler temperature (TKmin)TkminoemTkmaxLine 2 OEM	TKmin <sub>OEM</sub> TKmax	°C	1	40
82	82	Extra heating for the bathroom (HK2 ist pump heating circuits) 0 Inactive 1 Active	0 / 1	-	1	0
Heat	ting ci	ircuit				
100	100	Parallel displacement of heating curve	-4,5+4,5	°C (K)	0,5	0,0
101	101	Room influence0Inactive1Active	0 / 1	-	1	1
102	102	Switching differential of the room temperature (SDR) Inactive 0.54.0 Active	:4,0	°C (K)	0,5	:-
103	103	Operating mode of room unit         0       Parallel action:       Room unit 1 on heating circuit 1 Room unit 2 on heating circuit 2         1       Crossed action:       Room unit 1 on heating circuit 2 Room unit 2 on heating circuit 1         2       Serial action: and 2       Room unit 1 on heating circuits 1	02	-	1	0
104	104	Room unit values0Parallel action:Room unit 1 on heating circuit 1 Room unit 2 on heating circuit 21Crossed action:Room unit 1 on heating circuit 2 Room unit 2 on heating circuit 12Serial action: and 2Room unit 1 on heating circuits 1	02	-	1	0
105	105	Minimum limitation of flow temperature setpoint (TVmin) TVmax Line 107	8TVmax	°C	1	8
107	107	Maximum limitation of flow temperature setpoint (TVmax) Tvmin Line 105	TVmin95	°C	1	80
109	109	Maximum forward shift of optimum start control o forward shift / OFF	00:0006:00	hh:mm	10 min	00:00
110	110	Maximum forward shift of optimum stop control 0 No forwarding shift	00:0006:00	hh:mm	10 min	00:00
113	113	Type of building construction0Heavy1Light	0 / 1	-	1	1
114	114	Adaption of heating curve	0 / 1	-	1	1
115	115	Gain of locking signal	0200	%	1	100

RVA63.280	RVA53.280	Function	28		Resolution	Factory setting
	RV	Fun	Range	Unit	Res	
116	-	Floor curing       Image: Constraint of the streng st	03	-	1	0
D.h.	w.					
120	120	Reduced setpoint of d.h.w. temperature (TBWR) TBWw Line 26	8TBWw	°C	1	40
121	121	D.h.w. heating program024 h/day1Heating program with forward shift2Time switch program 3	02	-	1	1
123	-	Assignment of d.h.w. heating0Local heating circuit1All heating circuits in the segment2All heating circuits in the system	02	-	1	2
124	124	D.h.w. charging0Once per day with a forward shift of 2.5 hours1Several times per day with a 1 h forward shift	0 / 1	-	1	1
125	125	Type of d.h.w. demand0Sensor1Control thermostat	0 / 1	-	1	0
126	126	Boost of the flow temperature setpoint for d.h.w. heating (UEBW)	030	°C (K)	1	16
127	127	D.h.w. priority         0       Absolute (mixing and pump heating circuit)         1       Shifting (mixing and pump heating circuit)         2       None (parallel)         3       Mixing heating circuit (shifted) Pump heating circuit (absolut)	03	-	1	1
128	128	Controlling element for d.h.w. 0 Charging pump 1 Diverting valve	0/1	-	1	0
LPB	/ svst	em				
140	-	LPB device address 0 Standalone 116 Device address (system)	016	-	1	0
141	-	LPB segment address 0 Heat source segment 114 Heat consumption segments	014	-	1	0
142	-	LPB power supply0Off (central bus power supply1)Auto (bus power supply via controller)	0 / 1	-	1	1
143 145	-	Display of LPB power supply         Range of action of central changeover         0       In the segment         1       In the system (if segment address = 0)	On / OFF 0 / 1	-	1	- 1
146	-	Automatic summer / winter changeover0Local changeover1Central changeover of all heating circuits	0 / 1	-	1	0
147	-	Central stand-by switch <sup>1)</sup> 0 Off 1 ON	0 / 1	-	1	0
148	-	Clock mode         0       Autonomous clock         1       System time without adjustment         2       (System time with adjustment)         3       System clock (master)	03	-	1	0

			ĩ	î	î	i
RVA63.280	RVA53.280	Function	Range	Unit	Resolution	Factory setting
150	150	Winter- / summertime changeover	01.0131.12	tt.MM	1	25.03
151	151	Summer- / wintertime changeover	01.0131.12	tt.MM	1	25.10
155	155	Display of PPS communication (A6)0 0 0Short-circuitNo communication0255OK communication	0 0 0 / / 0255	-	1	-
156	156	Display of PPS communication room unit 2 (A7)         000       Short-circuit          No communication, no room unit         0255       Room unit number, communication OK	0255	-	1	0
Mult	tifunkt	ional inputs (H1) (H2/B31)				
170	170	Input H10Changeover of operating mode of all HC and d.h.w.1Changeover of operating mode of all HC 22Min. flow temperature setpoint (TVHw) 33Heat generation lock1Demand for heat DC 010 V5Changeover of operating mode HC1 66Changeover of operating mode HC2	06	-	1	0
171	171	Minimum flow temperature setpoint contact H (TVHw) TKmax Line 2 OEM	8TKmax	°C	1	70
172	172	Maximum value of heat demand signal (DC 010 V) H1	5130	°C	1	100
173	173	Operating action contacts H1 and H2 0 N.C. 1 N.O.	0 / 1	-	1	1
174	174	Input B31/H2         0       D.h.w. sensor 2         1       Min. flow setpoint (TVHw)         2       Heat generation lock         1       Changeover of operating mode HC1         4       Changeover of operating mode HC2	04	-	1	0

<sup>1)</sup> This line is active only if the unit is addressed as the heat generation master. Also refer to "LPB device address" in Index.

## 2.6 Parameter settings for the OEM


Description

Setting

Boiler-specific settings and protective functions for the boiler manufacturer.

	Buttons	Explanation	Line
1	Prog	Press one of the line selection buttons UP/DOWN. This will take you directly to the programming mode "End-user".	
2	Prog 9 s	Press both line selection buttons for at least 9 seconds. A special display for entering the code will appear.	00
3	CODE	Press buttons and to enter the required combination of the access code. If the combination of buttons is correct, you reach the programming mode "OEM".	
		→ Wrong code: If the code has been entered incorrectly, the display will change to the "Parameter settings for the heating engineer".	
4	Prog	Press the line selection buttons to select the required line. The parameter list on the next 2 pages contains all available lines.	  [99]
5		Press the + or - button to set the required value. The setting will be stored as soon as you leave the programming mode or change to another line. The parameter list on the next 2 pages contains all settings that can be made.	
6		By pressing any of the operating mode buttons you leave the programming mode "OEM". → Note: If no button is pressed for about 8 minutes, the controller will automatically return to the operating mode selected last.	continuo us display

#### Example



Whether correct or incorrect, each push of a button will be adopted as a digit of the code. As a confirmation, the respective digit changes to 1.

#### 2.6.1 **Overview of OEM parameters**

						00
R VA63.280	RVA53.280	Function	Range	Unit	Resolution	Factory setting
		erating equipment				
1	1	Min. limitation of boiler temperature OEM (TKmin <sub>OEM</sub> ) <sub>Tkmin Line 81</sub>	8TKmin	°C	1	40
2	2	Maximum limitation of boiler temperature (TKmax) Tkmin Line 81	TKmin120	°C	1	80
3	3	Switching differential of the boiler temperature	020	°C (K)	1	8
4	4	Min. limitation of burner running time	010	min	1	4
5	5	Release limit (integral) of burner stage 2	0500	°C (K) min	1	50
6	6	Reset limit (integral) of burner stage 2	0500	°C (K) min	1	10
8	8	Pump overrun time (after burner OFF)	020	min	1	5
9	9	Operating mode of boiler 0 Continuous mode: Ohne verlängerter burner running time 1 Automatic mode: Ohne verlängerter	02	-	1	1
		Automatic mode: Office Vortaligener burner running time     Automatic mode: Mit verlängerter burner running time				
10	10	Protective boiler start-up 0 No 1 Yes	0 / 1	-	1	1
12	12	Control of boiler pump0Mixed temperature requisition1Parallel to burner operation	0 / 1	-	1	0
Hea	ting c	ircuit				
30	30	Boost of flow temperature setpoint mixing valve (UEM)	<sup></sup> 50	°C (K)	1	10
31	31	Gain factor of room influence (KORR)	<sup></sup> 020	-	1	4
32	32	Constant for quick setback and optimum start	m 020	-	1	2
33	33	Boost of room temperature setpoint (DTRSA) (with boost heating)	020	°C (K)	1	5
34	34	Frost protection for the plant 0 Inactive 1 Active	0 / 1	-	1	1
35	35	Control mode of actuator (Y1 / Y5)           0         2-position (Y1) / (Y5)           1         3-position (Y1,Y2 / Y5,Y6)	ω 0 / 1	-	1	1
36	36	Switching differential of actuator For 2-position mixing valve	020	°C (K)	1	2
37	37	Overtemperature protection for the pump heating circuit 0 Inactive 1 Active	0 / 1	-	1	1
38	38	Heat gains (Tf)	<b>□</b> -2+4	°C	0,1	0
39	39	Adaption sensitivity 1 (ZAF1)	■ 115	-	1	15
40	40	Adaption sensitivity 2 (ZAF2)	■ 115	-	1	15
41	41	P-band mixing valve (Xp)	<sup>∞</sup> 1100	°C (K)	1	32
42	42	Integral action time mixing valve (Tn)	■ 10873	S	1	120


082.890 D.h.		Actuator running time mixing valve	<sup>эв</sup> иру 30873	s Unit	L Resolution	Factory setting
50	50	Maximum nominal setpoint of d.h.w. temperature (TBWmax)	880	°C	1	60
51	51	Switching differential of d.h.w. temperature (SDBW)	020	°C (K)	1	5
52	52	Legionella function 0 Inactive 1 Active	0 / 1	-	1	1
53	53	Setpoint of legionella function	895	°C	1	65
54	54	Discharge protection during d.h.w. heating0No1Continuously2Partly	02	-	1	2
Serv	ice					
90	90	Continuous display0Weekday / time of day1Actual value of boiler temperature	0 / 1	-	1	0
91	91	Software version	00.099.0	-	1	-
92	92	Device operating hours	0500000	h	1	0

## 2.7 Operation

### Introduction


Operating Instructions are inserted at the rear of the unit's front cover.

# 2.7.1 Operating elements

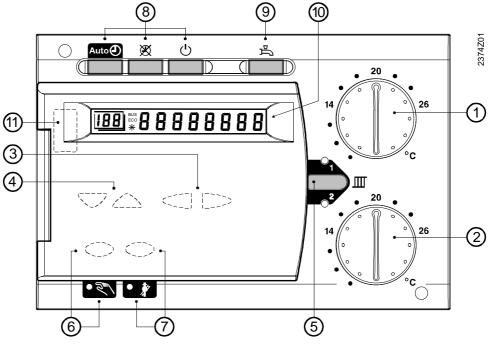

	Operating element	Function
1	Room temperature setpoint knob HC1	Adjustment of room temperature setpoint for heating circuit 1
2	Room temperature setpoint knob HC2	Adjustment of room temperature setpoint for heating circuit 2
3	Setting buttons	Parameter settings
4	Line selection buttons	Parameter settings
5	Heating circuit selection button	Pre-selection of heating circuit when making settings
6	Function button with LED for manual operation	Activation of manual operation
7	Function button with LED for chimney sweep	Activation of chimney sweep function
8	Operating mode buttons heating circuit	Operating mode changes to: Auto Automatic operation Continuous operation U Stand-by
9	Operating mode button d.h.w.	D.h.w. heating ON / OFF
10	Display	Display of actual values and settings
<u>(</u> 1	Connection facility for PC tool	Diagnostics and service

Display

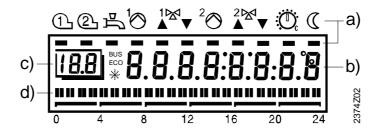

- a) Symbols indication of operating state with the black pointers
- b) Display during normal control mode or when making settings
- c) Programming line when making settings
- d) Heating program of current day

## 2.8 Operational faults

### 2.8.1.1 No display on the controller:

- Is the heating plant's main switch turned on?
- Are the fuses in order?
- Check wiring

# 2.8.1.2 Heating control does not function. There is no display of the time of day, or the time displayed is incorrect

- Check fuses of the plant
- Make a reset: Isolate controller from the mains supply for about 5 seconds (e.g. turn off the boiler's main switch for 5 seconds)
- Set the correct time of day on the controller (operating line 1).
- Check the time of day on the clock time master if the controller is used in a system

# 2.8.1.3 Controlling element does not open / close or does not operate correctly.

- Manual lever of controlling element may not be engaged
- Wiring to the controlling element interrupted (output test)
- Check wiring of the sensors (input test)
- Quick setback or automatic 24-hour heating limit is active
- Check the settings, especially the selection of the double function

### 2.8.1.4 Heating circuit pump does not run

- Is the right type of plant displayed (setting line 53)?
- Check wiring and fuse (output test)
- Check wiring of the sensors (input test)
- Check the settings, especially the selection of the double function I and the selection of the double function

### 2.8.1.5 Burner does not switch on

- Press burner's reset button
- Check the fuses
- Wiring to the controlling element interrupted (output test)
- Check the electromechanical control thermostat (TR) and the manual reset safety limit thermostat (STB)
- Quick setback or automatic 24-hour heating limit is active
- Check wiring of the boiler temperature sensor (input test)

#### 2.8.1.6 Pump does not run

- Check wiring and fuse (output test)
- Check wiring of the sensors (input test)

#### 2.8.1.7 D.h.w. is not being heated

- Has the button for d.h.w. heating been activated?
- Check setting of the electromechanical control thermostat (TR) installed on the boiler. It must be above the TKmax setting
- Check setpoint of the d.h.w. temperature
- Check actual value of the d.h.w. temperature

- Check if d.h.w. heating is released
- Check wiring and fuse of the charging pump (input test)
- Check wiring of the d.h.w. temperature sensor (output test)

# 2.8.1.8 The room temperature does not agree with the required temperature level:

- Check the room temperature setpoints
- Is the required operating mode indicated?
- Is automatic operation overridden by the room unit?
- Are weekday, time of day and the displayed heating program correct?
- Has the heating curve slope been correctly set?
- Check wiring of outside sensor

#### 2.8.1.9 Heating plant does not function properly

- Check all parameters based on the setting instructions "Heating engineer" and the operating instructions "End-user". especially the preselection of the double function
- Make the input test
- Make the output test
- Check the electromechanical control thermostat (TR) and the manual reset safety limit thermostat (STB)

# 2.8.1.10 Frost protection for the plant does not function at all, or does not function correctly

- Check correct functioning of the burner
- Check correct functioning of the pumps
- Frost protection for the plant in the case of pump heating circuits with active room temperature limitation

#### 2.8.1.11 Quick setback or boost heating does not function

- Check settings made on the heating engineer's level
- Fühler an A6,A7 kontrollieren (Eingangtest).
- Check the sensor connected to A6, A7 (input test)

#### 2.8.1.12 Fault status signal; display shows "ER"

• For cause of error, refer to section "Parameter settings for end-user" on line 50

# 1 Description of end-user settings

### User interface

	1.1 Operating modes of heating circuit	
Benefit	Straightforward and direct selection of heating circuit operating modes.	
Description	The control provides 3 different heating circuit operating modes that can be directly selected as required.	
Setting	Auto $\bigotimes$ $\bigotimes$ $\bigcup$ Select the required operating mode by pressing the respective operating mode button. It is located on the controller front for direct access by the user. The setting can be made separately for both heating circuits with the heating circuit selection button.	
Note	The d.h.w. operating mode will not be affected by the selected heating circuit operating mode, with the exception of the holiday function and when the remote telephone switch is activated	

Operating mode	Designation	Effect of selected operating mode
Auto	Automatic operation	<ul> <li>Heating according to the time program (lines 5 to 11)</li> <li>Temperature setpoints according to the heating program</li> <li>Protective functions active</li> <li>Changeover on the room unit active</li> <li>Automatic summer / winter changeover (ECO functions) and automatic 24-hour heating limit active</li> </ul>
	Continuous operation	<ul> <li>Heating mode with no time program</li> <li>Temperature adjustment with the setpoint knob</li> <li>Protective functions active</li> <li>Changeover on room unit inactive</li> <li>Automatic summer / winter changeover (ECO functions) inactive</li> </ul>
	Stand-by	<ul> <li>Heating OFF</li> <li>Temperature according to frost protection</li> <li>Protective functions active</li> <li>Changeover on room unit inactive</li> <li>Automatic summer / winter changeover (ECO functions) and automatic 24-hour heating limit active</li> </ul>

### Illuminated buttons

Settings on the controller

The selected operating mode is indicated by illuminated buttons. A number of functions can cause the displayed selection to change. The following table shows the possible statuses. The following table shows the possible statuses:

Function	Effect on button and meaning
Heat generation lock line 170 = 3 or 174 = 2	<ul> <li>Selected HC operating mode button flashes when contact H1 or H2 is closed</li> <li>D.h.w. operating mode button flashes when switched on</li> </ul>
Changeover of operating mode line 170 = 0	<ul> <li>HC operating mode button flashes when contact H1 is closed</li> <li>D.h.w. operating mode button flashes when switched on</li> </ul>
Changeover of operating mode line 170 = 1	<ul> <li>Selected HC operating mode button flashes when contact H1 is closed</li> <li>D.h.w. operating mode button will not be affected</li> </ul>
Changeover of operating mode HC1 line 170 = 5 or line 174 = 3	<ul> <li>Operating mode HC1 flashes when contact H1 or H2 is closed</li> <li>D.h.w. operating mode button will not be affected</li> </ul>
Changeover of operating mode HC2 line 170 = 6 or line 174 = 4	<ul> <li>Operating mode HC2 flashes when contact H1 or H2 is closed</li> <li>D.h.w. operating mode button will not be affected</li> </ul>
Minimum setpoint of flow temperature line $170 = 2$ or $174 = 1$ Heat demand DC 010 V	<ul> <li>Selected HC operating mode button flashes when contact H1 or H2 is closed</li> <li>D.h.w. operating mode button will not be affected</li> <li>Selected HC operating mode button flashes when H1</li> </ul>
line 170 = 4 Central stand-by switch line 147 = 1	<ul> <li>demand is valid</li> <li>D.h.w. operating mode button will not be affected</li> <li>HC operating mode  flashes</li> <li>D.h.w. operating mode button will not be affected</li> </ul>

### Settings on the room unit

Occupancy button	<ul> <li>HC operating mode Auto flashes when occupancy</li> </ul>		
	button is active.		
	D.h.w. operating mode button will not be affected		
Holiday function	<ul> <li>HC operating mode Auto flashes when holiday</li> </ul>		
	function is active		
	• Depending on the setting made on line 123, the d.h.w.		
	operating mode button flashes when switched on		

### Effect of room unit

Changeover of the operating mode on the room unit is active only when the controller is in automatic mode AutoO.


The room temperature is transmitted to the controller via PPS, independent of the selected operating mode.


# 1.2 Operating mode of d.h.w. heating

Benefit	Selection of d.h.w. heating mode independent of heating operation. Selection is made directly on the user interface					
Setting	D.h.w. heating is selected by pressing the respective button on th interface.	e controller's user				
Effect Required settings	<ul> <li>By pressing the respective button, d.h.w. heating is switched on or off.</li> <li>D.h.w. heating OFF - button dark.</li> <li>D.h.w. is not being heated. Frost protection remains active, however, and prevents the storage tank temperature from falling below a certain level</li> <li>D.h.w. heating ON - button illuminated. The d.h.w. is heated according to the settings made</li> </ul>					
	Setting	Setting				
	Time switch program 3	19-25				
	Nominal setpoint of the d.h.w. temperature	26				
	Summer / winter changeover HC1 and HC2 (when using an electric immersion heater)					
	Assignment of d.h.w. heating	123				
	Reduced setpoint of d.h.w. temperature	120				
	D.h.w. heating program	121				
	D.h.w. charging	124				
	Type of d.h.w. demand	125				

### 1.3 Nominal room temperature setpoint

Benefit	Straightforward and direct setting of the required nominal room temperature setpoint.				
Description	The heating system uses 3 different setpoints that can be adjusted: The nominal room temperature setpoint described here The reduced room temperature setpoint (setting on line 27) The frost protection setpoint of the room temperature (setting on line 28).				
Setting	The nominal room temperature setpoint is preadjusted with the setpoint knob. It is located on the controller front for direct access by the user.				



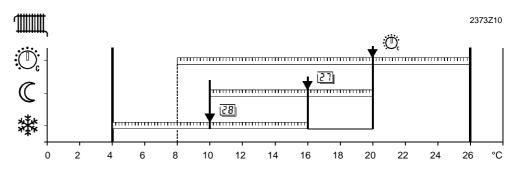

Room temperature setpoint setting ranges

27 Setting "Reduced room temperature setpoint"

28 Setting "Frost protection setpoint of room temperature"

# Effect of temperature setting


When the nominal room temperature setpoint is active, the rooms will be heated according to the adjustment made with the setpoint knob. Effect in the various operating modes:

Operating mode	Effect of knob adjustment
Auto	Adjustment acts on the heating periods
	Adjustment acts continuously
Ū.	Adjustment has no effect

Note

The adjustment made with the setpoint knob has priority over the reduced room temperature setpoint entered (line 27). Especially in a situation when the adjustment made with the knob is lower.

ExampleDuring the heating periods, the nominal room temperature setpoint is maintained. The<br/>heating periods are in accordance with the settings made on lines 6 through 11.

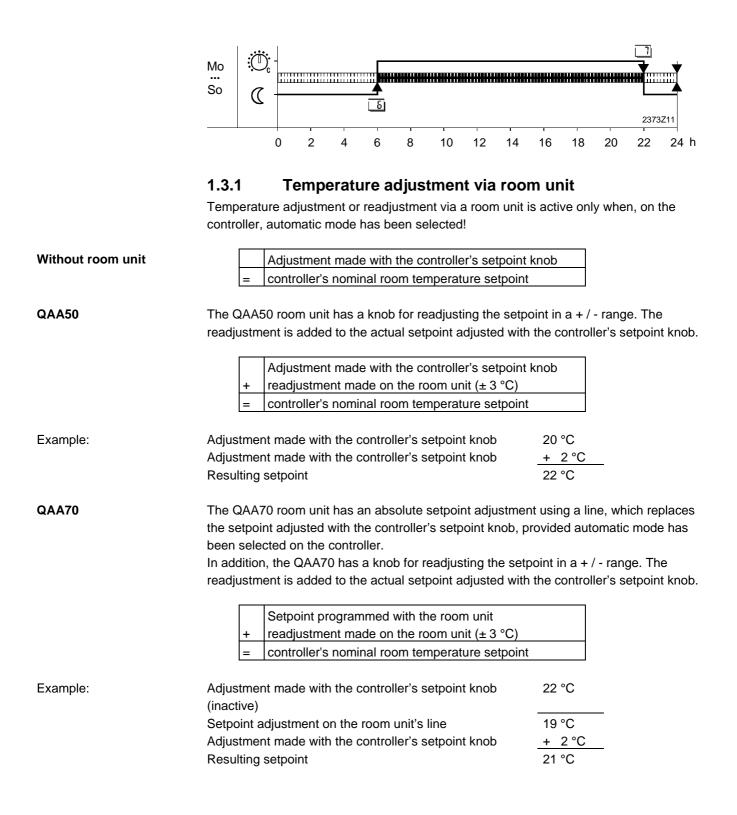

#### Heating circuit selection button 1.4

The 2 heating circuits are separately adjustable

Benefit

Description

Setting



setting values is provided.

1. Before making a setting, the required heating circuit must be selected with the heating circuit selection button.

2. Then, the setting for the function can be made as usual.

The controller provides separate control of 2 heating circuits . Separate settings are offered for a number of functions. For these settings, a double function with 2 different

Display The heating circuit selection button has 2 LEDs, one at the top and one at the bottom of the button, indicating the heating circuit selected.

Siemens Building Technologies Landis & Staefa Division

### 1.5 Chimney sweep

Benefit	At the touch of a button, the plant is ready for making flue gas measurements.			
Description	A function designed specifically for carrying out periodic flue gas measurements.			
Setting	Activation:The chimney sweep function is activated by pressing this button. It is accessible only when the cover of the controller is openDeactivation:By pressing one of the operating mode or function buttons By pressing again the chimney sweep button Automatically after one hour By selecting a number in the output test			
Adaption of output	<ul> <li>During the time the chimney sweep function is activated, the heat output can be increased or decreased by pressing the + / - buttons.</li> <li>With multistage burner: The second burner stage can be switched on or off.</li> </ul>			
Notes	<ul> <li>When leaving the function, the controller will automatically return to the operating mode previously selected</li> </ul>			
LED	When the LED in the chimney sweep button is lit, the chimney sweep function is active.			
Effect				
	Multi-stage burner: BMU	Burner stages 1 and 2 will be switched on.The chimney sweep button has no effect. But the forcedsignals will be generated as described below if the chimneysweep function on the BMU is activated.		
Multi-stage burner	The boiler's switching differential will not be taken into consideration. To ensure continuous burner operation, the only switch-off point used is the boiler temperature's maximum limitation (TKmax). First, all connected loads will be locked to ensure the boiler temperature will reach the setpoint of 64 °C as quickly as possible. When the minimum temperature of 64 °C is attained, the available heating circuits are switched on one by one, using a dummy load, to make sure the heat generated by the boiler is drawn off so that the burner will remain in operation.			
BMU	In the case of a BMU, the loads will immediately be released.			
Display				

### 1.6 Manual operation

Benefit	Manual heating o	Manual heating operation in case the control system fails.					
Description	manually adjuste	Manual operation is an operating mode in which all required plant components must be manually adjusted and monitored. The controller's control functions have no more impact on the relays.					
Boiler temperature	•	The required boiler temperature setpoint must be manually adjusted on the boiler's control thermostat. The boiler temperature is displayed on setting line 56.					
Room temperature	•	The temperature of the heating circuits can be adjusted with the mixing valve, which must also be set to manual operation. The room temperature is still displayed on setting line 33.					
Setting							
	Activation:	Manual operation is activated by pressing this button. It is accessible only when the cover of the controller is open					
© Zul	Deactivation:	<ul><li>Deactivation:</li><li>By pressing one of the operating mode buttons</li><li>By pressing again the manual operation button</li></ul>					

Note

Effect

As soon as manual operation is activated, the following values are used for the heat demand:

When deactivating the function, the controller will automatically return to the operating

- For space heating: Maximum limitation of flow temperature setpoint (line 107)
  For the d.h.w.:
  - Nominal setpoint of d.h.w. temperature (line 26) + setpoint boost of d.h.w. flow temperature (line 126)
- For the minimum flow temperature setpoint and heat demand DC 0...10 V: Minimum setpoint of flow temperature, contact H (line 171)

The outputs	s will be switc	hed to the	following	states:

mode previously selected.

Output	Terminals	Status
Burner stages 1 and 2	K4, K5	ON
Heating circuit pump	Q2, Q6	ON
D.h.w. charging pump	Q3	ON
D.h.w. diverting valve	Y3	OFF
Mixing valve outputs	Y1 / Y2, Y5 / Y6	OFF (de-energized)

Note

The following functions are no longer active in manual operation: maximum limitation of boiler temperature:

# $(1) (2) = 10 \quad 1 \le \sqrt{2} \le \sqrt{$

Display

### Setting the clock

Benefit	Automatic changeover from summer- to wintertime, and vice versa. Fast and easy-to-understand time settings.
Description	To ensure proper operation of the heating program, the 24-hour time switch with the time of day and weekday must be correctly set.
Note	Between setting of date (line 3) and setting of weekday (line 2) there is no link. This means that when the set date falls on a Wednesday, for example, Wednesday as a weekday must also be set.
Summer- / wintertime	Automatic summer- / wintertime changeover adapts the time of day automatically. Also refer to "summer- / wintertime" in Index.
System time	The time of day can be set from a remote location via the bus system, provided clock operation is appropriately set. Also refer to "clock mode" in Index.

#### Time of day 1.7

Setting	Setting range	Unit			
	00:0023:59	Hour : Minute			
Effect	The controller's clock time is set in agreement with the correct time. This setting is important to make certain the controller's heating program will operate correctly.				
Notes	During the setting procedure, the clock continues to run Each time the + or - button is pressed, the seconds are reset to zero				

#### Weekday 1.8

Setting	Setting r	range		Unit			
<u> </u>	17			Day			
Effect		The time switch will be set to the selected weekday. This setting is important to make certain the controller's heating program will operate correctly.					
Weekday table	1 2 3 4	= = =	Monday Tuesday Wednesday Thursday		5 6 7	= = =	Friday Saturday Sunday

### 1.9 Date (day, month)



Effect

Setting

Day and month of the controller will be based on this setting. This setting of date is important to make certain the controller's holiday program and summer- / wintertime changeover will operate correctly.


	1.10 Year				
Setting	Setting range	Unit			
<u> </u>	19992099	Year			
Effect	The year of the controller will be based on this setting. This setting of year is important to make certain the controller's holiday program and summer- / wintertime changeover				

will operate correctly.

Siemens Building Technologies Landis & Staefa Division

Benefits	The heating system operates only if there is demand for heat. The user can set the heating periods to suit his lifestyle. Energy can be saved by making adequate use of the heating program.					
Description	The time switch program consists of the switching times to be entered for the weekda or the 7-day block. The controller has 3 time switch programs that function independently of one another. Time switch programs 1 and 2 are to be entered on the same lines, but must be preselected with the heating circuit selection button . This time switch program is basically intended for heating circuits 1 and 2.					
	1.11 Pre-selection of weekday: for time switch programs 1 and 2					
Description	This is a preselection of the weekdays or of the 7-day block to set the switching times for time switch program 1. The heating program thus set becomes active with automatic mode AutoO.					
Setting						
5	Setting range Unit					
	1-77-day block17Individual days					
Important	This setting must be made before the switching times are entered! For every day on which other switching times shall apply, the preselection of the individual day with subsequent entry of the switching times must be repeated					
Effect	This setting is used to select either the whole week (1-7) or individual days (17).					
Entry of <b>1-7</b>	<b>7-day block</b> Entry of the switching times from line 6 to 11 is identical for every day from Monday through Sunday.					
	0 2 4 6 8 10 12 14 16 18 20 22 24 h Switching time for nominal setpoint Switching time for reduced setpoint					
Entry of <b>17</b>	<ul> <li>Individual days</li> <li>The setting of the switching times from line 6 through 11 is entered only for the individual day selected here.</li> <li>→ Tip</li> <li>First, choose the 7-day block (1-7) to enter the switching times that apply to the majority of days; then, select the individual days (17) to make the required adjustments.</li> </ul>					

Example:

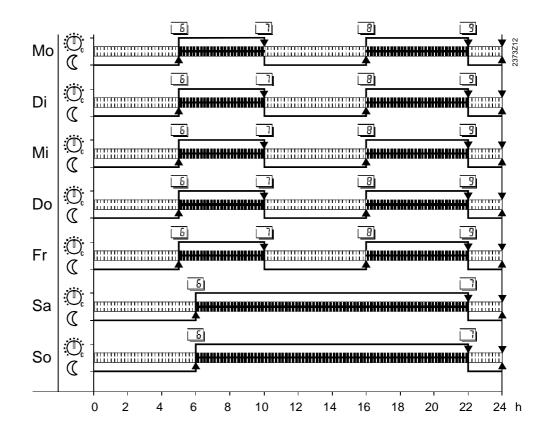

# 1.12 Switching times of time switch programs 1 and 2

Description	This is the setting of the switching times of time switch program at which the temperature setpoints for the relevant heating circuit will change. The heating program thus set becomes active with automatic mode Auto					
Setting	Setting range	Unit	Factory setting			
L <u>6</u> ] [ <u>]</u> ]	:24:00	h : min	See "Program overview" below			
Important	First, select the weekday fo	r which the switching times sha	all be entered!			
Note	The controller then makes a check to ensure the entries have been made in the correct order.					
Effect	At the times entered, the program will switch to the respective temperature setpoints. The table below shows at what times the setpoints will be activated. Entry: : Switching point inactive 00:0024:00 At the time entered, heating to the respective temperature is ensured.					
Program overview	Line Switching point	Temperature setpe	oint Standard			
	<u>δ</u> Switch-on time	period 1 Setpoint of knob	06:00			
	Switch-off time	period 1 Reduced setpoir	nt 22:00			
	Switch-on time	period 2 Setpoint of knob	:			
	Switch-off time	•				
	Switch-on time	period 3 Setpoint of knob				
	Switch-off time	•				
Effect of room unit		ritch program can be set on bot room unit. It is always the last a	th the controller (as described			


Benefit	D.h.w. is heated only if required. The user can set the d.h.w. heating times to suit his lifestyle. Energy can be saved by making adequate use of the time switch program.				
Description	The time switch program consists of the switching times to be entered for the weekdays or the 7-day block. The controller has 3 time switch programs that function independently of one another. The d.h.w. time switch program is always used for d.h.w. heating.				
	1.13 Preselect	ion of weekday for time switch			
	program	3 (d.h.w.)			
Description	This is a pre-selection of the weekdays or the 7-day block used for the switching time settings of the d.h.w. time switch program. The time switch program thus set is activated by pressing the d.h.w. operating mode button <sup>프</sup> .				
Setting	Setting range 1-7 17	Unit 7-day block Individual days			
Important	<ul> <li>This setting must be made before the switching times are entered!</li> <li>For every day on which other switching times shall apply, the preselection of the individual day with subsequent entry of the switching times must be repeated</li> </ul>				
Effect	<ul> <li>This setting is used to select either the whole week (1-7) or individual days (17).</li> <li>Entry:</li> <li>1-7 7-day block: Entry of the switching times on lines 20 through 25 is identical for every day from Monday through Sunday</li> </ul>				
	<ul><li>17 Individual days: Entry of the switching t individual day selected</li></ul>	imes on lines 20 through 25 is made <b>only</b> for the here			
Example:	For an example, refer to the g	raph in the previous section "Time switch program 1".			

# 1.14 Switching times of time switch program 3 (d.h.w.)

Description	This is the setting of the switching times for d.h.w. time switch program at which the d.h.w. temperature setpoint will change. The time switch program thus set is activated by pressing the d.h.w. operating mode button 蹐.					
Setting	Setting range		Unit		Factory setting	g
<u> 20</u>   <u>25</u>	:24:	00	h : min		See "Prog below	ram overview"
Important	First, selee	ct the weekday for	which the s	witching times shall	be entered	!!
Note	The controller then makes a check to ensure the entries have been made in the correct order.					
Effect	At the times entered, the program will switch to the respective temperature setpoints. The table below shows at what times the setpoints will be activated. Entry: : Switching point inactive 00:0024:00 At the time entered, heating to the respective temperature is ensured.					
Program overview	Line	Switching point		D.h.w temperature	setpoint	Standard
	20	Switch-on time pe	eriod 1	Nominal setpoint	28	06:00
	21	Switch-off time pe	eriod 1	Reduced setpoint	120	22:00
	22 23	Switch-on time pe		Nominal setpoint	<u>26</u> 120	:
		Switch-off time pe		Reduced setpoint		:
	24	Switch-on time pe	eriod 3	Nominal setpoint	26	:
	25	Switch-off time pe	eriod 3	Reduced setpoint	120	:

### D.h.w. values

# 1.15 Nominal setpoint of d.h.w. temperature (TBWw)

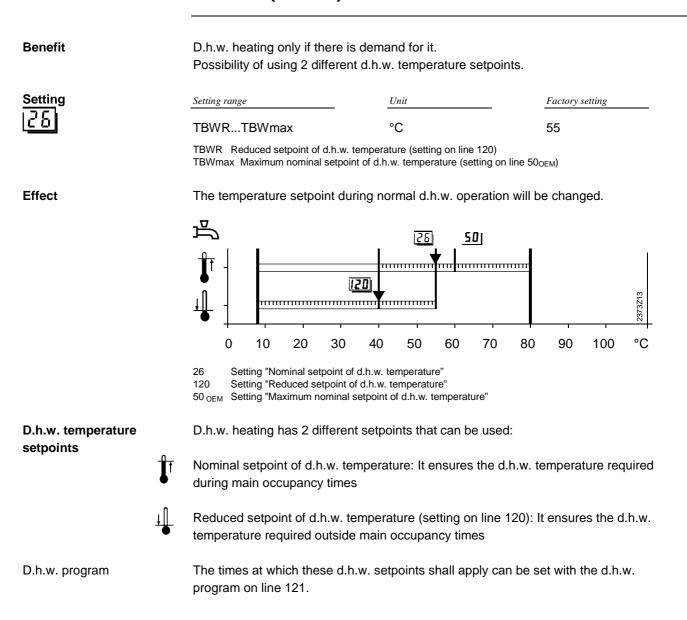

### Heating circuits

# 1.16 Reduced setpoint of room temperature (TRRw)

Benefit	Lower room temperatures du Energy savings.	iring non-occupancy times, e.g	. during the night.
Description	The reduced room temperatu The nominal room temperatu	ferent setpoints that can be ad ure setpoint described here. ure setpoint (to be adjusted with of the room temperature (settin	n the setpoint knob).
Setting	Setting range	Unit	Factory setting
27	•	°C protection (setting on line 28) setpoint (to be adjusted with the setpoin	16 nt knob)
Note		evel cannot be set, the adjustm t possible to set a value above	•
	1		2373Z10

0 2 4 6 8 10 12 14 Room temperature setpoint setting ranges

27 Setting "Reduced room temperature setpoint "


28 Setting "Frost protection setpoint of room temperature"

With this setting, the reduced room temperature setpoint will change to the level required outside the heating periods  $\mathbb C$  .

Example

Effect

The heating periods are in accordance with the settings made on lines 6 through 11.

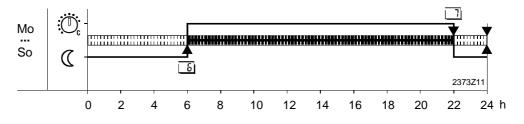

°C

26

20

16


18

22

24

# 1.17 Frost protection setpoint of room temperature (TRF)

Benefit	Protection of building against frost.				
$\triangle$	Caution This function is ensured only	Caution This function is ensured only when the heating plant operates properly!			
Description	Frost protection is an automatic switching on function which is activated when the outside temperature falls below freezing.				
Setting	Setting range 4TRRW TRRW Reduced room temperature	<i>Unit</i> °C setpoint (setting one line 27)	Factory setting 10		
Effect	This setting will change the frost protection setpoint of the room temperature.				
Frost protection for the building	In operating mode $\textcircled{O}$ , the room temperature is prevented from falling below a certain level. This means that the frost protection setpoint of the room temperature $\bigstar$ will be maintained.				
	4111111		2373Z10		

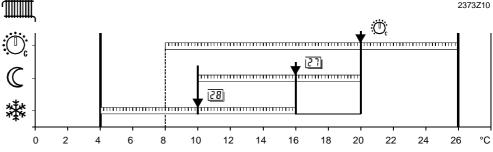


Room temperature setpoint setting ranges

27 Setting "Reduced room temperature setpoint"

28 Setting "Frost protection setpoint of room temperature"

# 1.18 Summer / winter changeover temperature HC1 and HC2 (THG)

Benefit	<ul> <li>Fully automatic operation throughout the year.</li> <li>The heating will not be switched on when the outside temperature drops for short periods of time.</li> <li>Additional savings function.</li> <li>Separate changeover of the heating circuits.</li> </ul>					
Description		/ winter changeover temperatur eover of the heating plant.	e is the criterion for automatic summer /			
Setting	Setting range	Unit	Factory setting			
29	830.0	°C	17			
Effect	By changing	the setting, the respective perio	ds of time will be shortened or extended.			
	Entry:					
	Increase:	Winter operation will start <i>earlier</i> Summer operation will start <i>later</i>				
	Decrease:	Winter operation will start <i>later</i> Summer operation will start <i>earlier</i>				
Notes	The summer / winter changeover temperature can act either locally or on other dev in the system (also refer to section "Effect of summer / winter changed temperature") Also refer to "effect of summer / winter changeover function" in Index.					
	This function only acts in automatic mode					
	The display will show "ECO"					
Changeover	To determine changeover, the setting of the summer / winter changeover temperatur ( ± a fixed switching differential) is compared with the attenuated outside temperatur Also refer to "attenuated outside temperature" in Index.					
		(from winter to summer)	TAged > THG + 1°C			
	Heating ON	(from summer to winter)	TAged < THG - 1°C			

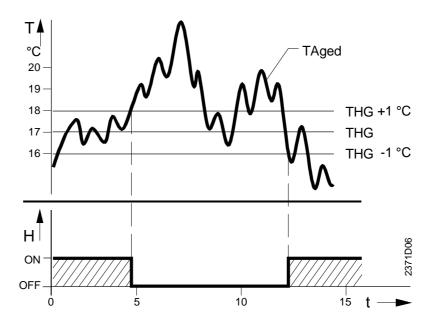

Changeover between summer and winter operation

TAged Attenuated outside temperature THG Summer / winter changeover temperature

Temperature

т Time

t Н

Heating

# 1.19 Slope of heating curve (S)

Benefit	Constant room temperature in spite of outside temperature variations.								
Description	The controller generates the flow temperature setpoint only for heating circuit 1, based on the selected heating curve.								
Setting			Setting rat	nge		Unit	_	Factory set	tting
1 <u>30</u> 1	Heating circ Heating circ		2.540 	).0 / 2.540	0	Incremen Incremen		15.0 15.0	
Effect	By changing Entry:		-			-			or decreased.
	:-	buildir		e plant <b>w</b>				•	tion for the the boiler and
	2.540.0	All fur	nctions of	the heati	ng ciro	cuit are acti	vated		
	Increase:	The fl	ow tempe	erature wi	ll be <b>r</b> a	<b>aised</b> wher	n the outsi	de tempe	erature drops
	Decrease:	The fl drops	-	erature wi	ll be <b>r</b> a	aised less	when the	outside t	emperature
Note	This setting 53. The swit changes the	ching o	n and off	of the he	ating	circuit throu			ayed on line - – or a value
The heating curve	Using the heating curve, the controller generates the flow temperature setpoint, enabling the system to maintain a constant room temperature even without using a room sensor. The steeper the slope of the heating curve, the higher the flow temperature setpoint at low outside temperatures. Comfort is considerably enhanced when using a room sensor.								
	TV °C 100 90 80 70 60 50 40 30 20 Heating circuit TV Flow to	10 diagram emperatur				-20	-30	20 17,5 15 12,5 10 7,5 5 2,5 C TA	

Flow temperature setpoint

The flow temperature setpoint determined in this way serves as a setpoint request for generating the boiler temperature setpoint. Also refer to "generation of boiler temperature setpoint" in Index.

### 1.20 Actual value of room temperature (TRx)

Setting	Display	Unit
33	00.50°C	°C
Effect	The temperature measure line.	ed with the room unit will automatically be displayed on this
Special displays	––– No valid ro	om sensor connected
	1.21 Actual	value of outside temperature (TAx)
Setting	Display	Unit
34	- 50.0 + 50.0	°C
Effect	The temperature measure this line.	ed with the outside sensor will automatically be displayed on
Special displays		n open-circuit or no sensor connected
	0.0 °C Sensor with	n short-circuit
Note		tion about resetting the attenuated outside temperature to the refer to "attenuated outside temperature" in Index.

Benefit	Useful information for service and maintenance staff. No additional mechanical counters required.			
	1.22	Burner hours run stage 1 (tBR1)		
Description	Auxiliary va	lue for ascertaining the amount of energy consumed.		
Setting	Display	Unit		
<u>35</u>	065535	Hours		
Effect	The current number of hours run of burner stage 1 or of a BMU will automatically b displayed on this line.			
	1.22.1	Counting the hours run		
With multi-stage burner	The hours run of burner stage 1 are counted based on the signal received from output K4. The voltage of the output signal is AC 230 V. Each time 2 full operating hours are registered, the new value will be written to non-volatile memory. Only full hours are displayed, and no minutes.			
Note	This means that if the display is checked again after a short period of time, it may still show the previous reading, if the burner has not yet completed another 2 operating hours.			
With BMU	When using	a BMU, the value transmitted will be displayed via PPS.		
	1.22.2	Average burner running time		
	ascertain th This informa	th the display of the number of burner starts (line 37), it is possible to e average burner running time. ation makes it possible to determine if: is correctly sized		

- the burner has become dirty

### 1.23 Burner hours run stage 2 (tBR2)

Description	Auxiliary value for ascertaining the average load on the boiler.			
Setting	Display	Unit		
<u>36</u>	065535	Hours		
Effect	The actual number of hours line.	run of burner stage 2 will automatically be displayed on this		
	1.23.1 Counting th	ne hours run		
Note	Counting takes place indepe thermal reset limit thermosta that such thermostats do not hours will be counted. Each time 2 full operating ho volatile memory. Only full ho This means that if the display	e 2 are counted with the signal received from output K5. ndent of whether manual reset safety limit thermostats or ts switch off the safety loop. It should therefore be ensured affect burner operation. If this is not observed, too many urs are registered, the new value will be written to non- urs are displayed, and no minutes. y is checked again after a short period of time, it may still the second burner stage has not yet completed another 2		
		of burner starts stage 1		
Description	Auxiliary value for ascertainin	ng the average burner running time.		
Setting	Display	Unit		
<u>37</u>	065535	Number		
Effect Counting	The hours run of burner stag K4. The voltage of the output is updated each time the bur	is written to non-volatile memory at 2-hour intervals or		

# 1.25 Number of burner starts stage 2

Description	Auxiliary value for ascertaining the average burner running time.		
Setting	Display	Unit	
<u>18</u>	065535	Number	
Effect	The number of start	of burner stage 2 will automatically be displayed or	this line.
Counting	The number of start	of burner stage 2 are counted with the signal received	ed from output
	K5. Display of the number of burner starts is updated each time the burner is started		
	up.		
	The number of burner starts is written to non-volatile memory at 2-hour intervals or		
	whenever there is a	power failure.	

Maintenance

### 1.26 Standard times

Benefit	Straightforward resetting of all time switch programs to their standard values.				
Description	The standard time program resets the time settings of all time switch programs. For this purpose, the controller is supplied with non-volatile factory settings.				
	Setting <b>39</b> The standard time program		soon as the d	isplay cha	inges to 1.
	Display	Unit			
	0 / 1	-			
Caution	In that case, the individua	l settings will be lo	ost!		
Effect	<ul> <li>The time settings will be overwritten with the standard values. This applies to the following settings:</li> <li>Only the switching times of time switch program 1 or 2</li></ul>				
standard values					
_	Switching point	Setting line			Standard time
	Period 1 ON	6	-	20	06 : 00
	Period 1 OFF	7	-	21	22:00
	Period 2 ON	8	-	22	:
-	Period 2 OFF	9	-	23	:
	Period 3 ON	10	-	24	:
-	Period 3 OFF	11	-	25	:
	Time switch program				

1 or 2 - 3

### Holidays

Benefit	Automatic operating mode changeover during the holiday period.		
Description	The holiday function includes 3 settings. There are 8 holiday periods per year available		
	for which, if used, the start and end dates must be entered.		
Setting	First, the required holiday period must be selected for which the 2 dates are to be		
	entered.		
Reset	The holiday period can be cleared by pressing simultaneously on the + and – bu		
	for 3 seconds on the operating line for start or end of the holiday period. Then, the		
	display will show		
Important	The holiday program is only active in automatic mode AutoO.		
	The dates entered apply as follows:		
	Activation 00:00 hrs of the first day of the holiday period		
	Deactivation 24:00 hrs of the last day of the holiday period		
Manual deactivation	When selecting operating mode $oldsymbol{ar{\boxtimes}}$ or $oldsymbol{\dot{\cup}}$ , the holiday function no longer acts on		
	space heating and d.h.w. heating. But the holiday function remains activated in	the	
	background. This means that if automatic mode Auto is selected again, the holi		
	function will be resumed.	uuy	
	The d.h.w. mode can be changed while the holiday function is active.		
	The diff.w. mode bar be changed while the holiday function is delive.		
Display	When the holiday period is activated, Auto flashes. The d.h.w. operating mode button		
	flashes depending on the setting made on line 123 and when d.h.w. mode is activated.		
		<i>.</i>	
Note	The dates of the holiday period will be cleared as soon as the holiday period is over	_	
		•	
Effect	During the selected holiday periods, the heating circuits will be switched off or		
	to the frost protection setpoint is made.	3	
D.h.w.	D.h.w. heating is always switched in accordance with its assignment to the heating		
	circuits (also refer to "d.h.w. assignment" in Index). This means that d.h.w. heating is	3	
	also switched to holiday mode as soon as all assigned heating circuits are in holiday		
	mode.		
Room unit	Effect with room unit:		
	The holiday function of the room unit is taken into consideration but the entries mad	е	
	on the controller have priority.		
	. ,		
	1.07 Holidov poriod		
	1.27 Holiday period		
Setting	Display Unit		
<u>ิ นก</u> ั			
	18 -		
	1.28 Beginning and end of holiday period		
Setting	Display Unit		

01.01...31.12

41

42

Landis & Staefa Division

Day.Month

### 1.29 Indication of BMU error code

Benefit Description	Straightforward checking of plant. Fault tracing is made easier. The controller can register and store a fault message with the error code. The faults are indicated on this operating line.		
Setting 낙렬	DisplayUnit0255Error code		
Effect	The fault entry will automatically be displayed on this operating line.		
Note	Fault messages cannot be acknowledged. They disappear only if the appropriate fault has been rectified.		
Display	The display shows the error code. If there is no fault message, or if no BMU is connected, there will be no display. The meaning of the different error codes depends of the make of BMU used. For this reason, no overview of all the different error codes can be given here. For details, please refer to the technical documentation of the relevant product.		
Example	$ \bigcirc \square \bigcirc \square \bigcirc \square \land \square$		

If there is a BMU error code, operating line 50 also displays a general BMU fault (error code 150).

64/184

Note

# 1.30 Indication of faults

Benefit	Straightforward checking of plant. Fault tracing is made easier.		
Description	The controller indicates faults that may have occurred in the controller itself or in the system. In normal operation, the display shows "Er" if a fault has occurred		
	III HOIIIlai	operation, the display shows in a radit has occurred	
Setting	Display	Unit	
[ <u>50]</u>	0255	-	
Effect Note	The first entry in the fault list will automatically be displayed on this line. By pressing $\vec{\Box}$ , it is possible to switch between fault messages.		
Fault messages	The controller can store a maximum of 2 fault messages. The faults message will be cleared only after the cause of the fault has been removed. If additional faults are present, they will be stored as soon as storage capacity becomes available.		
Device faults		t can occur on the controller:	
	Display	Description of fault	
	Blank	No fault	
	10	Outside sensor	
	20	Boiler sensor	
	28	Flue gas temperature sensor	
	30	Flow temperature sensor 1	
	32	Flow temperature sensor 2	
	50	D.h.w. temperature sensor connected to B3	
	52	D.h.w. temperature sensor connected to B31	
	58	D.h.w. thermostat	
	61	Fault room unit (A6)	
	62	Wrong room unit (A6)	
	66	Fault room unit 2 (A7)	
	67	Wrong room unit 2 (A7)	
	80	No LPB communication	
	81	Short-circuit LPB	
	82	Address collision on LPB (same address several times)	
	86	Short-circuit PPS (A6)	
	87	Short-circuit PPS (A7)	
	100	2 clock masters present	
	140	Inadmissible LPB device or segment number	
	146	Inadmissible plant configuration	
	150	General BMU fault	
	162	Fault contact H2	

### **Faulty devices**


Other devices that may develop faults and whose faults are communicated:

Display	Description of fault
20 00.01	Fault with address of the faulty device

The first 2 digits give the error code (20). The next 2 digits indicate the segment address of the faulty device (00.). The last 2 digits indicate the device address of the faulty device (.01).

Display

Example of a display after a fault has occurred:

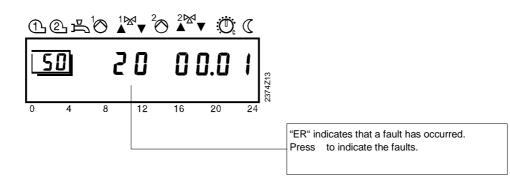

# 2 Description of heating engineer settings

### Service values

	2.1	Output test		
Benefit	Connections can be checked prior to commissioning. Faults can be pinpointed faster.			
Description	Also terme	ed relay test, which is used to check the	wiring and the configuration.	
Setting	Setting range	Unit	Factory setting	
<u>5 /</u>	010	Increment	0	
Effect		t test will automatically become availabl test step, the respective output will be a		
Test sequence		equence is arranged in the form of a rin ther forward or backward by pressing th	•	
Note	For more in	nformation, refer to "commissioning" in	Index.	
	Test step 0	All outputs are switched according to normal	control operation	
	Test step 1	All outputs are deactivated		
	Test step 2	Burner stage 1 (K4) is activated		
	Test step 3	Burner stages 1 and 2 (K4 + K5) are activated	t	
	Test step 4	D.h.w. charging pump / diverting valve (Q3 / )	(3) is activated	
	Test step 5	Mixing heating circuit / boiler pump (Q2) is ac	tivated	
	Test step 6	Mixing valve HC1 OPEN (Y1) is activated		
	Test step 7	Mixing valve HC1 CLOSED (Y2) is activated		
	Test step 8	Heating circuit pump HC2 (Q6) is activated		
	Test step 9	Mixing valve HC2 OPEN (Y5) is activated		
	Test step 10	Mixing valve HC2 CLOSED (Y6) is activated		

### 2.2 Input test

Benefit	Commissioning is facilitated. Faults can be pinpointed faster.			
Description	Also termed sensor test, which is used to check the wiring and the configuration.			
Setting	Setting range		Unit	Factory setting
52	09		Increment	0
Effect	•		Ily become available on ective input will be displa	this line. iyed so that it can be checked.
Test sequence	The test sequence is arranged in the form of a ring counter. This means it can be run through either forward or backward by pressing the + / - buttons.			
Note	For more information, refer to "commissioning" in Index.			<b>}X</b> .
	Test step 0	Display of boiler ter	nperature acquired with sensor	B2
	Test step 1	Display of d.h.w. te	mperature acquired with senso	r B3
	Test step 2	Display of input B3	I/H2 according to the function s	selected on line 174 [°C or ooo or].
	Test step 3	Display of flow tem	perature HC1 acquired with det	ector B1
	Test step 4	Display of flow tem	perature HC2 acquired with ser	isor B12
	Test step 5	Display of outside t	emperature acquired with sense	or B9
	Test step 6	Display of room ten	nperature acquired with room u	nit connected to A6
	Test step 7	Display of room ten	pperature acquired with room u	nit connected to A7
	Testschritt 8	Display of the flue g	as temperature acquired with s	sensor B8
	Testschritt 9	Display of input H1	according to the function select	ted on line 170 [°C / 000 /].

# 2.3 Display of plant type

Benefit	Plant structure is easy to understand. Straightforward checking of configuration.		
Description	Displays the plant type used.		
Setting	<u>Display</u> 0127	<u>Unit</u>	
Effect	The number of the current plant type will automatically be displayed on this operating line.		
	Display: 0 Invalid plant cc	onfigurations	
	1127 Valid plant con (refer to sectio	figurations n "Plant types")	
Plant type	<ul> <li>Based on the connected peripheral devices and parameter settings, the controlle ascertains the current plant type.</li> <li>The plant type is displayed in the form of a number which corresponds to the pladiagram.</li> <li>Refer to section "Application examples" for the various types of plant with the recepripheral devices.</li> <li>The following factors have an impact on the generation of the type of plant: <ul> <li>Connection of a d.h.w. sensor to B31 / H2:</li> <li>Connecting a d.h.w. sensor or thermostat to B3</li> <li>Setting operating line "d.h.w. controlling element" (line 128)</li> <li>Input signal at B1/B12</li> <li>Setting operating line "Heating curve slope HK2" (line 30) - or value between 2 40)</li> <li>Setting the type of heat source (line 80)</li> </ul> </li> </ul>		

### Actual values

Benefit	Display of the actual temperatures acquired with the sensors.		
Sensor value	Each sensor acquires 2 sensor values. The physical sensor value is the value measured at the controller's terminals. The logic sensor value is the value finally selected from the various sensor sources (physically or via communication) based on certain criteria. Under certain circumstances, the source of the logic sensor value cannot be immediately identified. The logic sensor values are displayed on the operating lines of the actual values. The physical values appear on the operating line of the input test.		
Effect	The temperature measured will automatically be displayed on this operating line. In general, no setting can be made with the setting buttons, but in certain cases they can be used for making a reset.		
Special displays		No valid sensor connected	
	2.4	Actual value of flow temperature	
Description	•	acquired with sensor B1/B12 in the flow of the mixing heating circuit is a ne control of the mixing valve.	
Setting	Display	Unit	
<u>55</u>	0140	°C	
	2.5	Actual value of boiler temperature	
Description	Temperature	acquired with sensor B2 in the boiler or by the BMU.	
Setting	Display	Unit	
56	0140	°C	
	2.6	Actual value of common flow temperature	
Description	source. Wher boiler or from	flow temperature is the flow temperature delivered by the relevant heat in used as a heat generation controller, it is the flow temperature from the the buffer storage, depending on the type of plant. If the controller is e, it is the actual value delivered via LPB.	
Setting	Display	Unit	
51	0140	°C	

### Actual value 1 of d.h.w. temperature 2.7 (TBWx) Description The higher d.h.w. temperature acquired with the d.h.w. sensor will automatically be displayed on this line. Setting Display Unith °C 0...140 Note If only one d.h.w. temperature sensor is connected, lines 61 and 62 will show the same value. 2.8 Actual value 2 of d.h.w. temperature Description The lower d.h.w. temperature acquired with the d.h.w. temperature sensor will automatically be displayed on this line. Setting Display Unit 62 °C 0...140 Note If only one d.h.w. sensor is connected, lines 61 and 62 will show the same value For information about d.h.w. heating with 2 temperature sensors, refer to section "Input B31/H2" 2.9 Display of maximum flue gas temperature (TGxmax) Description This display shows the highest flue gas temperature acquired since the last reset. Setting Display Unit 0...350 °C Using the + / - buttons, the display can be reset to the current value. For that purpose, both buttons must be pressed together for 3 seconds. The value is reset as soon as the display stops flashing.

Note

In the event of an open-circuit or short-circuit of the sensor, the display maintains the maximum temperature value last measured. This value can be reset after rectification of the fault.

#### 2.10 Attenuated outside temperature (TAxged)

Description		to "attenuated outside temperature" in Index.
	2.11	Composite outside temperature (Taxgem)
<u> </u>	-50+50	°C
Setting	Display	Unit
Description	Also refer to "composite outside temperature" in Index.	



۱ŀ



Display Unit °C -50...+50

## 2.12 Outside temperature source

Benefit	Display and location of actual outside temperature measurement.		
Description	connected to any of the contro The controllers to which no se		controllers, only one outside sensor is required. It can be ollers to deliver its signal via the bus system. ensor is connected adopt the outside temperature signal ntroller to which a sensor is connected.
Setting	<i>Display</i>  00.0114.16		Unit No signal Segment and device address
Effect		ne address of the outside sensor that currently delivers the outside temperature ill automatically be displayed on this line.	
Display	01.02 A	No outside sensor signal Address of outside sensor The first 2 digits represent the segment number (01.) The second 2 digits represent the device number (.02)	

#### **Setpoints**

### 2.13 Display of boiler temperature setpoint

Benefits		Indication of boiler temperature setpoint. Better overview of the plant's operating state. The current boiler temperature setpoint will automatically be displayed on this line.		
Description	The current boiler			
Setting	Display	Unit		
68	0140	°C		
	The setpoint can o	nly be displayed, but not change	ed. The function helps better	

understand the control sequences taking place in the controller. No setpoint is displayed (---) when there is no heat demand from the consumers.

## 2.14 Display of common flow temperature setpoint

Benefits		Display of common flow temperature setpoint. Better overview of the plant's operating state.			
Description	The current commo line.	The current common flow temperature setpoint will automatically be displayed on this line.			
Setting	Display	Unit			
<u> </u>	0140	°C			
	•	nly be displayed, but not changed	•		

understand the control sequences taking place in the controller. No setpoint is displayed (---) when there is no heat demand from the consumers.

## 2.15 Display of d.h.w temperature setpoint

Benefits	Indication of d.h.w. temperature setpoint. Better overview of the plant's operating state.		
Description	The current d.h.w. temperat	ure setpoint will automatically be displayed on this line.	
Setting	<i>Display</i> 0140 The setpoint can only be dis	<i>Unit</i> ℃ played, but not changed.	
Generation of setpoint	<ul> <li>The setpoint can only be displayed, but not changed.</li> <li>The value displayed depends on the following parameters: <ul> <li>Current time of day (operating line 1)</li> <li>Time switch program d.h.w. heating (operating lines 1935)</li> <li>Nominal setpoint of d.h.w. temperature (operating line 26)</li> <li>Reduced setpoint of d.h.w. temperature (operating line 120)</li> <li>Release of d.h.w. heating (operating line 121)</li> <li>Assignment of d.h.w. temperature for the set of the set of</li></ul></li></ul>		
Note	No value () is displayed in – No d.h.w. heating availabl – D.h.w. heating is switched	-	

# 2.16 Display of nominal room temperature setpoint

Benefit	Information about the nominal room temperature setpoint.		
Description	Displays the current nominal room temperature setpoint. The nominal room temperature setpoint is the temperature adjusted on the controller that is aimed for in the rooms in normal operation.		
Setting	<i>Display</i> 0.035.0	<u>Unit</u> ℃	
Effect	The nominal room temperatu	ire setpoint will automatically be displayed on this line.	
Nominal room temperature setpoint	The resulting nominal room temperature setpoint is made up of the adjusted setpoint and a readjustment that may have been made on the room unit: Also refer to "nominal room temperature setpoint" in Index.		

# 2.17 Display of room temperature setpoint (TRw)

Benefit	Information about the room temperature setpoint in the various operating modes.				
Description	Displays the current room temperature setpoint during the respective heating period (normal operation / reduced operation).				
Setting	DisplayUnit035°CWhen selecting the operating line, the current room temperature setpoint is displayed, depending on the operating mode and the time switch program, that is, a selection / combination of the following parameters:				
	<ul> <li>Room temperature setpoint knob</li> <li>Reduced setpoint of room temperature (operating line 27)</li> <li>Frost protection setpoint of room temperature (operating line 28)</li> <li>Readjustments made on the room unit (QAA50 / QAA 70)</li> </ul>				
Note	If there is no heating circuit, the display shows "".				

### 2.18 Display of flow temperature setpoint (TVw)

Benefit Displays the current flow temperature setpoint of the heating circuit. Description When selecting this operating line, the current flow temperature setpoint of the controller's internal heating circuit is displayed. Setting Display Unit 0...140 °C The value displayed corresponds to the flow temperature of the heating circuit that is required for satisfying the demand for heat. The display shows "---" in the following situations: Note - No heating circuit available - ECO function active (summer / winter changeover, automatic 24-hour heating limit)

- Quick setback active
- Room temperature limitation active

### 2.19 Floor curing data


Benefit

Setting


Information about the current state of floor curing.

Description

The floor curing function has a fixed profile according to which the rooms are heated to allow curing. The current values of the floor curing function are displayed here. The function itself is activated under setting 116.



Example



#### 2.20 Type of heat source

Description		is controller supports different types of heat sources. The type of burner used is to be nsidered when planning the heating plant.				
Setting	Setting r	ange	Unit	Factory setting		
80	02		Increment	1		
Effect	Entry:					
	0	No heat source (zone controller) or BMU				
	1	1-stage: The heat source is equipped with a 1-stage burner				

2 2-stage: The heat source is equipped with a 2-stage burner

#### 2.20.1 No heat generation or BMU

If the controller is used in combination with a BMU, only a certain part of the heat source functions are active, such as: protective boiler start-up. In that case, boiler temperature control by the burner must be fully ensured by the BMU. If no BMU is connected, heat source functions are no longer active.

#### 2.20.2 Multi-stage burners Boiler temperature control

Generation of the boiler temperature setpoint is accomplished based on maximum selection. Also refer to "generation of boiler temperature setpoint" in Index. With multi-stage burners, the basic load is covered by cycling the first stage. For that purpose, the boiler's switching differential can be adjusted.

The second stage is activated and deactivated via the release and reset integral, which is used until full load is reached.

For burner control, minimum limitation of the burner running time is considered to ensure no unnecessary cycling takes place in part load operation.

#### 2.21 Minimum limitation of boiler temperature (TKmin)

Benefit	Prevents the boiler temperature from falling below a certain level.				
Description	Minimum limitation of the boiler temperature setpoint is a protective function for the boiler. In addition, minimum limitation of the setting range can be provided with setting 01 <sub>0EM</sub> .				
Setting	Setting range Unit Factory setting				
<u> </u>	TKmin <sub>OEMTKmax</sub> °C 40				
	TKmin OEMMinimum limitation of boiler temperature setpoint (setting on line 01 OEM)TkmaxMaximum limitation of boiler temperature setpoint (setting on line 02 OEM)				
Effect	The setting ensures that the boiler temperature will not fall below the adjusted minimum level. TV max akt akt 0 10 20 30 40 50 60 70 80 90 100 120 °C 56 Actual value of boiler temperature 81 Minimum limitation of boiler temperature setpoint 2 OEM Maximum limitation of boiler temperature setpoint 1 OEM Lowest minimum limitation of boiler temperature setpoint				
Limitation	If the boiler temperature setpoint reaches the limit value and the demand for heat continues to drop, the boiler temperature will be maintained at the adjusted minimum level. $\frac{TK_{C}}{K_{C}}^{H_{C}} = \frac{TK_{M}}{TK_{M}} = \frac{TK_{M}}{TK_{M}} = \frac{TK_{M}}{TK_{M}} = \frac{Legend}{TK} = \frac{Legend}{TK} = \frac{Legend}{TK} = \frac{Legend}{TK} = \frac{Legend}{TK} = \frac{TK_{M}}{TK} = TK_$				

composite outside temperature

2371Z26

TAgem

50

40

3**0** + 20

<sup>TK</sup>min

0

-10

-20°C

10

### 2.22 Extra heating for the bathroom

Benefit	Heating the bathroom by making use of the surplus heat obtained after d.h.w. heating.			
Description	This ancillary heating is provided in addition to normal bathroom heating. It is used especially during intermediate seasons by supplying surplus heat to the bathroom on completion of d.h.w. heating.			
Setting	Setting range	Unit Increment	Factory setting	
Effect	The setting ensures that both the d.h.w. charging pump and heating circuit pump 2 will overrun. Entry: 0 OFF: D.h.w. pump overrun acts exclusively on the d.h.w. charging pump (Q3)			

1 ON: D.h.w. pump overrun acts on both the d.h.w. charging pump (Q3) and heating circuit pump 2 (Q6)

#### 2.22.1 Extra heating for the bathroom

Extra heating for the bathroom makes use of the d.h.w. pump overrun. It is used especially during intermediate seasons by supplying surplus heat to the bathroom, in addition to normal bathroom heating.

Surplus boiler heat after a d.h.w. heating cycle is supplied to the pump heating circuit via overrun of heating circuit pump 2. The pump overrun is fixed at 30 minutes. This function is an uncontrolled fixed process, parallel to the actual operation of the pump heating circuit.

When automatic summer / winter changeover of the pump heating circuit has responded, extra heating for the bathroom will also be switched off.

### Heating circuit

## 2.23 Parallel displacement of heating curve

Benefit	Readjustment of room tempe	erature setting, especially in	plants without room sensor.			
Description	Produces a parallel displacement of the heating curve in order to achieve a better match of heat generation and heat consumption.					
Setting	Setting range	<u>Unit</u> °С (К)	<i>Factory setting</i> 0.0			
Effect	By changing the value enterer raised or lowered. This allow effective room temperatures.	ed, all room temperature setp s the room temperature setp	points will be appropriately			
Example	If a nominal room temperatur produces a room temperatur		on the controller always ing curve downward by 2 °C.			
Parallel displacement	Each setpoint readjustment, be it via the setting value or the operational level, is a parallel displacement of the heating curve.					
	<b>*</b> 20 10 10 0		-20 -30 °C <b>T</b> A			
	TVFlow temperatureTAComposite outside temperaTRwRoom temperature setpoint					

## 2.24 Room influence

Benefit	More accurate room temperature control due to temperature checkback signal from the space. Use of heat gains. Possibility of boost heating and quick setback.				
Description	Defines the impact of room temperature deviations on the controlled system. Room temperature deviation is the temperature differential between the actual room temperature and the room temperature setpoint.			•	
Setting	Setting range		Unit		Factory setting
	0 / 1		Increment		1
Effect	<ul> <li>The setting will activate or deactivate the effect of room temperature deviations on the temperature control.</li> <li>Entry:</li> <li>0: Room influence inactive: The measured room temperature will not affect temperature control</li> <li>1: Room influence active: The measured room temperature will affect the</li> </ul>				
	temperat	ure control			
Room influence	Room influence Deviations of the account by temp	e actual room		m the setpoint	are acquired and taken into
	To use the control variant "Weather compensation with room influence", the followin conditions must be satisfied: • <b>Outside sensor must</b> be connected • Setting "Room influence" <b>must</b> be active. • Respective room unit <b>must</b> be connected • There may be <b>no controlled thermostatic radiator valves</b> in the reference room (If such valves are present, they must be set to their fully open position).			es in the reference room.	

# 2.25 Switching differential of room temperature (SDR)

Benefits	Temperature control with pump heating circuits. Prevents overtemperatures in the rooms in the case of a pump heating circuit.					
Description	Serves as a room temperature limitation with pump heating circuits					
Setting	Setting range	Unit	Factor	ry setting		
102	/ 0.54	4.0 °C				
Effect	The switchin Entry:	The switching differential for two-position control will be changed. Entry:				
		<ul><li>Switching differential is inactive</li><li>The pump always remains activated</li></ul>				
	Decrease:	<ul> <li>Switching differential will become sma</li> <li>Pumps are switched on and off more</li> <li>Room temperature varies within a name</li> </ul>	e often	I		
	Increase:	<ul><li>Switching differential will become great</li><li>Pumps are switched on and off less</li><li>Room temperature varies within a w</li></ul>	often			
Note	<ul> <li>The room temperature sensor must be active</li> <li>This function only acts in automatic mode Auto</li> <li>The display will show "ECO"</li> </ul>					
Room temperature control	pumps on a	o heating circuits, the amount of heat supplied is controlled by switching the and off. This is accomplished with 2-position control by means of the room re's switching differential. ng:				
	ON OFF	TRX TRW+SDR TRW	Legend TRx temperatur TRw SDR room temp P ON OFF t	Room temperature setpoint Switching differential of		
Switching differential	Pump ON Pump OFF	TRW TRW=TRW + SDR	TRx temperatur TRw SDR room temp w 102 room temp ∆ ▽	Room temperature setpoint Switching differential of erature Setpoint Switching differential of		

## 2.26 Operating mode of room unit

Benefit	The setting offers the possibility of assigning the action of the room unit operating modes and the holiday function to one of the heating circuits.				
Description	Assignment of the transmitted room unit values to one of the two heating circuits: Operating modes are: • Automatic mode, continuous operation, or stand-by • Holiday function				
Note	Roc	om unit values can be a	assigned	d in the same way, using	setting line 104.
Setting	Settir	ng range	Unit		Factory setting
103	02	2	-		0
Effect	<ul> <li>The operating mode and holiday function of the room unit affect the circuits, depending on the settings made.</li> <li>Entry:</li> <li>0 Room unit 1 (A6) acting on heating circuit 1 Room unit 2 (A7) acting on heating circuit 2 Changing the operating mode or activating the holiday function affects exclusively the respective heating circuit (parallel).</li> <li>1 Room unit 1 (A6) acting on heating circuit 2</li> </ul>			it 1 it 2 ay function on the room unit rallel).	
	Room unit 2 (A7) acting on <b>heating circuit 1</b> Changing the operating mode or activating the holiday function on the room unit affects exclusively the other heating circuit (crossed).				
	2 Room unit 1 (A6) acting on <b>heating circuits 1 and 2</b> Room unit 2 (A7) with no action Changing the operating mode or activating the holiday function on room unit <b>1</b> affects heating circuits 1 and 2.				
Prerequisite	To ensure the room unit operating modes have an effect on the control, the controller must be set to automatic mode. Otherwise, the settings made on the room unit will be inactive.				
Display		soon as the operating r on will flash.	mode or	the room unit is change	d, the controller's automatic

## 2.27 Room unit values

Benefit	This setting offers the possibility of assigning the action of the room unit values to one of the heating circuits.				
Description	Assignment of the transmitted room unit values to one of the two heating circuits: Heating circuit values are: – Actual value – Actual value of the room temperature				
Note	Room	n unit operating modes c	an be assigned in the same v	vay, using setting line 103.	
Setting	Setting	range	Unit	Factory setting	
<u>104</u>	02		-	0	
Effect	The r made Entry 0	r. Room unit 1 (A6) Room unit 2 (A7)	ne selected heating circuits, de acting on <b>heating circu</b> i acting on <b>heating circu</b> i affect exclusively the respectiv	it 1 it 2	
	1	Room unit 1 (A6) Room unit 2 (A7) The room unit values a	acting on <b>heating circuit 2</b> acting on <b>heating circuit 1</b> les affect exclusively the other heating circuit (crossed		
	2	Room unit 1 (A6) Room unit 2 (A7) The values of room un	acting on <b>heating circuits 1 and 2</b> with no action n unit <b>1</b> affect heating circuits 1 and 2.		
Reference room		uld be considered that the room to the roo	he room in which the room un emperature influence.	it is installed also is the	

	2.27.1	Exam	ples of room unit assignmer	its		
Introduction	In the case of plants with two heating circuits and one room unit, it may be advisable to choose a separate assignment of the room unit functions. The listing below shows some typical applications with the respective settings of the room unit operating mode (line 103) and the room unit values (line 104).					
Separate flat	The heating circuits are in separate, independent flats or apartments. This repres the "normal application ".					
	Plant types		Location of heating circuits	Line 103	Line 104	
	21/22/23/24		Not in the same space	0	0	
Bathroom heating	The heating <i>Plant types</i>	circuits	are located in partly separate spaces of Location of heating circuits	flats. <i>Line 103</i>	Line 104	
	21/22/23/24		Not in the same space	2	0	
Staircase heating	<ul> <li>The heatin</li> </ul>	g circuit	s are always separate.			
-	Plant types	-	Location of heating circuits	Line 103	Line 104	
	21/22/23/24		Not in the same space	0	0	
		ous chai	nge of the operating mode is possible, I	nowever.		
	Plant types		Location of heating circuits	Line 103	Line 104	
	21/22/23/24		Not in the same space	2	0	
Underfloor or radiator heating system	faster-reactir circuit 2.		are located in the same space. Comfor tors. This means that the room unit valu	ies shall only ac	t on heating	
	Plant types		Location of heating circuits	Line 103	Line 104	
	21/22/23/24		In the same space	2	1	

#### 2.28 Minimum limitation of flow temperature setpoint (TVmin)

Benefit	Prevents too low flow temperatures.						
Description	Minimum and maximum limitation define the range within which the flow temperature setpoint may vary.						
Setting	Setting rangeUnitFactory setting8TVmax°C8TVmaxMaximum limitation of flow temperature setpoint (setting on line 107)						
Effect	<figure></figure>						
Limitation	If the flow temperature setpoint demanded by the heating circuit reaches the minimum limit and the outside temperature rises, the flow temperature setpoint will be maintained						

n limit and the outside temperature rises, the flow temperature setpoint will be maintained at that limit, in other words, it will not be allowed to fall below it.

## 2.29 Maximum limitation of flow temperature setpoint (TVmax)

Benefit	Prevents too high flow temperatures.						
Description	Minimum and maximum limitation define the range within which the flow temperature setpoint may vary.						
Setting	Setting range Unit Factory setting						
<u>ר מו</u>	TVmin95 °C 80						
	Tymin Minimum limitation of flow temperature setpoint (setting on line 105)						
Effect	The setting will ensure that the flow temperature setpoint will not exceed a maximum level.						
Important	Maximum limitation is <b>not</b> to be regarded as a safety function as required with underfloor heating systems, for example.						
	TV max -						
	min -						
	0 10 20 30 40 50 60 70 80 90 100 °C						
	TVwCurrent flow temperature setpoint105Minimum limitation of flow temperature setpoint107Maximum limitation of flow temperature setpoint						
Limitation	If the flow temperature setpoint demanded by the heating circuit reaches the maximum						

If the flow temperature setpoint demanded by the heating circuit reaches the maximum limit and the outside temperature falls, the flow temperature setpoint will be maintained at that limit, in other words, it will not be allowed to exceed it.

# 2.30 Maximum forward shift of optimum start control

Benefit	Maximum forward shift of optimum start control.				
Description	Maximum forward shift is a limit function that defines the range of optimum start control.				
Setting	Setting range 00:0006:00		Unit hh:mm	Factory setting 00:00	
Effect	00:00 00:1006:00	•	control switched off control switched on		

#### 2.30.1 Optimum start control

Optimum start control acts with or without room influence. The maximum forward shift can be set with parameter "Maximum forward shift with optimum start control" (range 0...6 h). This parameter can also be used to switch optimum start control off (setting 0).

During non-occupancy hours, the heating is maintained at the reduced level. Towards the end of the non-occupancy time, optimization switches the control back to the normal level.

Optimization calculates the changeover time such that, at the start of occupancy, the room temperature will have reached the nominal setpoint.

#### 2.30.2 Without room influence

The composite outside temperature is used as the compensating variable. In the case of floor heating systems, the maximum forward shift should be longer than with radiator systems.

Using the parameter for the constant of quick setback and optimum start control (KON), the forward shift can be matched the building dynamics.

Forward shift tE in hours and minutes with optimum start control without room influence:

TAgem	KON					
	0	4	8	12	16	20
- 20	0	1h20	2h40	4h00	5h20	6h00
- 10	0	0h50	1h50	2h40	3h40	4h30
0	0	0h30	1h00	1h30	2h00	2h30
+ 10	0	0	0h10	0h10	0h20	0h20
	tE					

TAgem Composite outside temperature

tE Forward shift

KON Parameter for quick setback and optimum start control without room influence

Parameter KON:

KON = 0:	function deactivated
	note: KON also acts on quick setback
Small KON:	for high building structures can be heated up fairly quickly
Large KON:	for heavy, well insulated building structures whose heating up time is fairly long

#### 2.30.3 With room influence

Optimum start control acts only when room influence is active.

The switch-on time for the heating (change to nominal level) is selected such that, at the beginning of the occupancy time according to the heating program, the room temperature reached will be the room temperature setpoint - 0.25 K. The correct switch-on time is determined by adaption.

# 2.31 Maximum forward shift of optimum stop control

Benefit	Maximum	Maximum forward shift of optimum stop control.				
Description	Maximum	Maximum forward shift is a limit function that defines the range of optimum stop control.				
Setting	Setting range		Unit	Factory setting		
<u>I 10</u>	00:0006	:00	hh:mm	00:00		
Effect	00:00	Optimum stop	control deactivated			
	00:1006	00:1006:00 Optimum stop control activated				

#### 2.31.1 Optimum stop control

Optimum stop control acts only when a room sensor is used and when room influence is active.

The maximum forward shift can be set with parameter "Maximum forward shift with optimum stop control" (range is 0...6 h). This parameter can also be used to switch optimum stop control off (setting = 0).

During occupancy hours, the heating is maintained at the nominal level. Towards the end of the occupancy time, the control switches to the reduced level. Optimization calculates the changeover time such that, at the end of occupancy time, the room temperature will be 0.5 °C below the nominal setpoint (early shut-down).

Adaption takes place only with the first occupancy period per day. The switch-off point is adapted in steps of 10 minutes. If the 0.25 K are not reached, the switch-off point is shifted forward by 10 minutes (earlier shut-down). In the other case, the switch-off point is shifted backward by 10 minutes (later shut-down).

## 2.32 Type of building construction

Benefit	The building's thermal dynamics are taken into consideration.					
Description	The type of building construction affects the control. By considering the type of construction, a disturbance variable (z) within the controlled system is taken into account.					
Setting	Setting r	ange	Unit	Factory setting		
<u>    ]</u>	0 / 1		Increment	1		
Effect	<ul> <li>When the outside temperature varies, the room temperature changes at different rates depending on the building's thermal storage capacity.</li> <li>The above setting ensures that the generation of the composite outside temperature will be matched to the type of building construction. Also refer to "Composite outside temperature" in section "Functions without settings".</li> <li>Entry:</li> <li>0: Heavy building structures: The room temperature will respond <i>slower</i> to outside temperature variations</li> <li>1: Light building structures: The room temperature will respond <i>quicker</i> to outside</li> </ul>					
		temperature variations				
Building construction	Heavy building structures: Buildings with thick walls or with external insulation Light building structures: Buildings with a light envelope					


## 2.33 Adaption of heating curve

Benefits		No heating curve adjustments required. Automatic adaption of heating curve.						
Description		The adaption facility learns from the different heating situations and matches the contro to the heating circuit at regular. For details, refer to "adaptation sensitivities" in Index.						
Setting	Setting range	Unit	Factory setting					
<u>      </u>	0 / 1	Increment	1					
Effect	The setting will switch automatic adaption of the heating curve on or off. Entry: 0 Automatic adaption inactive: The heating curve maintains the settings made							
Note	Prerequisite for this f	unction is the use of a room t	emperature sensor.					
	2.33.1 Adap	tion						
Note	construction and the temperature deviatio To achieve optimum possible - especially required for the adap – Manual readjustme – Power failure – Heating curve set t	heating requirements. Adapti ns, outside temperature chara adaption, the following situati after commissioning - since th tion: ent of heating curve (press plu	ating curve to the type of building on gives consideration to room acteristics and adaption sensitivity. ions should occur as rarely as his would reset certain calculations us / minus buttons)					
Process	<ul> <li>evaluated. This evaluated. This evaluated.</li> <li>Simple adaption (random content of the state of</li></ul>	uation leads to an automatic r ange $\textcircled{3}$ ): de temperatures below 4 °C, ed.	rol differential of the previous day is eadjustment of the heating curve. it is only the slope of the heating eighted with factor f2 and adaption					
	At attenuated outsi	<ul> <li>Combined adaption (range ②): At attenuated outside temperatures of between 4 and 12 °C, it is partly the slope and partly the parallel displacement which are adapted.</li> </ul>						
		In this temperature range, the readjustment of the parallel displacement is weighed with factor f1 and adaption sensitivity 1.						
	In this temperature range, the readjustment of the slope is weighted with factor f2 and adaption sensitivity 1.							

 No adaption (range ①): At attenuated outside temperatures above 12 °C, the heating curve will not be adapted.



Example using a nominal room temperature setpoint of 20 °C.

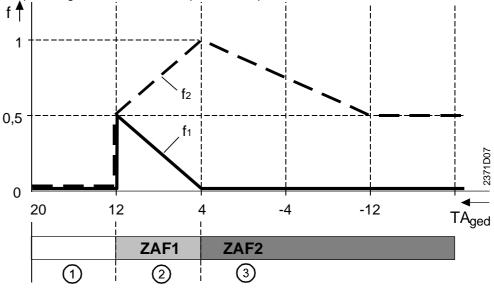

f Factor

f1 Factor for parallel displacement

f2 Factor for slope

TAged Attenuated outside temperature

ZAF1 Adaption sensitivity 1 (line 39<sub>OEM</sub>)

ZAF2 Adaption sensitivity 2 (line 40<sub>OEM</sub>)

Siemens Building Technologies Landis & Staefa Division

### 2.34 Locking signal gain

Benefit Matching the system to different types of boilers and plant conditions.

d.h.w. priority.

Description

The locking signal gain is a final adjustment of the locking signal which leads to a restriction of the mixing valve. It is the result of a number of integrals such as shifting

Setting	Setting range	Unit	Factory setting
Setting	0200	%	100
Effect	• •		ne setting changes the response of

Example

The gain is adjustable between 0 % and 200 %. The setting changes the response of the mixing heating circuits to restrictions imposed by locking signals, but not that of the other consumers. Also refer to "mixing valve restriction" in index.

Setting	Response
0 %	Locking signal will be ignored
199 %	Locking signal will be considered as a reduced signal
100 %	Locking signal will be adopted unchanged
101200 %	Locking signal will be considered up to twice the normal signal


### 2.35 Floor curing

Benefit	The floor curing function ensures controlled drying of the floor.			
Important	Observe the relevant standards and regulations of the floor manufacturer! Proper functioning is ensured only when the plant is correctly installed (hydraulic system, electrical installation, settings)! If not observed, the floor might get damaged!			
Description	The floor curing function maintains the flow temperature at a predefined temperature profile with the help of the mixing valve.			
Setting	Setting range Unit Factory setting			
116	03	-	0	
Effect	Selection of a temperature profile activates the floor curing function and the heating circuit ensures the preset flow temperatures.			

- 0 Inactive
- 1 Functional heating
- 2 Floor curing heating
- 3 Functional and floor curing heating

#### 2.35.1 Temperature profile

The following graph shows the temperature profile of the selected floor curing function.

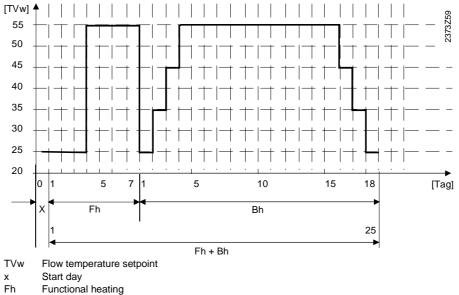

Bh Floor curing heating

#### 2.35.2 Activating the function

If setting 1), 2) or 3) is made via the setting parameter, the respective floor curing function will be carried out.

The floor curing function can be activated only with applications using a mixing heating circuit.

With the pump heating circuit application, this function cannot be activated.

#### 2.35.3 Function

When the floor curing function is activated, parameter "Maximum limitation of floor temperature Tvmax" will automatically be set to 55 °C. This value will then be used as the maximum value for the floor curing function and will be maintained when the floor curing function is terminated.

Temperature profileThe starting day, that is, the period of time from activation until midnight, is not<br/>considered day 1 of the selected temperature profile. The starting day is called day 0<br/>and adopts the flow temperature value of day 1.<br/>The flow temperature changes dictated by the temperature profile always take place at<br/>midnight.<br/>When the floor curing function is activated, the mixing valve ensures that the flow<br/>temperature dictated by the temperature profile will be maintained. This means that<br/>protective boiler start-up or d.h.w. heating with absolute or shifting priority have no<br/>impact on the floor curing function.ParticularitiesIn the event of a power failure, the function will be resumed where operation was<br/>stopped.

Manual operation is given priority over the floor curing function. When manual operation is activated, the mixing valve will be de-energized (relay contacts open). As a result, the floor curing function does not affect the mixing valve.

#### 2.35.4 Display

When the floor curing function is activated, the LED of the current heating circuit operating mode flashes.

#### 2.35.5 Aborting the function

The following events cause abortion of the floor curing function:

The selected floor curing function is completed. Setting parameter "Floor curing function" is set to active. D.h.w.

Setting range

## 2.36 Reduced setpoint of d.h.w. temperature (TBWR)

Benefit

High d.h.w. temperature level only if required. Energy savings due to lower temperatures in the remaining time.

Note

If the d.h.w. is heated by means of a control thermostat connected to terminal B3, reduced setpoint operation will not be possible.

Description

Reduction of d.h.w. temperatures outside main occupancy times. The time switch integrated in the controller auotmatically switches between main and secondary occupancy times. Also refer to "d.h.w. program" in Index.

Factory setting




8...TBWw °C 40 TBWw Nominal setpoint of the d.h.w. temperature (setting on line 26)

Effect

The temperature setpoint during reduced d.h.w. operation will be changed.

Unit

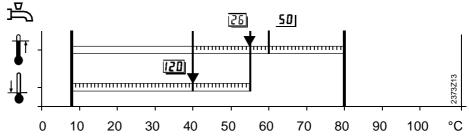

Setting "Nominal setpoint of the d.h.w. temperature"Setting "Reduced setpoint of the d.h.w. temperature"

50 <sub>OEM</sub> Setting "Maximum nominal setpoint of the d.h.w. temperature"

## D.h.w. temperature setpoints

D.h.w. heating has 2 different setpoints that can be used:

• Nominal setpoint of d.h.w. temperature: It ensures the d.h.w. temperature required during main occupancy times



• Reduced setpoint of d.h.w. temperature: It ensures the d.h.w. temperature required during secondary occupancy times

Switching times

The periods of time during which these d.h.w. temperature setpoints shall be used can be set in the d.h.w. program.


	2.37	D.n.w. neating progr	am			
Benefit		Release of d.h.w. heating at the nominal setpoint as demanded by the consumers.				
Description	Release of d.h.w. heating can be matched to the plant's load curve. Possibility of changing over between two different d.h.w. setpoints aimed at matching optimally the demand for d.h.w. In addition, d.h.w. heating can be switched on and off with the operating mode button					
Setting	Setting range	Unit	Factory setting			
121	02	Increment	1			
Effect	The setting defines the period of time during which d.h.w. heating at the nominal setpoint is released. Outside this period of time, the reduced d.h.w. setpoint applies. There is one exception, function "d.h.w. push".					
	settings:	f d.h.w. heating at the nominal setpoir nours per day	t takes place when using the following			
	1 According to the time switch program with forward shift (heating circuit)					
	2 Acc	cording to the local time switch program	m 3 (d.h.w.)			
	Note					
	The frost protection temperature for d.h.w. is fixed at 5 °C and is always active.					
	D.h.w. heating can be suppressed in spite of this setting, due to the holiday function (also refer to "assignment of d.h.w. heating" in index).					

.

 $\sim -$ 

#### 2.37.1 24-hour operation setting 0

The d.h.w. temperature is continuously maintained at the nominal d.h.w. temperature setpoint, independent of any time switch programs.

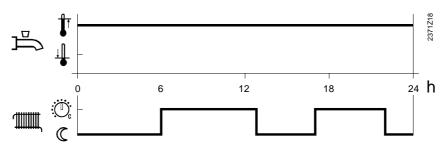

Example:

## 2.37.2 Operation according to the time switch programs with forward shift (d.h.w.) *Setting 1*

For d.h.w. operation, the heating cricuits will be considered according to the setting "D.h.w. assignment".


With this d.h.w. heating program, it is also possible to select the number of charging cycles per day. This also includes the forward shift of the switch-on times. Also refer to

"d.h.w. heating" in Index.

The switching times of the time switch programs are then used to change over between the nominal d.h.w. setpoint and the reduced d.h.w. setpoint. The first switch-on point of each period will be shifted forward in time by one hour.

## Number of charging cycles

Example:

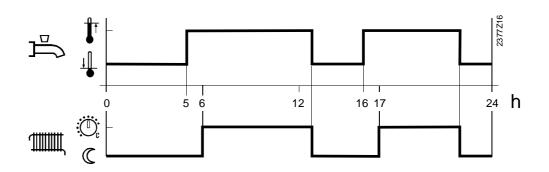

## 2.37.3 Operation according to the local time switch program3 (d.h.w.) Setting 2


For d.h.w. heating, time switch program 3 (d.h.w.) of the local controller is taken into account. The set switching times of that program are then used to change over between the nominal d.h.w. setpoint and the reduced d.h.w. setpoint. In that way, d.h.w. is heated independent of the heating circuits.

With this d.h.w. heating program, it is possible to have a maximum of three heating

#### Heating periods

Example:

periods per day. There is no forward shift of the switch-on times.



### 2.38 Assignment of d.h.w. heating

Benefit	Assignment of d.h.w. heating to the respective consumers. All relevant time switch programs are taken into consideration.			
Description	In normal heating operation, d.h.w. heating can be assigned to the time switch programs of the various zones. In a system, it is thus possible to have either decentral or central d.h.w. heating which takes into account the switching times of the local, the segment or system heating circuits.			
Important	This is active only when the setting on line 121 reads 1, unless holiday mode is activated (also refer to "Holiday mode" below).			
Setting	Setting range	Unit	Factory setting	
123	02	-	2	
Effect	<ul> <li>Through this setting, the time switch programs of the respective heating circuits will be considered for d.h.w. heating.</li> <li>0 Local heating circuit: D.h.w. heating according to the time switch program of the local heating circuit</li> <li>1 All heating circuits in the segment: D.h.w. heating according to the time switch programs of the segment heating circuits</li> </ul>			
	<ul> <li>All heating circuits in the LPB system:</li> <li>D.h.w. heating according to the time switch programs of the system heating circuits</li> </ul>			
Holiday mode	If a room unit triggers holiday mode, the effect will be the following, independent of the			
	d.h.w. heating program (line 121):			
	Setting on line 123	Effect		
	0 Local heating circuit	No d.h.w. heating whe	en the local heating circuit	
	1 All heating circuits in the segment	No d.h.w. heating whe segment are in holida	en all heating circuits in the y mode	
	2 All heating circuits in the No d.h.w. heating who		en all heating circuits in the	

This means that even if the d.h.w. would have to be heated according to the d.h.w. program (line 121), the holiday function may lock d.h.w. heating. Only the frost protection function will remain active.

system are in holiday mode

system

## 2.39 D.h.w. charging

Benefit	The number of d.h.w. charging cycles can be selected while giving consideration to the size of the storage tank.				
Description	When using a d.h.w. storage tank, the number of charging cycles can be matched to the type of tank.				
Setting	Setting range	Ur	nit	Factory setting	
<u>124</u>	0 / 1	In	crement	1	
Effect	With this setting, the number of d.h.w. charging cycles can be limited. The setting also produces a forward shift of the switching on action.				
Note	This setting is active only if the d.h.w. is heated via heating circuit time switch programs (setting line 121, selection 1). Also refer to section ""D.h.w. heating program" in Index.				
	Entry:				
	0 Once per day with a forward shift of 2.5 hours				
	1 Several times per day with a forward shift of 1 hour				
	2.39.1	1 Once per day with a forward shift of 2.5 hours			
	Setting 0				
	day, ii	n which case the sw	• •	erature is limited to one per vard by 2.5 hours. With this hour (against the heating	

circuit's on times). On the days the nominal d.h.w. temperature setpoint is maintained for 24 hours, d.h.w.

## charging is automatically released at 00:00 hours with a forward shift of 2.5 hours.

## 2.39.2 Several times per day with a forward shift of 1 hour *Setting 1*

The number of d.h.w. charging cycles will not be limited. With this setting, the switch-on point is shifted forward by 1 hour (against the heating circuit's on times).

	2.40	Type of d.h	.w.	demand	
Benefit	Use of different d.h.w. heating modes. Use of d.h.w. storage tanks with control thermostats.				
Description	Defines the type of d.h.w. control (via d.h.w. sensor or control thermostat).				
Note	Setting of this function has an impact on the automatic generation of the type of plant (also refer to "plant types" in index.				
Setting	Setting range	Un	it		Factory setting
125	0 / 1	Inc	creme	nt	0
Effect	sensor cor	this setting, the contronected to terminal B3.	oller ta	kes into account the	e signal fed to it by the d.h.w.
	Entry: 0 Sensor: The temperature measured with the sensor is used for the control of the d.h.w. temperature				
	1 Control thermostat: The switching status of the control thermostat connected to terminal B3 is used for the control of the d.h.w. temperature				
Important	The contacts of the control thermostat must be suited for extra low voltage (gold- plated)!				
Difference	<ul> <li>When using a d.h.w. temperature sensor: The controller calculates the switching points with the respective switching differential as a function of the d.h.w. temperature setpoint entered.</li> </ul>				
	Sensor / lir Measuring	ne with a short-circuit signal present ne with a short-circuit	= = =	fault status signal d.h.w. according to no d.h.w.	o setpoint
	<ul> <li>When using a d.h.w. control thermostat: The controller takes into consideration the switching statuses of the control thermostat.</li> <li>Contact closed = d.h.w. heating ON</li> </ul>				
	Contact op		= = =	d.h.w. heating ON d.h.w. heating OF fault status signal	F
Note	that when	-	ording	g to the d.h.w. progra	n is not possible. This means am (line 121) is active, d.h.w.
Important when using a d.h.w. control thermostat	setpoin point). • The boo (has an	-	rol the ature s ng time	rmostat (thermostat setpoint of d.h.w. mu e).	l to or higher than the is calibrated at the switch-off ust be a minimum of 10 °C

#### D.h.w. control thermostat (example)

	<u>70 °C</u>	TBWw + UEBW	
UEBW >= 10 °C			
	60 °C	TBWw	
ΔT > 0 °C	<u>56 °C</u>	TRw	
SD = 6 °C		IRW	Z36
00-00	<u>50 °C</u>	TRw -SD	2371Z36

UEBW = boost of flow temperature setpoint

# 2.41 Boost of flow temperature setpoint for d.h.w. heating (UEBW)

Benefit	Efficient d.h.w. heating.				
Description	To allow the d.h.w. to be heated up, the boiler temperature must be higher than the d.h.w. setpoint.				
Setting	Setting range	Unit	Factory setting		
126	030	°С (К)	16		
Effect	The setting will raise the boiler temperature setpoint when there is demand for d.h.w. Increase: Heating up time will become shorter More overshoot Decrease: Heating up time will become longer				
	Less overshoot				
Boiler boost	Using the two settings, the controller generates the boiler temperature setpoint for d.h.w. heating.				
	Setting on line 26	Reduced setpoint of d.h. temperature	w.		
	Setting on line 126	Boost			
	Total	Boiler temperature setpo	bint		
Note	For d.h.w. control, refer to "s	vitching differential of d.h.w."	in index.		

#### 2.42 D.h.w. priority

Benefit	Opti	Optimum distribution of heat.			
Setting		g range	Unit	Factory setting	
	03	)	Increment	I	
Effect	Duri	During d.h.w. heating, space heating will be restricted, depending on the setting made.			
	<ul> <li>Absolute priority</li> <li>Mixing and pump heating circuit remain locked until the d.h.w. is heated up, the system pump remains activated.</li> </ul>				
	1	<ol> <li>Shifting priority</li> <li>If the capacity of the heat source is no longer sufficient, mixing and pump heating circuit will be restricted until the d.h.w. is heated up.</li> </ol>			
	2	No priority: D.h.w. heating and space heating at the same time.			

In the case of tightly sized boilers and mixing heating circuits, the setpoint may not be reached if the heating load is great, since too much heat is required for space heating.

3 **Mixing heating circuit shifting, pump heating circuit absolute** The pump heating circuits remain locked until the d.h.w. storage tank is heated up. If the capacity of the heat source is no longer sufficient, the mixing heating circuits will also be restricted.

#### 2.42.1 Frost protection for the plant

Frost protection for the plant is fully active only in the case of setting 2. With setting 0 or 1, it will be partly or fully restricted. If the boiler is correctly sized, frost protection for the plant is also ensured when using setting 1. In the case of plants where there is a considerable risk of frost (e.g. plants with outdoor heating), setting 0 should not be used.

#### 2.42.2 Shifting priority

The purpose of this function is to achieve optimum d.h.w. heating and, at the same time, to deliver superfluous heat to the heating circuits. This means that during d.h.w. heating, the actual value of the boiler temperature should be as close as possible to the boiler temperature setpoint without shutting down the burner. To achieve this, it may be necessary to restrict the heating circuits by means of a locking signal. This locking signal is generated with the help of a temperature-time integral.

Depending on the consumer, the locking signal will lead to switching on / off or a setpoint reduction.

#### Impact on 2-position loads

Due to the deactivation of the pumps, heat consumption will be reduced. The heating up time for d.h.w. will thus be considerably shorter.

Heating circuit pump:

Status	Effect
Locking signal = 20 %	Normal pump operation
Locking signal > 20 %	Heating circuit pump cycles
Locking signal = 93 %	Heating circuit pump OFF

• D.h.w. pump / system pump or boiler pump: No effect

# **Switching point** Through the generation of the temperature-time integral it is not only the period of time that is considered, but also the extent of boiler temperature undershoot. This means that when the crossing is significant, the pumps will be deactivated earlier.

#### Impact on modulating loads

Due to the lowering of the setpoint, heat consumption will be reduced. This reduces considerably the heating up time for d.h.w., with a minimum impact on the heating circuits.

• Mixing valve:

Status	Effect
Locking signal > 0 %	Flow temperature setpoint will be lowered. The extent of lowering is dependent on the magnitude and the period of time of boiler temperature undershoot.
Locking signal reduced to 0 %	Setpoint according to the normal control condition


#### Lowering of setpoint

Through the generation of the temperature-time integral it is not only the period of time that is considered, but also the extent of boiler temperature undershoot. This means that when the undershoot is significant, the setpoint reduction will be greater.

#### 2.42.3 Temperature-time integral

This temperature-time integral generates the locking signal for restricting the heating circuits.

Diagram	Procedure
a to b	<ul> <li>Within a foreseeable period of time, the actual boiler temperature (TKx) will <b>not</b> lie within half the switching differential of the boiler temperature setpoint.</li> <li>→ Locking signal will be built up</li> </ul>
b to c, d to e	<ul> <li>Within a foreseeable period of time, the actual boiler temperature (TKx) will lie within half the switching differential of the boiler temperature setpoint.</li> <li>→ Locking signal will remain at a constant level</li> </ul>
c to d, e to f	<ul> <li>Within a foreseeable period of time, the actual boiler temperature (TKx) will lie above TKw.</li> <li>→ Locking signal will be decreased</li> </ul>
f	<ul> <li>The actual boiler temperature (TKx) exceeds the boiler temperature setpoint.</li> <li>→ Locking signal will be set to 0 %.</li> </ul>

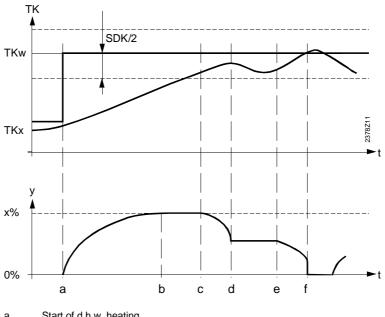

Start of d.h.w. heating а

ΤK boiler temperature

Boiler temperature setpoint Actual value of the boiler temperature TKw

TKx SDK Switching differential of the boiler

Time

t Y Locking signal

Diagram

# 2.43 Controlling element for d.h.w.

Benefit	Meeting the requirements of various plant configurations.			
Description	Selection of controlling element.			
Setting	Setting range	Unit	Factory setting	
128	0 / 1	-	0	
Effect	• •	erent displays and allows to de internal control sequences, the		
	<ul> <li>Entry:</li> <li>0 Charging pump: D.h.w. will be heated up with a charging pump connected to terminal Q3/Y3</li> <li>1 Diverting valve: D.h.w. will be heated up with a diverting valve connected to terminal Q3/Y3</li> </ul>			
With charging pump	The charging pump operates as a function of the d.h.w. switching differential (setting $51_{OEM}$ ), depending on the current setpoints, which are activated by the d.h.w. program (setting 121). Also refer to "plant diagram 1" in Index. When using a charging pump, d.h.w. heating is also ensured in manual operation.			
With changeover valve	The diverting valve opens or closes as a function of the d.h.w. switching differential (setting 51 <sub>OEM</sub> ), depending on the current setpoints, which are activated by the d.h.w. program (setting 121). Also refer to "plant diagram 3" in Index. D.h.w. heating is <b>not</b> possible in manual operation since the diverting valve used is not controlled to provide space heating.			

LPB / system

**Benefits** Creation of systems. Wide field of use with a smaller number of unit versions. Plants can be extended in a straightforward manner. LPB device address 2.44 Description The device address and the segment address are used as destinations in the bus system. To ensure communication, each device must be correctly addressed. Setting Setting range Unit Factory setting 0...16 Increment 0

Effect

Entry of the device address is especially important when using combinations of units, or in a system. The addresses classify the controllers within a segment.

Address	Effect	Example
0	Standalone	Single controllers
1	Master (LPB)	<ul> <li>Controllers with master function</li> <li>Heat generation master</li> <li>Consumer master in the respective segment</li> </ul>
216	Slave (LPB)	Controllers with slave functions <ul> <li>Zone controller (slave)</li> </ul>

Device address	The device addresses should be assigned in consecutive order in accordance with the controllers connected. It is not permitted to assign an address several times within a bus segment, since this would lead to communication errors. Each segment must have a device as a master (address 1).
Note	Addressing is part of engineering. For detailed information, refer to LPB System Engineering, Basic Documentation (reference number CE1P2370E).

# 2.45 LPB segment address

Description	The segment address and the device address are used as destinations in the bus system. To ensure communication, each device must be correctly addressed.			
Setting	Setting range	Unit	Factory setting	
<u> 4  </u>	014	Increment	0	
Effect	Entry of the segment address is especially important when used in a system. With this setting, the system can be subdivided into a number of segments.			
	<ul><li>0 Heat generation segment</li><li>114 Heat consumer segment</li></ul>			
Segment number	A bus segment is comprised of a number of devices that are used in the same place of application. All devices in a segment must carry the same segment address.			
Note	Addressing is part of engineering. For detailed information, refer to LPB System Engineering, Basic Documentation (reference number CE1P2370E).			

# 2.46 LPB power supply

Benefit	A central bus power supply is not required in systems with up to 16 devices. Straightforward extension of systems.		
Description	The controller ensures a direct power supply to the bus system.		
Setting	Setting range	Unit Increment	Factory setting
Effect	<ul> <li>Entry:</li> <li>Off: No power supply from the controller to the bus</li> <li>Automatically: The power supply from the controller to the bus will automatically</li> </ul>		
Note	be switched on and off, depending on the requirements of the LPB The actual status of the power supply is shown on line 143.		
Bus power supply	Depending on the design of the system, the bus is powered either via the connected devices or by a central bus power supply. The design of the bus system is part of engineering. For detailed information, refer to LPB System Engineering, Basic Documentation (reference number CE1P2370E).		

# 2.47 Display of LPB power supply

Benefit	Overview of operating state of the controller-bus power supply.			
Description	The display shows whether the controller currently powers the bus (LPB).			
Setting	Display Unit ON / OFF -			-
Effect	The status of the controller-bus power supply will automatically be shown on this line.			
	Display: ON Bus power supply currently active The controller supplies power to the bus system			
	OFF	Bus power supply currently inactive		
Bus power supply	Power supply to the bus can be accomplished in different ways. The respective setting is made on line 142.			

# 2.48 Range of action of central changeover

Benefit	The range of action of central changeover can be defined.				
Description	Function for defining the	Function for defining the range of action of central changeover.			
Setting	Setting range	Unit	Factory setting		
145	0 / 1	Increment	1		
Effect	mode" (HCs + d.h.w., HC	The range of action can be defined for central changeover "Changeover of operating mode" (HCs + d.h.w., HCs), "Summer / winter changeover" and "Stand-by". The range of action can be defined by making the following settings:			
	0 Changeover takes place with all controllers in the same segment.				
	1 Changeover takes place with all controllers in the entire system (LPB).				
Note	The setting is of importance only if the controller is defined as the master and located in segment 0 (address 0/1). With any other addressing, it has no effect.				

# 2.49 Automatic summer / winter changeover

Benefit	Common changeover of all heating circuits in the selected range of action.			
Description	Summer / winter changeover of the selected range of action takes place when the set changeover temperature is reached (line 29/31).			
Setting	Setting range Unit Factory setting			Factory setting
145	0 / 1	Incr	ement	0
Important	This setting can only be made on the master controller (device with setting on line 140 = 1)!			
Effect	The setting wi	Il change the action	of summer / winter chang	geover:
	circuits	D Local action: Automatic summer / winter changeover switches the local heating circuits 1 and 2 on and off. With the local action, the changeover temperatures can be set separately for each of the two heating circuits.		
	heating the sett	Central action: Automatic summer / winter changeover switches the connected heating circuits in the system on and off, depending on the segment address and the setting made on line 145. With the central action, the changeover temperature of heating circuit 1 is used for all heating circuits.		
	Segment a	uddress	Effect	
	0 114		According to the settin Throughout the segme	•

# 2.50 Central stand-by switch

Benefit	Central operation in the selected range of action.			
Description	From the master controller, the heating system can be switched to stand-by in the selected range of action.			
Setting	Setting range	Unit	Factory setting	
<u> 147</u>	0 / 1	Increment	0	
Important	This setting can only be made on the master controller (device with setting on line 140 = 1) and the setting line will only be displayed on this controller!			
Effect	<ul> <li>Entry:</li> <li>0 central stand-by circuit is switched off</li> <li>1 central stand-by circuit is activated</li> </ul>			
	Segment address Effect			
	0	0 According to the setting made on line 145		
	114	Throughout the seg	ment	
Important	If central stand-by on the master controller is switched on, it can only be switched off again from that controller!			
D.h.w.	The central stand-by circuit does not affect d.h.w. heating. This means that the d.h.w. is heated according to the settings made.			
Display	If the central stand-by circuit is activated, the stand-by button $\circlearrowright$ on all controllers in the selected range of action flashes.			

# 2.51 Clock mode

Benefit	Straightforward time synchronization of the controllers in the system.			
Description	Clock operation is an important setting for time and date synchronization if several controllers are interconnected to form one system.			
Setting	Setting range	Unit	Factory setting	
198	03	Increment	0	
Important	In each system, one of the c	controllers must be set as the	system clock (setting 3).	
Effect	<ul> <li>(settings on lines 1 to 4).</li> <li>Entry:</li> <li><b>0</b> Autonomous clock The time settings on the The controller's time setting the system time</li> <li><b>1</b> System time The time settings on the The controller's time setting continuously be matched</li> <li><b>2</b> System time with adjus Time settings on the devise the same time, adjust the</li> </ul>	<ul> <li>Entry:</li> <li>Autonomous clock The time settings on the device can be adjusted The controller's time settings will not be matched to the system time </li> <li>System time The time settings on the device cannot be adjusted The controller's time settings will automatically and continuously be matched to the system time Re</li></ul>		
	<ul> <li>and continuously matche</li> <li><b>3</b> System clock (master)</li> <li>Time settings on the dev</li> <li>the same time, adjust the</li> </ul>	ed to the system time ice can be adjusted and, at	Reglerzeit Systemzeit	

# 2.52 Winter- / summertime changeover

Benefit	Automatic changeover of the yearly clock to summertime.			
International standards	In accordance with present international standards, the change from wintertime to summertime takes place on the last Sunday in March. The standard setting of the controller complies with this rule since that Sunday lies between the standard setting and the last day of the relevant month. With this setting, the day of changeover can be matched to changing standards.			
Description	On the Sunday following that date, the controller's time of day will switch over to summertime. For that purpose, the time of day is shifted forward by one hour.			
Setting	Setting range 01.0131.12.	Unit tt.MM	Factory setting 25.03.	

# 2.53 Summer- / wintertime changeover

Benefit	Automatic changeover of the yearly clock to wintertime.			
International standards	In accordance with present international standards, the change from summertime to wintertime takes place on the last Sunday in October. The standard setting of the controller complies with this rule since that Sunday lies between the standard setting and the last day of the relevant month. With this setting, the day of changeover can be matched to changing standards.			
Description	On the Sunday following that date, the controller's time of day will switch over to wintertime. For that purpose, the time of day is shifted backward by one hour.			
Setting	Setting range 01.0131.12.	<u>Unit</u> tt.MM	<i>Factory setting</i> 25.10.	

# 2.54 Display of PPS communication

Benefit	Checking the communication	with the connected room unit.	
Description	The display provides information about the communication status and the type of room unit connected. Prerequisite is that signal transmission is correct. Also refer to "input A" in Index.		
Setting	Display	Unit	
<u> 155  156 </u>	0255 0 0 0	No communication Device identification Communication line with a short-circuit	
Effect	The status of PPS communication will automatically be displayed on this line. If communication is error-free, the controller identifies the unit connected by displaying the identification number.		
Displays	The identification of the connected unit is displayed. The list below shows the various digits with the associated types of units		
Identification codes	Only digital peripheral devices	s can be connected to the controller.	
	82Digital room unit83Digital room unit90Digital room sen102BMU (only with b	QAA70 sor QAA10	
Example	b) a Device identification (se b) Selected setting line	<b>B Z</b> a) 16 20 24	
Notes		cation appears (digit), the communication is error-free one of those listed above, the connected room unit is	
PPS-address	Within the PPS, a fixed addre Room unit 1 BMU 4 (only wit	ess is assigned to some types of devices:	
Important		only be operated under the respective PPS address. type QAA10, the right polarity of the terminals must be	

### Multi-functional inputs

# 2.55 Input H1

	2.0	o input			
Benefits	Remote control of space heating and d.h.w. Changeover of operating mode via telephone (e.g. in holiday houses).				
Description	Contact H1 is a multi-functional signal input that, depending on the selected setting, can be used to provide a number of functions through opening or closing its contact or				
Important	by accepting a DC 010 V signal. The relay contacts must be suited for use with extra low voltage (gold-				
Setting	Setting	range	Unit	Factory setting	
110	06		Increment	0	
Effect	on th	-		e changed. This has different effects or a DC 010 V signal is connected	
	0 <b>Changeover of operating mode HC, d.h.w. (remote telephone switch)</b> The operating mode of all heating circuits and of the d.h.w. circuit changes when the contact is closed.				
	<ol> <li>Changeover of operating mode HC (remote telephone switch)</li> <li>The operating mode of all heating circuits changes when contact is closed. The d.h.w. circuit remains unchanged.</li> </ol>				
	2 Minimum flow temperature setpoint (TVHw) The set "Minimum flow temperature setpoint contact H" of setting line 171 is activated when the contact is closed.				
	3 Heat generation lock Handling of an analog voltage signal.				
	4 Heat demand DC 010 V Handling of an analog voltage signal.				
	5 <b>Changeover of operating mode of HC1</b> (only local effect) The operating mode of heating circuit 1 changes over when the contact is closed. D.h.w. heating remains unchanged.				
	6	The operating r	f operating mode of HC2 (and the set of heating circuit 2 chan neating remains unchanged.	nges over when the contact is	
Note	With all settings (exception setting 4) several controllers of other manufacture can be connected in parallel to input H1. The function will be activated when one or several contacts close(s), depending on the selected setting.				

When using terminal H1 as a voltage input (setting 4), it is **not** possible to connect several signals in parallel.

#### 2.55.1 Changeover of operating mode

Setting 0/1)

D.h.w.

A remote telephone switch is a potential-free relay contact, e.g. in the form of a modem, which can be switched by making a phone call plus dialing a code. The operating modes of heating circuit and d.h.w. change when the contact connected to terminal H1 (e.g. a remote telephone switch) closes. In that case, the LEDs in the operating mode buttons band will flash. Whether or not d.h.w. heating can take place when the remote telephone switch is activated depends on the following setting: Setting 0: D.h.w. heating is locked when changeover is activated. Setting 1: D.h.w. heating remains released when changeover is activated.

#### Effect on the system

Depending on the type of unit to which operating mode changeover in a heating system is connected, an activation produces different changeover statuses:

Changeover of system	Changeover o	f all controllers in the system (line 145 = 1)	
	Prerequisite:	The contact must be connected to the master controller in segment 0	
		Possible address: Device address 1 (line 140)	
		Segment address 0 (line 141)	
	Effect:	<ul> <li>All controllers in the system switch to operating mode <sup>(1)</sup></li> <li>With setting 0, d.h.w. heating is switched off in the entire system; with setting 1, it is released in the entire system</li> <li>With all controllers, operating mode changeover with the buttons is no longer possible</li> <li>When the contact of the remote telephone switch opens, all controllers will return to the operating mode selected last</li> </ul>	
	Check	Buttons or + flash on all controllers in the system 1)	

<sup>1)</sup> With setting 0 as selected above (d.h.w. heating locked), buttons  $\overset{\bullet}{\bigcirc}$  and  $\overset{\bullet}{\rightrightarrows}$  will flash. With setting 1 as selected above (d.h.w. heating remains released), only operating mode button  $\overset{\bullet}{\bigcirc}$  will flash.

Changeover of segment	Changeover of	of all controllers in the same segment (line 145 = 0)
	Prerequisite:	The contact must be connected to the master controller in segments 0to 14Possible address:Device address 1Segment address 014(line 141)
	Effect:	<ul> <li>All controllers in the same segment switch to operating mode </li> <li>With setting 0, d.h.w. heating is switched off in the entire segment; with setting 1, it is released in the entire segment</li> <li>With all controllers in the same segment, operating mode changeover with the buttons is no longer possible</li> <li>When the contact of the remote telephone switch opens, all controllers will return to the operating mode selected last</li> </ul>
	Check	Buttons 也or +or 也+ 瑞flash flash on all controllers in the same segment 1)

### 2.55.2 Minimum flow temperature setpoint TVHw


D.h.w.	The adjusted minimum flow temperature setpoint of setting line 171 will be activated when a switch connected to terminal H1 (e.g. an air heater function for a warm air curtain) closes its contact. During this switching status, the LED of the respective heating circuit operating mode button flashes. For details, also refer to "flow temperature setpoint contact H" (setting line 171) in Index. When the minimum flow temperature setpoint is activated, d.h.w. is still being heated, if required.
Note	Optimally, this function can also be accomplished with the help of terminal H2 and setting line 174.

### 2.55.3 Heat generation lock

	Heat generation will be locked when a switch connected to terminal H1 (e.g. peak load shaving via ripple control) closes its contact. All heat demands of the heating circuits and of d.h.w. heating will be ignored. Frost protection for the boiler will remain ensured.
Chimney sweep function	The chimney sweep function can be activated although the heat generation lock is switched on.
Notes	Optimally, this function can also be accomplished with the help of terminal H2 and setting line 174.

#### 2.55.4 Heat demand DC 0...10 V

External consumers can transmit a demand for heat in the form of an analog signal of DC 0...10 V. The controller converts this voltage signal to a temperature setpoint of 0...130 °C and considers this value when generating the setpoint of boiler temperature control.

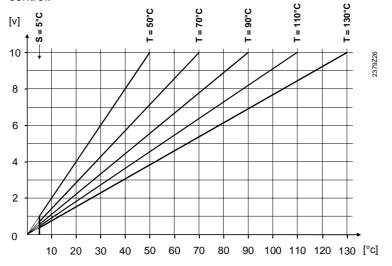

T = maximum value of heat demand

S = minimum limitation of heat demand = 5 °C

The setpoint for 10 V can be set with parameter "Maximum value of heat demand" (operating line 172, setting range 5...130 °C). The voltage corresponding to the displayed temperature can then be calculated as follows:

[V] =	10 [V] * "aktuelleTemperatur" [°C]
[v] — ",	Wärmeanforderungs – Maximalwert" [°C]

#### 2.55.5 Changeover of operating mode

Setting 5/6)

Using a modem, for example, the operating mode of heating circuit 1 or 2 can be switched to stand-by  $\bigcirc$ . When the contact connected to terminal H1 is closed, the signal lamp or the operating mode button will then flash.

Setting 5: the operating mode of heating circuit 1 will change when the contact is closed. D.h.w. heating remains unchanged.

Setting 6: the operating mode of heating circuit 2 will change when the contact is closed. D.h.w. heating remains unchanged.

These settings have no impact on other controllers in the system. Optimally, this function can also be accomplished with the help of terminal H2 and setting line 174.

Note

# 2.56 Minimum flow temperature setpoint contact H (TVHw)

Benefits	Temporary start-up of boiler via switching contact. Handling of heat demand signals from devices incompatible with LPB.
Description	Setting of temperature demand the boiler maintains when contact H is closed. Also refer to "input H1 and input H2" in Index.



Setting rangeUnitFactory setting8...TKmax°C70


...TKmax maximum limitation of boiler temperature

Effect

The level of the minimum flow temperature setpoint will be adjusted. Prerequisite:

This setting is used only if one of the inputs H1 or H2 (setting line 170 or 174) is set to "Minimum flow temperature setpoint".

The boiler temperature is maintained at least at this minimum level, even if the demand for heat continues to drop. The switching differential in that case is the same as that with a normal temperature demand:

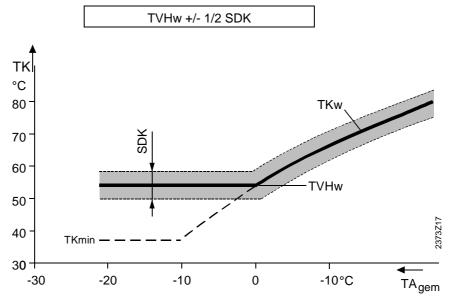

 TKw
 Boiler temperature setpoint TKmin
 Minimum limitation of boiler temperature setpoint (setting on line 81) TVHw
 Minimum setpoint of flow temperature, contact H, (setting on line 171)
 Switching differential of the boiler temperature (setting on line 3<sub>OEM</sub>)

# 2.57 Maximum value of heat demand signal DC 0...10 V (H1)

Benefits	Adjustable temperature range for heat demand signal via input H1. Can be matched to the voltage outputs of devices of other manufacture.			
Description	The parameter determines which temperature the maximum voltage of the setting "Heat demand via H1" (operating line 170, setting 4) corresponds to.			
Important	This setting is active only if on operating line 170 (input H1) setting 4 "Heat demand DC 010 V" has been selected.			
<u>Setting</u>	Setting range	Unit	Factory setting	
<u>172</u>	5130	٦°	100	
Effect	via H1" (operating line 17 Based on this temperature temperature.			
Benefit	delivered by a device of o	e contact can be matched to th ther manufacture. g non-Landis & Staefa products		
Description	This function enables the operating action of a devi	operating action of contact H1 ce of other manufacture.	or H2 to be matched to the	
Setting	Setting range	Unit	Factory setting	
173	01	-	1	
	Entry: 0 The contact is a N.C. contact, which means that it is normally closed and opened only when the third party device delivers a signal.			
		O. contact, which means that it I party device delivers a signal.		
Note	This setting has no impac – Input H1 is used for a h – Input H2 is used for d.h	eat demand signal DC 010 V	(line 170, setting 4).	

# 2.59 Input B31/H2

Benefit	Second d.h.w. temperature, minimum temperature demand, heat generation lock, changeover of operating modes.					
Description	Multi-	functional signal input w	which, with this setting, can be	used for different purposes.		
Important	The relay contacts must be suited for use with extra low voltage (gold-plated).					
Setting	Setting	range	Unit	Factory setting		
114	06		Increment	0		
Effect	With this setting, the function of terminal H2 can be changed. This will have different impacts on the controlled system, depending on the sensor signal received or depending on the switching status of a potential-free contact.					
	0 <b>D.h.w. sensor 2</b> Connection facility for a second d.h.w. sensor.					
	Minimum flow temperature setpoint (TVHw) The set "Minimum flow temperature setpoint contact H" of setting line 171 is activated when the contact is closed.					
	2 <b>Heat generation lock</b> Heat generation is locked when the contact is closed.					
	<ul> <li>Changeover of operating mode HC1</li> <li>The operating mode of heating circuit 1 will change when the contact is closed.</li> <li>D.h.w. heating remains unchanged. The d.h.w. circuit remains unchanged.</li> </ul>					
	<ul> <li>Changeover of operating mode HC2</li> <li>The operating mode of heating circuit 2 will change when the contact is closed.</li> <li>D.h.w. heating remains unchanged. The d.h.w. circuit remains unchanged.</li> </ul>					
Note	0, several controllers of other H2. The function will be activa on the selected setting. t (settings 0) no parallel conne	ted when one or several				
	2.59.1 D.h.w. sensor 2					
	When choosing this setting, this terminal can only be used with the second d.h.w. detector. The d.h.w. storage tank temperature can be acquired with one sensor located at the					
	bottom and one at the top of the tank. This will ensure better storage tank efficiency.					
Note	For more detailed descriptions about the control with 2 d.h.w. sensor, refer to "D.h.w.					

For more detailed descriptions about the control with 2 d.h.w. sensor, refer to "D.h.w. switching differential" in Index.

#### 2.59.2 Minimum flow temperature setpoint (TVHw)

<ul> <li>The adjusted minimum flow temperature setpoint of setting line 171 will be activities when a switch connected to the terminal (e.g. an air heater function for a warm curtain) closes its contact. During this switching status, the LED of the respectivit heating circuit operating mode button flashes. For details, also refer to "minimum temperature setpoint contact H" (setting line 171) in Index.</li> <li>D.h.w. When the minimum flow temperature setpoint is activated, d.h.w. is still being herequired.</li> </ul>							
Note	If desired, this function can also be accomplished with the help of terminal H1 and setting line 171.						
	2.59.3 Heat generation lock						
	Heat generation will be locked when a switch connected to the terminal (e.g. peak load shaving via ripple control) closes its contact. All temperature demands of the heating circuits and of d.h.w. heating will be ignored. Frost protection for the boiler will remain ensured.						
Chimney sweep function	The chimney sweep function can be activated although the heat generation lock is switched on.						
Note	If desired, this function can also be accomplished with the help of terminal H1 and setting line 170.						

#### 2.59.4 Changeover of operating mode

Setting 3/4)

Using a modem, for example, the operating mode of heating circuit 1 or 2 can be switched to stand-by . When the contact connected to terminal H2 is closed, the signal lamp or the operating mode button will then flash.

Setting 3: the operating mode of heating circuit 1 will change when the contact is closed. D.h.w. heating remains unchanged.

Setting 4: the operating mode of heating circuit 2 will change when the contact is closed. D.h.w. heating remains unchanged.

These settings have no impact on other controllers in the system.

Note If desired, this function can also be accomplished with the help of terminal H1 and setting line 170.

# 3 Description of OEM settings

Heat generating equipment

# 3.1 Minimum limitation of boiler temperature (TKmin<sub>OEM</sub>)

Benefit	Factory-set limitation.					
Setting	Setting range	Unit	Factory setting			
	8 Tkmin Tkmin Minimum limitation of boiler t	°C emperature (setting on line 81)	40			
Effect	The setting will ensure low lin on line 81.	nitation of the boiler temperatu	re's minimum limitation set			
	3.2 Maximum limitation of boiler temperature					
	(TKmax)					
Benefit	No damage to the boiler resul	Iting from condensation.				
Description	The boiler temperature limitat	ions are protective functions for	or the boiler.			
Setting	Setting range	Unit	Factory setting			
_2_	TKmin120 Tkmin Minimum limitation of boiler t	°C emperature (setting on line 81)	80			
Effect	The setting will change the bo	biler temperature's maximum li	imitation.			
	If the boiler temperature reaches the level set here, the burner will be switched off.					
	тк	Legend TK	Boiler temperature			
	°С 80 - ТК <sub>П</sub>	nex TKw	Boiler temperature setpoint			
	70 - TK	Tkmin	Minimum limitation of boiler temperature			
	60 -	SDK	Switching differential			
	50 -	TAgem	Composite outside temperature			
		2371226				
	<sup>40</sup> TK <sub>min</sub>	237				
	20 10 0 -10	-20°C TAgem				


#### 3.3 Switching differential of the boiler temperature

Benefit	Matching the burner to the type of boiler.				
Description	The boiler temperature is controlled by a 2-position controller for which a switching differential can be set.				
Setting	Setting range	Unit		Factory setting	
3	020	°C (K)		8	
Effect	The setting	changes the switching diff	erential	of the boiler temperature control.	
	Entry: Increase:	Switching differential will become wider Fewer burner starts and longer burner running times			
	Decrease: Switching differential will become smaller More burner starts and shorter burner running times				
Boiler temperature control	With 2-position control, heat is produced at certain intervals. The period of time during which heat is delivered is dependent upon the boiler mass and the amount of water contained in the boiler. The greater the demand for heat, the longer the burner runs at a time.				
Switching differential	ON OFF	SD W W SD SD SD SD SD SD SD SD SD SD SD SD SD	w SD ⊘	Setpoint Switching differential of the boiler Switch-on point Switch-off point	

#### 3.3.1 Single-stage burner

- Setpoint for switching on: If the boiler temperature (TKx) falls by more than half the switching differential below the currently valid boiler temperature setpoint (TKw), the burner will be switched on
- Setpoint for switching off: If the boiler temperature (TKx) exceeds by more than half the switching differential the currently valid boiler temperature setpoint (TKw), the burner will be switched off

The time switching off occurs can be delayed by the minimum burner running time. Also refer to setting  $04_{\text{OEM}}$ .

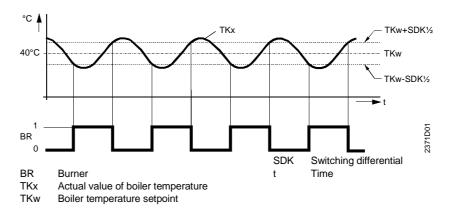

#### 3.3.2 2-stage burner

The second burner stage will be activated and deactivated according to the following settings:

- Release limit Setting 05<sub>OEM</sub>
- Reset limit Setting 06<sub>OEM</sub>

Note

# 3.4 Minimum limitation of burner running time

Benefit	Reduction of burner switching frequency.						
Note	Also termed "Burner cycling protection".						
Setting 식	Setting range 010	<u>Unit</u> min	Factory setting 4				
Effect	Once switched on, burner stage 1 will remain activated for at least the period of time set here.						
Minimum burner running time Restriction	As soon as the burner is switched on, the minimum burner running time starts to make certain the burner will not be switched off before the set minimum time has elapsed. Each time the burner is switched off, the minimum burner running time will be reset if not yet elapsed. If the boiler temperature exceeds the setpoint by the amount of the entire switching differential, the minimum burner running time will be ignored for safety reasons						
	TK $\uparrow$ $\circ$ C $\uparrow$ 60 40 40 40 40 40 40 40 40 40 40 40 40 40 4 4 4 4 4 4 4 4		TKw+SDK TKw+SDK/2 TKw TKw-SDK/2				

tBRmin

FΖ

BR

BR

FZ SDK Burner

Release counter

Switching differential of the boiler

2371D04

tBRmin Minimum burner running time

Boiler temperature setpoint

Actual value of boiler temperature

TKw

TKx

# 3.5 Release integral of burner stage 2


	·					
Benefit	Optimum switching on of burner stage 2.					
Description	Adjustment of heat deficit for releasing burner stage 2.					
Setting	Setting range		Unit	Facto	ry setting	
_5	0500		°C (K) min	50		
Effect	The setting	will change the s	witch-on point for	burner stage 2.		
	Entry: Increase:	Burner stage 2	will be released w	hen the heat defic	it is greater	
	Decrease:	Burner stage 2	will be released w	hen the heat defic	it is smaller	
Burner stage 2	If, with burner stage 1, the boiler temperature falls below the switch-on setpoint (TKw - SDK/2) by the amount of the release integral set here, the controller will release the second burner stage. During the time burner stage 2 is released, the controller will activate and deactivate					
	burner stage 2 according to the switching differential.					
	3.5.1	Temperatu	re-time integr	al		
Switching point	over time. In temperature Through the that is cons crossing is When the re	n this case, the d e falls below the l e generation of th idered, but also t significant, burne elease integral (a	ecisive criterion is ourner's switch-on le temperature-tim he extent of the ur r stage 2 will be re	the difference by v setpoint (TKw-SDF e integral it is not c dershoot. This me leased earlier. ram below) has rea		
Example	°С <sub>ткх</sub>				TKw+SDK/2	
	50 — —	a	+/		— — TKw	
	48				TKw-SDK/2	
	46 -		tF		2371Z32	
	44	I		I	<b>_</b> _	
		e limit temperature setpoint			t	

TKxActual value of boiler temperatureSDKSwitching differential of boiler

- t Time
- tF Time to release

# 3.6 Reset integral of burner stage 2

Benefit	Optimum switching off of burner stage 2.				
Description	Adjustment of the amount of surplus heat for locking burner stage 2.				
Setting	Setting range 0500	<sup>Unit</sup> °C (K) min	Factory setting 10		
Effect	Entry: Increase: Burner	ge the switch-off behaviour of burn stage 2 will be locked when surpl stage 2 will be locked when surpl	us heat is greater		
Burner stage 2	If, with burner stages 1 and 2, the switch-off setpoint (TKw + SDK/2) is exceeded by the amount of the reset integral set here, the controller will lock burner stage 2. When burner stage 2 is locked, the controller will activate and deactivate burner stage 1 according to the set switching differential.				
Switching point	<ul> <li><b>3.6.1 Temperature-time integral</b></li> <li>The temperature-time integral is a continuous summation of the temperature differential over time. In this case, the decisive criterion is the difference by which the boiler temperature exceeds the burner's switch-off setpoint TKx- (TKw+SDK/2).</li> <li>Through the generation of the temperature-time integral it is not only the period of time that is considered, but also the extent of overshoot. This means that when the crossing is significant, burner stage 2 will be locked earlier.</li> <li>When the release integral (area "b" in the diagram below) has reached the value set (point in time tR), burner stage 2 will be locked.</li> </ul>				
Example	°C 52 50 48	b	TKw+SDK/2		

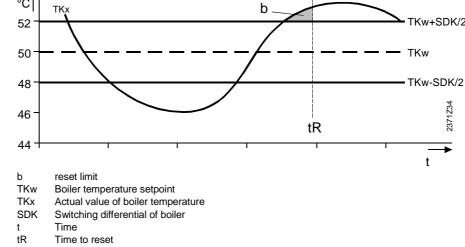

#### Pump overrun time 3.7

Benefit

Description

Protects	the boller	against	overtemp	eratures.


Overrun of the pumps makes certain that residual heat will be carried away, thus preventing the manual safety limit thermostat from responding.

Setting range	Unit	Factory setting
020	min	5

Effect

Setting 8

> All pumps that - at the time of burner shut-down - were operating, continue to run for the period of time set here. The behavior is the same as with burner shut-down when, with the burner deactivated, the boiler temperature demand becomes invalid. Also, the previous flow temperature setpoint is maintained to make certain the mixing valve will be open during the same period of time.

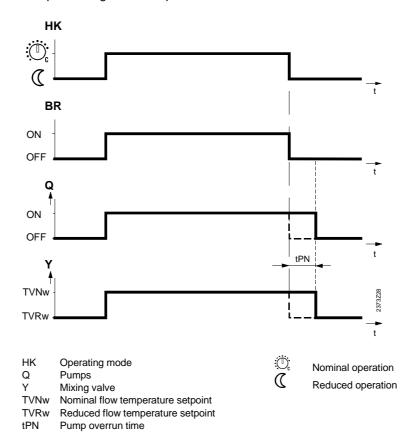


Example


# 3.8 Operating mode of the boiler

Benefit	A minimum boiler temperature is maintained only if required.				
Description	The setting defines whether it is necessary or desirable to maintain a minimum boiler return temperature.				
Setting	Setting 1	range	Unit	Factory setting	
<u> </u>	02		-	2	
Effect	<ul> <li>The following settings are available:</li> <li>Continuous operation:</li> <li>The boiler operates at the minimum boiler temperature level (operating line independent of whether or not the consumers currently call for heat. Excep Stand-by. Without extended burner running time.</li> </ul>				
	1 Automatic operation: The boiler is operated only when one of the consumers calls for heat. If the demand for heat drops below TKmin, the boiler is still maintained at the minimum boiler temperature level (operating line 81). Without extended burner running time				
	2	Automatic operation: The boiler is operated only when one of the consumers calls for heat. The effective boiler temperature setpoint is used, even if it lies below TKmin (operating line 81). If the boiler temperature drops below the setpoint by half the boiler's switching differential (SDK/2), the burner will be put into operation until the boiler temperature has exceeded TKmin by one switching differential (extended burner running time). With extended burner running time			
Note	Of course, if the demand for heat by one of the consumers exceeds the minimum boiler temperature, the required setpoint will be maintained.				
Standby	In stand-by mode $\bigcirc$ of all heating circuits, minimum limitation is deactivated. In that case, the controller must be in "standalone" mode (device address 0). The boiler temperature is maintained at required level only when there is demand for heat. The protective functions will remain active, however.				

#### 3.8.1 Extended burner running time

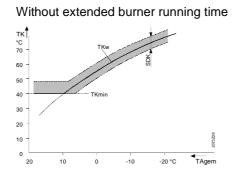

With extended burner running time

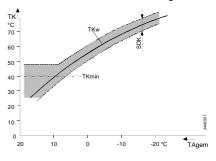

3.9	Protective boiler start-up
-----	----------------------------

	<u>.</u>		•			
Benefit	The required boiler tempe	The required boiler temperature setpoint will be reached quicker.				
	The condensation range w	The condensation range will be passed quicker.				
	Description					
		•	gas condensation occurs on the			
	walls of the combustion ch condensation occurs.	namber. The lower the boi	ler temperature, the more flue gas			
		nortens the boiler's heating	g up time by restricting the heat			
	-		ritical temperature range quicker,			
	thus minimizing flue gas c	ondensation.				
Setting	Setting range	Unit	Factory setting			
10	0 / 1	-	1			
Effect	The settings have the follo 0 Protective boiler sta	wing meaning: art-up is switched off				
	1 Protective boiler sta	art-up is switched on				
	<ul> <li>time integral.</li> <li>Protective boiler start-up leads to switching on / off actions or setpoint reductions of the heating circuits, depending on the type of heat consumer.</li> <li><b>3.9.1</b> Impact on 2-position loads</li> </ul>					
	Due to the deactivation of the pumps, heat consumption will be reduced. This reduces considerably the boiler water's heating up time.					
	Heating circuit pump:					
	Status	Effect				
	Locking signal > 0 %	Heating circuit pump OFF				
	Locking signal = 0 %	Normal pump operation	n			
	Boiler pump					
Note			ntrol of the boiler pump is selected			
		"depending on temperature demand" (line 12 OEM = 0).				
	Status	Effect				
	Locking signal > 5 %	Boiler pump ON				
	Locking signal < 5 %	Normal pump operation	on			
	• D.h.w. pump:					
	Status	Effect				

D.h.w. pump OFF

Normal pump operation

138/184

Locking signal > 50 %

Locking signal < 50 %

System pump

Status	Effect
Locking signal > 5 %	System pump OFF
Locking signal < 0 %	Normal pump operation

#### Switching point

Through the generation of the temperature-time integral it is not only the period of time that is considered, but also the extent of boiler temperature undershoot. This means that when the crossing is significant, the pumps will be deactivated earlier.

#### 3.9.2 Impact on modulating loads

Due to the lowering of the setpoint, heat consumption will be reduced. This reduces considerably the boiler water's heating up time.

• Mixing valve:

Status	Effect
Locking signal > 0%	Flow temperature setpoint will be lowered.
	The extent of lowering is dependent on the magnitude and the period of time of boiler temperature undershoot.
Locking signal reduced to 0 %	Setpoint according to the normal control condition

Setpoint reductionThrough the generation of the temperature-time integral it is not only the period of time<br/>that is considered, but also the extent of boiler temperature undershoot. This means<br/>that when the undershoot is significant, the setpoint reduction will be greater.

SupervisionProtective boiler start-up can be interrupted to ensure that, in the event of a burner<br/>fault, for instance, frost protection for the plant will be provided.<br/>In the case of protective boiler start-up and simultaneous frost protection for the plant,<br/>the boiler temperature gradient must turn positive within 15 minutes. Otherwise, the<br/>locking signal will become invalid for at least 15 minutes. On completion of the 15<br/>minutes, protective boiler start-up will become active again as soon as the boiler<br/>temperature gradient turns positive.


#### 3.9.3 Temperature-time integral

#### Description

The temperature-time integral generates the locking signal for restricting the heating circuits.

During the generation of the locking signal, the following processes can take place:

Diagram	Procedure				
a to b	Within a foreseeable period of time, the actual boiler temperature (TKx)				
	will lie <b>below</b> the value of Tkmin-SDK/2.				
	→ Locking signal will be built up				
b to c and	Within a foreseeable period of time, the actual boiler return temperature				
d to e	(TKx) will lie within half the switching differential of the boiler return				
	temperature's minimum limitation.				
	→ Locking signal will remain at a constant level				
c to d and	Within a foreseeable period of time, the actual boiler return temperature				
e to f	(TKx) will lie <b>above</b> TKw.				
	<ul> <li>Locking signal will be decreased</li> </ul>				

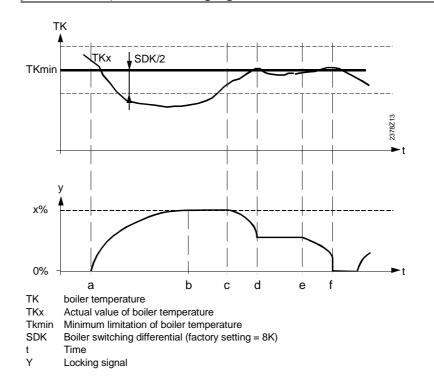

Diagram

# 3.10 Control of boiler pump

Benefit	Boiler pump control mode can be selected.				
Description	The setting defines the crite	ria according to which the boile	er pump shall be operated.		
Setting	Setting range	Unit	Factory setting		
12	0 / 1	-	0		
Effect	0 The boiler pump oper	settings have the following meaning: The boiler pump operates when there is a demand for heat. In that case, the boiler pump responds to locking signals.			
		rates when there is a demand f e, the boiler pump does not res t-up).			

# Heating circuit

	valve (UEM)         Efficient control of mixing heating circuits.				
Benefit					
Description	By adding cooler return water to the water delivered by the boiler, boiler temperature variations will be smoothed out, enabling the mixing valve to produce more constant flow temperatures. However, to achieve the desired mixing, the actual value of the boiler's flow temperature must be higher than the required mixing valve flow temperature setpoint. If this is not observed, the setpoint cannot be attained within the required period of time. Hence, this setting raises the mixing valve flow temperature setpoint.				
Setting	Setting range	Unit	Factory setting		
30	050	°C (K)	10		
Effect	The setting raises the boiler temperature setpoint when the mixing heating circuit ca for heat. Increase: Reduced risk of flow temperature undershoots				
Boiler boost	Decrease:       Flow temperature undershoots possible         The controller generates the boiler temperature setpoint based on the boost set here and the current flow temperature setpoint:         The greater the temperature differential between boiler flow and mixing heating circuit, the quicker the required setpoint can be reached.         TVw       Flow temperature setpoint         Setting on line 30 OEM       Boost         Total       Boiler temperature setpoint				
Note	Also refer to "heating curve s	lope" in Index.			

# 3.11 Boost of flow temperature setpoint mixing valve (UEM)

# 3.12 Gain factor of room influence (KORR)

Benefit	The influence of room temperature deviations on the controlled system can be adjusted.				
Note	Room influence can be activated and deactivated (setting on line 101).				
Setting	Setting range Unit	Factory setting			
Effect	This setting will change the authority of the room temp	erature influence.			
	Increase: Authority of room influence will increa Decrease: Authority of room influence will decrease	se			
Correction	One half of the setting made on line 31 <sub>OEM</sub> is multiplied temperature setpoint from the actual value	-			
	The result is then added to the room temperature setpoint.				
	$TRwk = TRw + \frac{31_{OEM}}{2}(TRw - TR)$	x)			
	TRwRoom temperature setpointTRxActual value of the room temperatureTRwkCorrected room temperature setpoint				

Note

The gain factor of room influence is only active when a room unit is connected.

# 3.13 Constant for quick setback and optimum start control (KON)

Benefit	Making use of the building's thermal storage capacity.				
Description Important	Quick setback is dependent on whether or not a room temperature sensor is used. Therefore, we speak of quick setback with or without room influence. This setting is active only if <b>no</b> room sensor is used.				
Setting	Setting range		<u>Unit</u>	Factory setting 2	
Effect	The duration Entry: Increase:	n of quick setback and the forward shift will be changed. Longer setback and forward shift times. For heavy and well insulated buildings that cool down slowly and that require longer heating up times.			
	Decrease:	Shorter setback and forward shift times. For light and poorly insulated buildings that cool down quickly and th require shorter heating up times.			
	3.13.1	Quick setba	ack without room ir	nfluence	

# Quick setback is started as soon as a change to a lower room temperature setpoint takes place (e.g. switching times in automatic mode).

The heating circuit pump will be deactivated until the quick setback time has elapsed, which is generated from setting 320EM, the composite outside temperature and the room temperature setpoint change.

Example

The example applies to a setpoint step change of 4°C (e.g. TRw from 20 to 16 °C):

		Setting on line 32 OEM					
TAgem	0	4	8	12	15	20	
- 20	0	0	0	0	0	0	
- 10	0	0,5	1	1.5	2	2.5	
0	0	3	6	9	11	15	
+10	0	5	11	15 (16,5)	15 (21)	15 (27)	
		Values in hours					

Note

If a room sensor is connected, the quick setback time will not be generated from this setting. Also refer to *"quick setback with room temperature influence"* in Index.

#### 3.13.2 Optimum start control without influence

Also refer to "optimum start control" in Index.

# 3.14 Boost of room temperature setpoint (DTRSA)


Benefit	Reduction of the building's heating up time.				
Note	This setting is active only if a room sensor is used.				
Setting	Setting range		Unit	Factory setting	
33	020		°C (K)	5	
Effect	The duration of boost heating will be changed.				
	Entry:				
	Increase: More setpoint boost				
		Heating up time will become shorter			
	Decrease:				

#### 3.14.1 Boost heating

Boost heating is started as soon as switching to a higher room temperature setpoint occurs (e.g. switching times in automatic mode).

With the setting on line  $33_{OEM}$ , the room temperature setpoint will be raised until the room is heated up (TRw -  $\frac{1}{4}$  °C).

The boost produces an increase in the flow temperature setpoint.

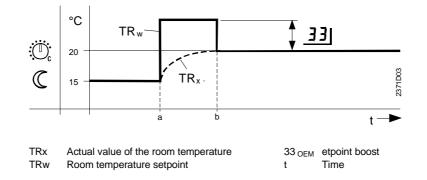

## 3.15 Frost protection for the plant

Benefit	The plant is protected against freeze-ups.					
Description	When the function is activated, the heating will automatically be switched on if there is a risk of front thus proventing fronze upo					
Important	risk of frost, thus preventing freeze-ups. Prerequisite for this function is that the plant operates properly!			erly!		
Setting 34	Setting r	ange	Unit	Factory setting		
Effect		lant will be protected by	activating the pumps.			
	Entry:					
	0	Frost protection for the Function deactivated	plant <b>OFF</b>			
	1	Frost protection for the Function activated	plant <b>ON</b>			

### 3.15.1 Frost protection for the plant

The heating circuit pump will be switched on as a function of the actual **outside temperature**, even if there is no demand for heat.


Outside temperature	Pump	Diagram
4 °C	Continuously ON	ON
-51.5 °C	ON for 10 minutes at 6-hour intervals	takt
1.5 °C	Continuously OFF	OFF

Exception

Between -4...-5°C, different statuses can occur. In that range, it is important which situation had existed before:

If the temperature was previously higher (in the range of "takt"), the pump is switched on / off also in the range -4 to -5 °C and is continuously running only when the outside temperature is lower

If the temperature was previously lower (in the range of "ON"), the pump is continuously running also in the range up to -4 °C and is switched on / off only when the outside temperature is higher

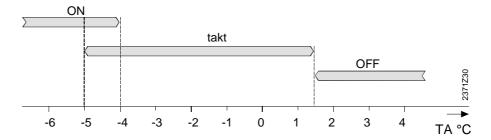

## 3.16 Control mode of actuator


Benefit	Use of 2- or 3-position mixing valve actuators.					
Description	By selecting the control mode, the control is matched to the type of mixing valve actuator used in the mixing heating circuit.					
Setting 35	Setting range 0 / 1	<u>Unit</u>	<i>Factory setting</i>			
2-position control	<ul> <li>0 2-position control</li> <li>1 3-position control</li> <li>2-position control delivers or</li> </ul>	o / off output signals that allow	the motorized mixing value			
2-position control	2-position control delivers on / off output signals that allow the motorized mixing valve to open and close. For adequate control, a switching differential is required. When using a 2-position actuator, it is therefore important that the switching differential be matched to the type of plant. Also refer to "switching differential of actuator" in Index (setting line 36 <sub>OEM</sub> ).					
3-position control	3-position control delivers output signals that allow the actuator to open, close or stop in any position. With this control mode, the switching differential need not be adjusted since the 3-position actuator can stop in any position.					

## 3.17 Switching differential of actuator


Benefit	Optimum control of 2-position mixing valve.					
Description	For a 2-position actuator, a switching differential can be adjusted, allowing the 2- position control to be optimally matched to the type of actuator used.					
Important	The actuator's mode of control on setting line 35 <sub>0EM</sub> must be set to "2-position".					
Setting	Setting range	Unit	Factory setting			
36	020	°C (K)	2			
Effect	This setting	changes the switching differential of mixing v	alve actuator Y1.			
	Entry:					
	Increase:	Switching differential will become larger Fewer and longer heating up times, larger temperature variations. Greater temperature variations in the heating circuit.				
	Decrease:	<ul> <li>Switching differential will become smaller</li> <li>More frequent and shorter heating up times, smaller temperar variations.</li> <li>Smaller temperature variations in the heating circuit.</li> </ul>				


### 3.17.1 Control of mixing valve actuator

2-position control provides control of the motorized mixing valve by delivering pulses. Generally, this means: The greater the amount of heat needed, the longer the heating up time.

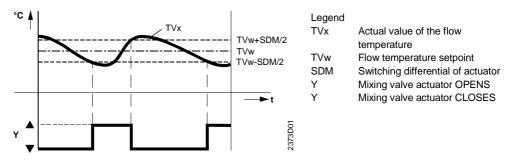

#### Switching differential





w	Setpoint
360EM	Switching differential of
	actuator
$\triangle$	Switch-on point
V	Switch-off point
ON	Mixing valve actuator
	OPENS
OFF	Mixing valve actuator
	CLOSES

## 3.18 Overtemperature protection for the pump heating circuit

Benefit	Prevents overtemperatures in the pump heating circuit					
Description	The flow temperature can be higher than that called for by the pump heating circuit (e.g. in the case of a higher setpoint demand by another consumer). The controller offsets the surplus energy by letting the pump cycle, thus preventing the pump heating circuit from overheating.					
Setting	Setting range	Unit	Factory setting			
31	0 / 1	-	1			
Effect	This setting switches overtem	perature protection on	or off:			
	0 Inactive: The heating circuit pun	np is operated without	overtemperature protection.			
	1 Active: Overtemperature prote excessive flow tempera		ting circuit pump in a way that ated.			
Protection against overtemperatures	When overtemperature protection is provided, the heating circuit pump cycles, thus reducing excessive flow temperatures that lie above the setpoint. The cycling period is fixed at 10 minutes.					
On time ratio	$\mathbf{\mathcal{E}} = \frac{TVwGef - TRw}{TKxGed - TRw}$	£ TVwGef TRw TKxGed TKx	On time ratio Demanded flow temperature setpoint Current room temperature setpoint Attenuated boiler temperature Actual value of the common flow temperature			
Limitations	The pump's running time is set to a minimum of 3 minutes. The pump's off time is set to a minimum of 2 minutes. Also, the pump will be activated and deactivated at the following switching points:					
		TVxGed ≤ TVwGef (ε ≥ Γ <sub>Kx</sub> ≤ T <sub>Rw</sub>	:1)			
Notes	If a flow sensor is connected heating circuit pump is inactiv		, overtemperature protection for the			

## 3.19 Heat gains (Tf)

Benefit	To save energy, heat gains are taken into consideration.				
Description	This setting takes into account potential heat sources such as machines, pieces of equipment, intense solar radiation, or similar, that might adversely affect accurate control.				
Setting	Setting range		Unit	Factory setting	
38	-2+4		°C	0	
Note	Heat gains are automatically considered by the controller. This means that manual settings can be changed by the controller.				
Effect	Compensatio	on of potential co	nstant heat sources		
	Entry: Increase: For more compensation In the case of significant heat sources				
	Decrease:	For less comper In the case of le	nsation ss significant heat s	ources	

150/184

## 3.20 Adaption sensitivity 1 (ZAF1)

Benefit	Adaption of the heating curve as a function of the outside temperature.					
Description	Adaption sensitivity 1 serves for calculating the adaption of the heating curve in the temperature range 4 to 12 °C. Also refer to "adaption of heating curve" in Index.					
Setting	Setting range		Unit		Factory setting	
39	115		-		15	
Note	The level of adaption sensitivity is automatically adapted by the controller and, therefore, need not be manually adjusted.					
Effect	The heating curve in the temperature range 4 to 12 °C will be differently adapted, depending on the level of adaption sensitivity 1. Increase: More adaption					
	Decrease:	Less adaption				
Reduction	taken place means that	, adaption sensitive the extent of adaption in the extent of adaption in the extent of adaption in the extent of adaption is the extent of adaption	tivity 1 will au aption and the	tomatically be rec us the readjustme	een 4 and 12 °C (ZAF1) h luced by one step. This ent of the slope and the uced.	າລຣ
Note	heating curve's parallel displacement will gradually be reduced . When readjusting the slope of the heating curve, the adaption sensitivity will automatically be reset to the factory setting.					
Adaption of heating curve	•	s of heating curv f heating curve"	•	described in the	relevant section. Also refe	⊧r to

## 3.21 Adaption sensitivity 2 (ZAF2)

Benefit	Adaption of the heating curve as a function of the outside temperature.					
Description	Adaption sensitivity 2 serves for adapting the heating curve in the temperature range <b>below</b> 4 °C. Also refer to "adaption of heating curve" in Index.					
Setting	Setting range	Unit	_	Factory setting		
40	115	-		15		
Note	The level of adaption sensitivity is automatically adapted by the controller and, therefore, need not be manually adjusted.					
Effect	The heating curve in the temperature range below 4 °C will be adapted differently, depending on the level of adaption sensitivity 2.					
	Increase: More adaption					
	Decrease:	Less adaption				
Reduction	place, adap	of adaptation and thus onl	matically be reduced b	4 °C (ZAF2) has taken by one step. This means that the heating curve's slope will		
Note	When readjusting the slope of the heating curve, the adaption sensitivity will automatically be reset to the factory setting.					
Adaption of heating curve	•	s of heating curve adaptic f heating curve" in Index.	on is described in the r	elevant section. Also refer to		

152/184

## 3.22 P-band mixing valve (Xp)

		U				
Benefit	Adapting the control characteristic to the plant's behavior (controlled system).					
Description	Setting the proportional band for control of mixing valve actuators Y1 and Y5 that can be used for heating circuit 1 and heating circuit 2.					
Setting	Setting range	Unit	Factory setting			
41	1100	°C (K)	32			
Effect	Xp influences the co	ontroller's P-behavior.				
	3.23 Inte	gral action time r	nixing valve (Tn)			
Benefit	Adapting the control	characteristic to the plant's l	behavior (controlled system).			
Description	Setting the I-part for control of mixing valve actuators Y1 and Y5 that can be used for heating circuit 1 and heating circuit 2.					
Setting	Setting range	Unit	Factory setting			
42	10873	S	120			
Effect	Tn influences the controller's I-behavior.					
	3.24 Act	uator running tim	e mixing valve			
Benefit	Setting the actuator	running time.				
Description	Mixing valves have	different actuator running tim	es.			

Setting range	Unit	Factory setting
30873	S	120

Setting

D.h.w.

# 3.25 Maximum nominal setpoint of d.h.w. temperature (TBWmax)

**Benefits** 


Setting can be limited by the end-user. Reduces risk of scalding.



Setting rangeUnitFactory setting8...80°C60

Effect

The setting will ensure maximum limitation of the nominal d.h.w. temperature setpoint (setting on line 26).

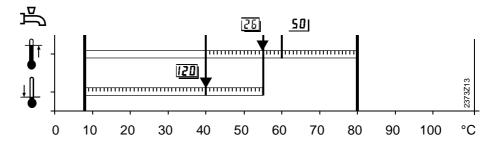

26 Setting "Nominal setpoint of the d.h.w. temperature"

120 Setting "Reduced setpoint of the d.h.w. temperature"

50 OEM Setting "Maximum nominal setpoint of the d.h.w. temperature"


154/184

# 3.26 Switching differential of d.h.w. temperature (SDBW)

Benefit	Optimum frequency of d.h.w. heating.				
Description	D.h.w. heating is in the form of 2-position control for which a switching differential must be set.				
Note	The switching differential used for d.h.w. control does not affect d.h.w. heating with a control thermostat.		ffect d.h.w. heating with a		
Setting	Setting range		Unit		Factory setting
51	020		°C (K)		5
Effect	The setting will change the switching differential of the d.h.w. temperature control.		v. temperature control.		
	Entry:	Entry:			
	Increase:	•	ential will become per heating up time	0	perature variations
	Decrease:			maller temperature	

#### 3.26.1 d.h.w. temperature control

2-position control heats the d.h.w. at certain intervals. The duration of the heating up time is dependent on the mass of the storage tank and the amount of water contained in the tank. The greater the amount of d.h.w. needed, the longer the heating up time.

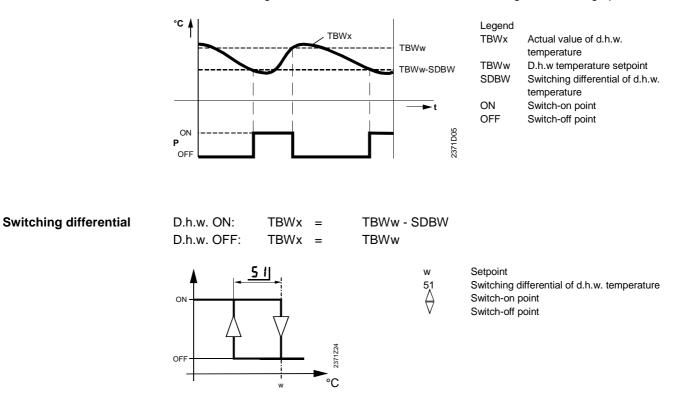

### 3.26.2 D.h.w. temperature control with 2 sensors

The d.h.w. temperature is acquired with 2 temperature sensors connected to terminals B3 and B31.

The control considers the actual values of the sensor for the higher and the lower temperature as follows:

D.h.w. ON:	TBWx of both sensors	=	TBWw - SDBW
D.h.w. OFF:	TBWx of both sensors	=	TBWw

If the d.h.w. temperature is controlled with 2 sensors, the respective setting must be made on line 174.

156/184

## 3.27 Legionella function

Benefit	Potential legionella viruses will be killed.		
Description	The legionella function ensures that the d.h.w. in the storage tank will periodically be raised to a higher temperature, thus making certain that potential legionella viruses are killed.		
Setting	Setting range	Unit	Factory setting
52	0 / 1	Increment	1
Effect	The setting activates or deact Entry: 0 OFF: Function not activ	-	
	up for the first time and	e activated every Monday mor l lasts a maximum of 2.5 hours setpoint. Also refer to "setpoir	s. The d.h.w. is heated up to
Note	<ul> <li>This function is possible on program.</li> <li>If the legionella function is a repeated the next time the</li> </ul>	aborted during the usual time	
Legionella	Legionellas are viruses that ca pneumonia (legionnaires' dise water temperatures at or perio	ease). To minimize the risk, it i	s important to maintain hot
	piping and in air conditioning infection, it is very important to In large plants, it must be ens		minimize the risk of such plant. perature is not lower than 60

## 3.28 Setpoint of legionella function

Benefit	Adjustable temperature leve	l to kill legionella viruses.	
Description	d.h.w. temperature is raised	a function is an adjustable tem when the legionella function is efer to "legionella function" in l	activated (refer to section
Setting	Setting range	Unit	Factory setting
53	895	°C	65
Effect	The setting changes the d.h up as a result of the legione	.w. setpoint during the period o	of time the d.h.w. is heated

## 3.29 Discharge protection during d.h.w. heating

Description	Presents discharging of the d.h.w. storage tank due to too low flow temperatures during d.h.w. heating.		
Setting	Setting range	Unit	Factory setting
24	02	-	2
Effect	•	ctivates the protection against charging is <b>not</b> active	discharging:
	1 Protection against dis	charging is <b>active</b>	
	2 Protection against dis	charging is <b>active</b> only when I	neat generation is locked
	temperature (operating line	charging of the d.h.w. is active 126) is checked during the hea alue is reached, d.h.w. heating	ating cycle:

 If the boost value is less than 1/8 of the value set, d.h.w. heating will be interrupted (pump will overrun for at least 1 minute) 1 min

## Service

## 3.30 Continuous display

Benefit	Choice of continuous displays.		
Setting	Setting range 0 / 1	Unit	Factory setting 0
Effect	The setting will change the continuous display which appears w selected.		C C
	Mit Erzeugerfunktionalität	Ohne Erzeugerfunktional	ität

0 Weekday / time of day1 Actual value of the boiler

temperature

Weekday / time of day Actual value of the flow temperature heating circuit

(.0)

## 3.31 Software version

The third digit gives the software revision

Benefit	Straightforward	display of so	ftware version in use, without removing the controller
Description	The software version installed represents the state of the software available at the time the controller was produced.		
Setting	Display		Unit
<u>9  </u>	00.0 99.9		Digits
Effect	The software version will automatically be displayed on this line.		
	Example:	01.0	
	The first 2 digits	s give the soft	ware version (01.)

## 3.32 Device operating hours

Benefit	Display of the number of dev	ice operating hours.	
Description	Here, you can read the number of hours the controller has been in operation		
Setting	<i>Display</i> 0 500'000	<u>Unit</u> h	
Effect	automatically be displayed of The hours considered as ope	Irs since the controller was first commissioned will In this line. Prating hours are those during which power was supplied to Ing the periods of time with no effective heating operation.	

The number of operating hours cannot be reset.

## 4

Introduction


The functions described below require no settings. They are performed automatically but have an impact on the plant.

For the rectification of faults, planning and plant maintenance, it may therefore be very advantageous to know about their influence on plant operation.

## 4.1 Generation of boiler temperature setpoint

Benefit	Demand-dependent control of the burner.	
Description	Depending on the temperature situation, the various heating circuits call for different flow temperature setpoints as demanded by boiler temperature control. However, since boiler temperature control can consider only one setpoint, a selection is made.	
Process	Generally, the demand for the highest setpoint required by a consumer (e.g. by a heating circuit) generates the current boiler temperature setpoint. The setpoint requirements considered stem from both controller-internal setpoints and setpoints transmitted via LPB. Auxiliary functions, such as setpoint boosts and the like, are included in the setpoints actually demanded at the time.	
Exception	A demand for d.h.w. has priority over all other setpoint requirements, which means that the required d.h.w. setpoint will be maintained, even if it is lower than that called for by a heating circuit.	
Effect	The boiler temperature is maintained at the highest setpoint currently demanded - unless d.h.w. is required.	



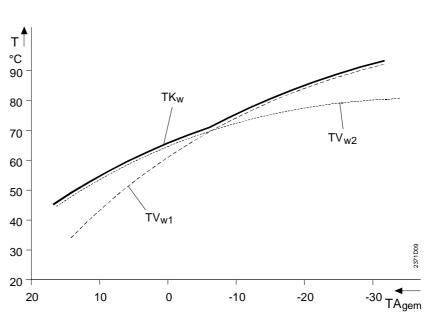

TKw Boiler temperature setpoint

TVw1 Flow temperature setpoint of heating circuit 1 (incl. setpoint boost if any)

TVw2 Flow temperature setpoint of heating circuit 2 (incl. setpoint boost if any)

## 4.2 Automatic 24-hour heating limit

Benefits	Automatic shut-down of heating. Saving energy without sacrificing comfort.
Description	This is a fast-acting savings function since the heating is switched off when there is no more demand for heat. Economical operation is ensured throughout the year, especially during intermediate seasons. Manual switching off is no longer required.
Notes	The automatic 24-hour heating limit does not function in continuous operation
	4.2.1 Without room influence
Introduction	If <b>no</b> room unit is connected, the room temperature setpoint will <b>not</b> be readjusted by the room influence. In that case, the automatic 24-hour heating limit operates according to the selected setpoint of $\textcircled{0}$ or $\bigstar$ .
Process	The temperature basis used for this process are the values of the flow temperature setpoint and the current room temperature setpoint.
Switching off	If the flow temperature setpoint falls below the room temperature setpoint plus a correction value, the heating will be switched off.
	Heating OFF: TVw = TRw + 2 S/10
Switching on	If the flow temperature setpoint exceeds the room temperature setpoint plus a correction value, the heating will be switched on.
	Heating's switch-on point:
	TVw = TRw + 4 S/10
	TVw Flow temperature setpoint TRw Room temperature setpoint

s Slope of heating curve

#### With room influence 4.2.2

Introduction	The automatic 24-hour heating limit operates depending on the current flow temperature setpoint. If a room unit is connected, the room influence continuously readjusts the flow temperature setpoint. This means that the automatic 24-hour heating limit differs when room influence is used.
Process	The temperature basis used for this process are the values of the flow temperature setpoint and the current room temperature setpoint.
Switching off	If the flow temperature setpoint corrected by the room influence falls below the room temperature setpoint plus a correction value, the heating will be switched off. Heating's switch-off point: $TVwk \le TRw + 2\frac{S}{10} - \frac{310EM}{16}$
Switching on	If the flow temperature setpoint corrected by the room influence exceeds the room temperature setpoint plus a correction factor, the heating will be switched on. Heating's switch-on point: $TVwk \ge TRw + 4\frac{S}{10} - \frac{310EM}{16}$

TVwk Flow temperature setpoint corrected by the room temperature

Room temperature setpoint Slope of heating curve TRw

s

## 4.3 Quick setback with room sensor

#### Benefit Making use of the building's thermal storage capacity.

 Description
 Quick setback is dependent on whether or not a room temperature sensor is used. A differentiation must therefore be made between quick setback with or without room sensor.

 Important

This process has an impact only when a room sensor is used.

of the respective room temperature setpoint (TRx = TRw).

Process

Quick setback is started as soon as a change to a lower room temperature setpoint takes place (e.g. switching times in automatic mode). Quick setback is terminated as soon as the actual room temperature reaches the level

H "Quick setback" function

Effect

Due to the readjustment of the room temperature setpoint, the heating circuit pump will be switched off until the quick setback process is terminated. This means that the room temperature falls quicker since the supply of heat from the boiler is cut off.

NoteIf no room sensor is connected, quick setback will not be accomplished through this<br/>process. Also refer to "constant for quick setback" in Index.

# 4.4 Overtemperature protection mixing heating circuit

Description	This function is used to prevent the mixing heating circuit from reaching excessive temperatures, caused by a defect of the mixing valve, for example.
Note	The function is independent of the pump heating circuit's overtemperature protection and cannot be deactivated.
Process	If the flow temperature exceeds the limit value "Maximum limitation of flow temperature" + 7.5 °C (fixed value), the pump will be deactivated. This limit function acts only with the mixing heating circuit.

## 4.5 Attenuated outside temperature

Benefit	Making use of the building's thermal storage capacity		
Description	The attenuated outside temperature is the simulated room temperature of a fictive building that has no internal heat source. This means that it is only the outside temperature that affects the room temperature.		
Setting	No direct setting can be made. The generation of the attenuated outside temperature cannot be influenced.		
Reset	<ol> <li>It is possible, however, to reset the attenuated outside temperature:</li> <li>Press the line selection buttons to select line 34.</li> <li>Press the + / - buttons for 3 seconds. As soon as the display stops flashing, the attenuated outside temperature is reset to the actual outside temperature.</li> </ol>		
Process	The attenuated outside temperature is generated by the controller. It is calculated at 10-minute intervals, based on the actual outside temperature. The factory setting uses a basic value of 0 °C.		
Effect	The attenuated outside temperature affects directly only summer / winter changeover. The attenuated outside temperature acts indirectly, via the composite outside temperature, on flow temperature control.		
Example	TA °C 17- 16- 15 TAged		

15 15 14 13 18:00 06:00 18:00 06:00 18:00 h

TAaktActual outside temperatureTAgedAttenuated outside temperature

## 4.6 Composite outside temperature

 Benefit
 Compensating variable for flow temperature control.

 Description
 The composite outside temperature is a mixture of the actual outside temperature and the attenuated outside temperature as calculated by the controller.


 Process
 The mixture of actual and attenuated outside temperature is dependent on the type of building construction (setting 113) and is generated as follows:

Selected type of construction	composite outside temperature
Heavy (setting 113 = 0)	Tagem = 1/2 TAakt + 1/2 TAged
Heavy (setting 113 = 1)	Tagem = <sup>3</sup> / <sub>4</sub> TAakt + <sup>1</sup> / <sub>4</sub> TAged

#### Effect

The composite outside temperature as a compensating variable acts on flow temperature control, that is thus matched to the prevailing weather conditions. It also acts on the 24-hour heating limit to shut down the heating.

#### Example

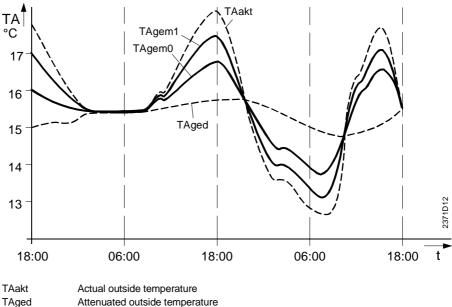

Attenuated outside temperature
Composite outside temperature for light building structures
Composite outside temperature for heavy building structures

## 4.7 D.h.w. push


Benefit	Availability of d.h.w. is also ensured during non-occupancy times.
Description	If, due to unexpected demand, the d.h.w. storage tank is emptied, the d.h.w. push provides one-time charging of the storage tank until the nominal d.h.w. temperature setpoint is reached.

 Process
 The d.h.w. push is triggered as soon as the actual d.h.w. temperature falls below the reduced d.h.w. setpoint (line 510EM ) by an amount that exceeds twice the switching differential (line 120).

 TBWx < TBWR - 2 SDBw</th>

EffectWhen the d.h.w. push is triggered, the storage tank is charged once until the nominal<br/>d.h.w. temperature setpoint (line 120) is reached.<br/>Then, normal operation according to the d.h.w. heating program is resumed.



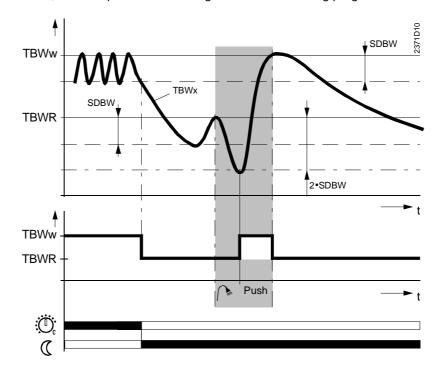

SDBW Switching differential d.h.w.

TBWw Nominal setpoint of the d.h.w. temperature

TBWR Reduced setpoint of the d.h.w. temperature

## 4.8 Pump and valve kick

Benefit	No seizing of pumps and valves.		
Description	The pump and valve kick is a protective function aimed at preventing the pumps and valves from seizing.		
Process	The connected pumps and valves will be activated for 30 seconds every Friday morning at 10:00 h, on by one, at 30 second intervals. Non-existing devices will be skipped so that the order of activation may vary. The pump kick is activated without giving consideration to any of the other functions. The valve kick is activated only when there is no demand for heat.		
Effect	During the periods of time pump and valve kick are activated, the water circulates. The mechanical parts of the pumps and the valve seats will be purged, thus preventing the pumps and valves from seizing.		

# 4.9 Protection against discharging after d.h.w. heating

Benefit	Inadvertent discharging of the d.h.w. storage tank will be prevented.
Description	The "Protection against discharging after d.h.w. heating" prevents inadvertent discharging of the d.h.w. storage tank resulting from the pump overrun. Together with "Protection against discharging during d.h.w. heating" (operating line 54 <sub>OEM</sub> ), efficient protection against discharging is thus ensured.
Process	The controller compares the storage tank temperature with the cascade flow temperature (common flow temperature) or, in certain situations, with the boiler temperature. If the cascade temperature (or the boiler temperature) is lower than the storage tank temperature, pump overrun will be stopped prematurely.

## 4.10 Overview of pump operation

#### Benefit

Straightforward checking of proper functioning of the various pumps.

#### Description

Operation of the various pumps depends on a number of factors. To enable you to quickly understand the different interrelationships when commissioning and checking the plant, please make use of the list below. It provides information about the combinations of settings (pump setting / heat demand) where a pump runs :

	Application	Pump behavior with valid <sup>1)</sup> demand for heat: by HC via H1 / H2 by d.h.w.		
Q2	Pump HK1	Runs when HK1 demands heat	Does not run	Does not run
Q6	Pump HC2	Runs when HC2 demands heat	Does not run	Does not run
Q3	D.h.w. pump	Does not run	Does not run	Runs when there is demand for heat

When there is no more demand for heat, the activated pumps continue to run. <sub>Also refer to</sub> pump overrun time (8 OEM).

<sup>1)</sup> Reasons for an invalid demand for heat can be, for example, summer/winter changeover, 24-hour heating limit, quick setback, or room temperature limitation by room sensor.

172/184

## 4.11 Frost protection

Benefit Ensures that the boiler and the d.h.w. temperature will not fall below a certain level

DescriptionIn addition to the frost protection modes described here, frost protection for the building<br/>and frost protection for the plant, whose parameters can be set, are also active. For<br/>details, refer to the description of lines 28 and 34 OEM.

#### 4.11.1 For the boiler

Process	<i>If</i>	then
	the actual boiler temperature falls below 5 °C (TKx < 5 °C)	the frost protection function for the boiler becomes <b>active</b>
	The actual value of the boiler temperature exceeds the minimum limitation of the boiler temperature (line 81) by more than one boiler switching differential (line 3 OEM), $(TKx > TKmin + SDK)$	the frost protection function will be <b>terminated</b>

If the frost protection function for the boiler is activated, the burner will be switched on and the boiler water heated up until the frost protection function is terminated.

NoteThe frost protection setpoint for the boiler is factory-set at 5 °C and cannot be changed<br/>Protective boiler start-up remains activated within its functionality<br/>The minimum burner running time (line 4 OEM) is taken into consideration

#### 4.11.2 For the d.h.w.

Process	<i>If</i>	then	
	the actual value of the d.h.w. temperature falls below 5	the frost protection	
	°C	function for the d.h.w.	
	(TBWx < 5 °C)	becomes active	
	the actual value of the d.h.w. temperature exceeds 5 °C by more than one d.h.w. switching differential (line 51 OEM)	the frost protection function for d.h.w. will be <b>terminated</b>	
	(TBWx > 5 °C + SDBW)		
Effect	If the frost protection function for d.h.w. is activated, first the boiler water is heated until the minimum limitation of the boiler temperature is reached (TKmin, setting on line 81), then, the d.h.w. is heated by means of the charging pump or the diverting valve.		
Note	<ul> <li>The frost protection setpoint for the d.h.w. is factory-set at 5 °C and cannot be changed</li> </ul>		
	<ul> <li>Protective boiler start-up remains activated within its fur</li> </ul>	nctionality	
	• The minimum burner running time (line 4 OEM) is taken	•	
	- Dump overrup will be estivated when d b w besting is t		

- Pump overrun will be activated when d.h.w. heating is terminated
- This function is not available when heating the d.h.w. with a control thermostat

Effect

## 4.11.3 For the heating circuit

Frost protection for the heating circuit is active with both types of application, pump heating circuit and mixing heating circuit. If the flow temperature of the heating circuit falls below 5 °C, a valid temperature demand of 10 °C will be generated. This causes the heating circuit pump to be activated and – in case of the mixing heating circuit – the mixing valve actuator to be driven to the required position.

If the flow temperature reaches the switch-off threshold of 7 °C, the temperature demand will be maintained for another 5 minutes. This ensures that the hot water will reach the entire heating circuit including the return.

## Application examples

#### Introduction


This chapter contains all types of plant that can be handled by the controller. These plant types use reference numbers some of which are not in a consecutive order. The missing plant types can be covered by other controllers from the ALBATROS range.

Notes

• The plant type no. is identical with the number displayed on setting line 53


## 5.1 Plant types

5

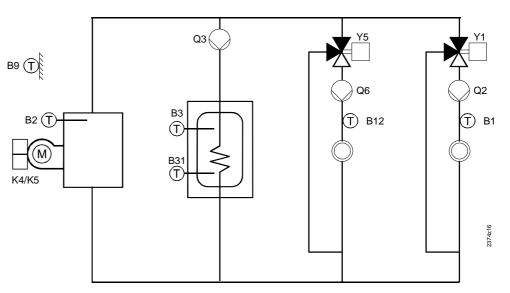

Heat source variant		Plant type	D.h.w.	PC	МС
No heat source	Multi-stage				
	burner or PPS-				
	BMU				
x	Billo	38	х	х	
х		12		х	
х		37	х		х
х		11			х
Х		122	х	2	
Х		123		2	
Х		124	х	х	х
Х		125		х	х
х		126	х		2
х		127			2
	х	21	х	х	х
	х	22 a.		х	х
	Х	23	х	2	
	х	24 a.		2	
	х	1	х	х	
	х	2 a.		Х	
	х	15	х		х
	х	16 a.			х
	х	25	х		2
	х	26 a.			2

## 5.1.1 D.h.w. heating with diverting valve Standalone

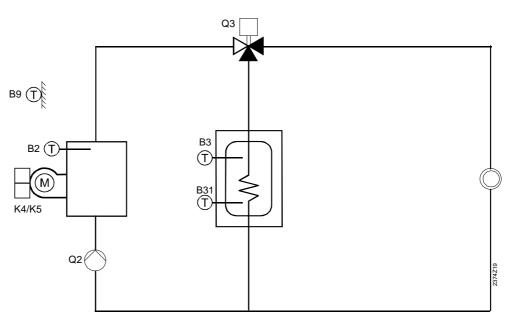

Plant type	D.h.w.	PC	МС
3	Х	Х	

• With the multi-stage heat source, Q2 becomes the boiler pump.

# 5.2 Supplementary information on the plant types listed


<sup>c)</sup> In the case of BMU applications (B1) with d.h.w. heating by the BMU, this plant type is also shown.

With this application, setting "D.h.w. priority" of the RVA63 is not active.

## 5.3 Legend to plant types


Low voltage side	A6	PPS (room unit 1, BMU)
	A7	Room unit bus HC2 (PPS)
	B1	Flow sensor mixing valve HC1
	B2	Boiler sensor
	B3	D.h.w. sensor 1 / control thermostat
	B31/H2	D.h.w. sensor 2 / contact H2
	B8	Flue gas sensor
	B9	Outside sensor
	B12	Flow sensor mixing valve HC2
	DB	Data bus (LPB)
	H1	Changeover contact
	MB	Ground bus (LPB)
	MD	Ground room unit bus (PPS)
	Μ	Ground sensors
Mains voltage side	F1	Phase Q3/Y3
	F2	Phase Y1 and Y2
	F3	Phases Y5 and Y6
	F4	Phase burner stage 1
	F5	Phase burner stage 2
	F6	Phases Q2 and Q6
	K4	Burner stage 1
	K5	Burner stage 2
	L	Live AC 230 V (mains connection)
	N	Neutral (mains connection)
	Q2	Circulating pump mixing heating circuit 1
	Q3/Y3	D.h.w. charging pump / d.h.w. diverting valve
	Q6	Circulating pump mixing heating circuit 2
	Y1	Mixing valve HC1 OPEN
	Y2	Mixing valve HC1 CLOSED
	Y5	Mixing valve HC2 OPEN
	Y6	Mixing valve HC2 CLOSED


## 5.4 Electrical connections

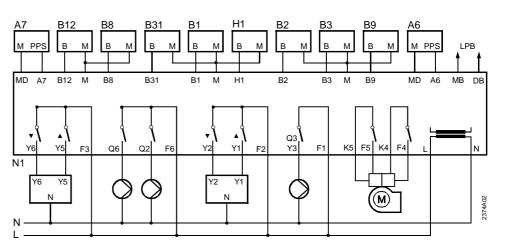

## 6 Dimensions



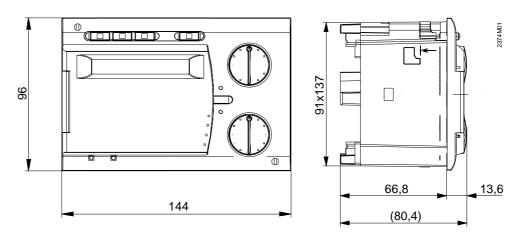

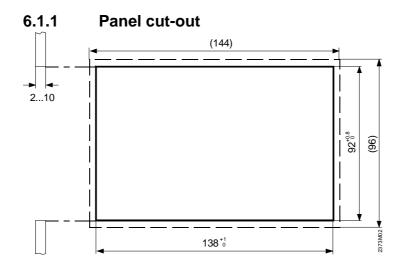

### 6.1.2 Combination of controllers

When arranging a number of controllers side by side, the total length of the panel cutout must be calculated as follows:

The sum of all nominal lengths minus the corrective dimensions for the intermediate space (e) gives the total length of the panel cut-out.

Example	Combination	e	Calculation	Panel cut-out
	96 plus 96	4	96+96-4	188 mm
	144 plus 96	5	96+144-5	235 mm
	144 plus 144	6	144+144-6	282 mm

## Technical data

7

Power supply	Nominal voltage	AC 230 V (±10 %)
	Nominal frequency	50 Hz (±6 %)
	Power consumption	max. 10 VA
Requirements	Safety class (if adequately mounted)	II to EN 60730
	Degree of protection (if adequately mounted)	IP 40 to EN 60529
	Electromagnetic immunity	EN 50082-2
	Electromagnetic emissions	EN 50081-1
Climatic conditions	Operation	
	To IEC 721-3-3	Class 3K5
	Temperature	00.50°C
	Storage	
	To IEC 721-3-1	Class 1K3
	Temperature	-250.70°C
	Transport	
	To IEC 721-3-2	Class 2K3
	Temperature	-250.70°C
Mechanical conditions:	Operation to IEC 721-3-3	Class 3M2
	Storage to IEC 721-3-1	Class 1M2
	Transport to IEC 721-3-2	Class 2M2
Mode of operation	To EN 60730 par. 11.4 11.4	1b
Output relays	Voltage range	AC 24230 V
	Nominal current	5 mA2 A (cos phi > 0.6)
	Switch-on peak	max. 10 A, max. 1 s
	Fuse	max. 10A
Bus extension	PPS	
	Cable (telephone wire)	2 x 0.5 mm <sup>2</sup> (interchangeable)
	Permissible cable length	50 m
	LPB	
	Cable	(2-wire, <b>not</b> interchangeable)
	Permissible cable length	max. 1.4 km
	Node spacing	500 m (with copper cable 1.5 mm <sup>2</sup> )
	Bus loading number (E)	3
Perm. sensor cable lengths	0.6 mm dia.	max. 20 m
5	1.0 mm <sup>2</sup>	max. 80 m
	1.5 mm <sup>2</sup>	max. 120 m
Inputs	Outside sensor	NTC (QAC31), Ni1000 (QAC21)
inputo	D.h.w. and boiler sensor	Ni 1000 $\Omega$ at 0 °C (QAZ21)
	Flow sensor	Ni 1000 $\Omega$ at 0 °C (QAD21)
	Remote telephone switch, auxiliary switches	suitable for low voltage
	(H1, H2), and d.h.w. control thermostat	(gold-plated contacts)
Miscellaneous	Weight of controller	approx. 0.6 kg
	Clock reserve	min. 12 h

## Index

### 2

2-position actuators	147
2-position controller	
boiler	131
3	
3-position actuators	147

3-position actuators	.1

#### Α

actual value 1 of d.h.w. temperature	71
actual value 2 of d.h.w. temperature	71
actual value of boiler temperature	
actual value of flow temperature	
actual value of outside temperature	
actual value of room temperature	
adaption	
adaption of heating curve	95
sensitivity 1	
sensitivity 2	
adaption sensitivity 1	
adaption sensitivity 2	
assignment of d.h.w. heating	
attenuated outside temperature	
automatic 24-hour heating limit	
with room influence	
without room influence	164
automatic adaption	95
automatic operation	137
automatic summer / winter changeover	
action	117

### В

boiler boost107	
boiler sensor70	)
boiler temperature setpoint74	1
boiler's operating mode137	7
Boost heating145	5
boost of flow temperature setpoint mixing valve142	2
boost of room temperature setpoint145	5
building's thermal dynamics94	1
burner	
1-stage80	
2-stage80	)
burner cycling protection133	3
burner hours run stage 159	9
burner hours run stage 260	)
burner stage 2	
release134	1
reset135	5
button lights	7
С	
central changeover116	3

central stand-by switch.....118

chimney sweep......42

clock mode	
clock setting	
combination of controllers	
common flow temperature setpoint	
communication via LPB	
composite outside temperature	
connection terminals	15
constant	
for optimum start control	
for quick setback	144
contact H1	127
continuous display	160
continuous operation	137
control mode of actuator	147
control of boiler pump	141
control of the burner	163
controlling element for d.h.w. heating	111
current room temperature setpoint	
D	
d.h.w temperature setpoint	
d.h.w. charging	
with diverting valve	
d.h.w. charging	
d.h.w. charging pump:	
d.h.w. control thermostat	
d.h.w. heating program	
d.h.w. priority	
d.h.w. push	
d.h.w. sensor	
d.h.w. sensor 2	
d.h.w. temperature control	155
with 2 sensors	156
device address	112
device operating hours	161
dimensions of cut-out	
discharge protection d.h.w	159
display	
common flow temperature setpoint	74
display "ER"	65
display boiler temperature setpoint	74
display d.h.w temperature setpoint	75
display of controller-bus power supply	115
display of flow temperature setpoint	
display of maximum flue gas temperature	71
display of nominal room temperature setpoint	
display of plant type	
display of PPS communication	
display of room temperature setpoint	
double function	
E	
effect of room unit	37

ER display ...... 65

#### 180/184

extended burner running time	137
extra heating for the bathroom	. 82

#### F

•	
Fault messages	65
flashing button lights	37
floor curing function	98
Flow temperature	56
flow temperature contact H	126
flow temperature setpoint78,	129
Flow temperature setpoint	123
flow temperature setpoints	163
flue gas condensation 130,	138
frost protection	
boiler	173
d.h.w	173
for the plant	146
room temperature	53
frost protection for d.h.w.	173
frost protection for the boiler	173
Frost protection for the building	53
frost protection for the heating circuit	174
frost protection for the plant	146
with weather compensation	146
frost protection setpoint of room temperature	53

#### G

gain factor14	43
generation of boiler temperature setpoint1	63

#### Н

heat demand	125
heat gains	150
heat generation lock	124, 129
heat sources	150
heating circuit pump	149
heating circuit selection button	41
heating curve	56
heavy building structures	94
holiday mode	103

#### I

indication of BMU error code	64
indication of faults	65
input B31/H2	128
input H1	122
input test	68
input test	19
installation	12

#### Κ

KON	
KORR	
L	
legionella function	

L	
legionella function	157
light building structures	94
locking signal gain	97

LPB device address	112
LPB power supply	114
LPB segment address	113

#### Μ

M
maintained boiler return temperature
manual operation43
master119
maximum limitation
boiler temperature130
flow temperature90
maximum limitation of boiler temperature
maximum limitation of flow temperature90
maximum nominal setpoint of d.h.w. temperature 154
maximum value of heat demand signal DC 010 V
minimum burner running time133
minimum limitation
boiler temperature81
flow temperature
minimum limitation of boiler temperature
OEM130
minimum limitation of flow temperature
mixing valve flow temperature setpoint boost142
mixing valve restriction
from d.h.w. priority109
mounting location12
mounting procedure12

#### Ν

nominal room temperature setpoint	39
nominal setpoint of d.h.w. temperature	51
number of burner starts stage 1	60
number of burner starts stage 2	61

#### 0

operating action of contact H1	127
operating hours of device	161
operating mode of d.h.w. heating	38
operating mode of room unit	86
operating mode of the boiler	137
operating modes	36
optimum start control	91
with room influence	92
without room influence	92
optimum stop control	93
orientation	14
output test1	7, 67
outside temperature source	73
overtemperature protection for the pump heating	
circuit	149
overtemperature protection mixing heating circuit	167
overview of pump operation	172

#### Ρ

parallel displacement	33
parallel displacement of heating curve	33

parameters

end-user22
heating engineer25
OEM
plant type69
PPS communication121
preselection of weekday for d.h.w. time switch
program49
preselection of weekday for time switch program 146
protection against boiler overtemperatures136
protection against discharging after d.h.w. heating.171
protection against discharging of d.h.w159
protection for the boiler138
protective boiler start-up138
pump kick
pump overrun time136

#### Q

#### quick setback

with no room sensor	144
quick setback constant	144
quick setback with room sensor	

#### R

range of action of central changeover116
reduced setpoint of d.h.w. temperature100
reduced setpoint of room temperature52
reduction of condensation
regulations for installation12
release burner stage 2134
remote telephone switch123, 125, 129
reset integral of burner stage 2
room influence
room temperature limitation85
room temperature setpoint77
room unit121
room unit values87
9

#### S

segment address	113
segment controller	112
with master function	112

sensor test	68
setpoint boost	145
setpoint of legionella function	158
slope 1 of heating curve	56
software version	160
standard time programs	62
standard values	62
Stand-by	137
summer / winter changeover temperature	
summer- / wintertime	120
summer operation	54
switching differential	
mixing valve actuator	
switching differential d.h.w	
switching differential of actuator	148
switching differential of d.h.w. temperature	155
switching differential of room temperature	
switching differential of the boiler	131
switching times of d.h.w. time switch progra	<b>am</b> 50
switching times of time switch program 1	
system stand-by	118
System time	119

#### т

temperature-time integral	140
d.h.w. priority	110
Test sequence	67
time of day	44
time switch program 1	46
time switch program 3	49
time switch program for d.h.w. heating	49
time synchronization	119
type of building construction	
type of burner	80
type of d.h.w. demand	105
W	
weekday	44
winter / aummartima	

weekday	44
winter- / summertime	
winter operation	54
wiring	15

## Korrigenda

§	Seite:	Lage:	Änderung:
1	xx		Aufgrund einer umfangreichen Überarbeitung sind etliche neue Funktionen eingefügt sowie viele bestehende angepasst worden. Eine detaillierte Aufführung der Änderungen ist daher nicht möglich.

Siemens Building Technologies AG Landis & Staefa Division Gubelstrasse 22 CH 6301 Zug Tel. 41 41-724 24 24 Fax 41 41-724 35 22 www.landisstaefa.com

#### 184/184

Siemens Building Technologies Landis & Staefa Division Basisdokumentation RVA63.280, RVA53.280 Korrigenda © 1999 Siemens Building Technologies AG Änderungen vorbehalten